

1-1-76

TUBE TEST DATA

**Models
640, 660**

FOR USE WITH
ROLL CHART TRC H2B

COLETRONICS  **SERVICE INC.**

1744 ROCKAWAY AVE. • HEWLETT, L.I., N.Y. 11557

KEY AT COLUMN REFERS TO POSITIONING OF COMPACTRONS ON G-140, A-15 AND B-16 ADAPTERS.

1

TUBE	KEY AT	SECT	A	B	C	D	CATH	CONT	TEST
1AU2			4	2	32	4	-	19	19
1AY2			1	2	20	4	-	-	0
"		Insert leads into pins 1&6 of 9 pin socket							
1BC2			258	2	25	4	-	169	0
1BG2			1	2	17	4	-	-	0
"		Insert bottom leads into pins 1&2 of 9 pin socket. Cap goes to top lead.							
1BK2			258	2	21	4	-	1469	0
1BQ2			258	2	26	4	-	1469	0
1BX2			258	2	24	4	-	1245689	0
1BY2	2		1	2	25	4	-	*	0
"		*Cont-2-4-5-6-7-8-No short test.							
"		Good tube reads above 30.							
1C2		amp	7	2	12	1	-	-	23456
"		osc	7	2	29	2	-	-	345
1D13		di	1	2	27	3	3	26	●26
"		●Ignore glow on 2. Throw lever #5 to open position.							
1DG3			35	2	47	4	-	3456	0
"		No short test.							
1DK1			1	1	38	4	-	-	0
"		Insert bottom leads into pins 1&2 of 9 pin socket. Cap goes to top lead.							
1DK29			1	2	17	4	-	-	0
"		Insert bottom leads into pins 1&2 of 9 pin socket. Cap goes to top lead.							
1H35			7	2	20	1	-	-	23456
1K3			2	2	35	4	-	7	0
"		OK above 20 on meter scale.							
"		May show short on 1-3-5-8.							
1RK23			258	2	20	4	-	1469	0
1RK41			258	2	21	4	-	1469	0
2AH2	2	CAUTION: Lever 5 must be thrown to open position.							
"			1	4	26	4	-	-	0
"		Grid cap goes to top of tube.							
"		May show short on 3-4-5-7-8-9.							
2AS2	5		4	4	27	4	-	17	0
"		Cap goes to top of tube.							
2AV2			4	3	29	4	-	1236789	9
"		Throw levers 1-2-3-6-7-8 to open position.							
2AZ2			5	3	20	4	-	1469	0
"		Levers 2-8 must be thrown to open position.							
2BA2			4	3	15	4	-	19	●19
"		●Ignore glow on 1.							

TUBE	KEY		A	B	C	D	CATH	CONT	TEST	
	AT	SECT								
2BJ2			CAUTION: Levers 2-8 must be thrown to open position before inserting tube and must remain in open position throughout all tests including short tests.							
"			5	3	44	3	1469	1469	0	
"			May show short on 3-7.							
2BU2	5		4	4	17	4	1467	1467	0	
"			Cap goes to top of tube.							
2C50			tri-1	7	13	24	2	3	-	12
"			tri-2	7	13	24	2	6	-	45
2CN3			2	2	17	4	-	35	0	
2DL4			4	3	21	2	2	13679	18	
"			Throw levers 3-6-7-9 to open position.							
2DS4			4	3	18	3	3	-	12	
2DV4			3	3	19	2	7	1246	●1246	
"			●Ignore glow on 1-4.							
2DZ4			3	4	24	2	5	-	1267	
"			Must show short on 1-2-6-7.							
2EG4			4	2	42	3	3	-	1	
2GU5			3	4	21	2	27	27	156	
2GW5			3	4	20	2	5	26	●126	
"			●Ignore glow on 2.							
2HA5			3	3	21	2	27	27	15	
"			Lever 2 must be thrown to open position.							
2HK5			3	3	21	2	27	27	15	
2HM5			3	4	22	2	27	27	15	
"			Lever 2 must be thrown to open position.							
2HQ5			3	3	20	2	27	27	15	
2HR8			4	4	23	2	3	27	169	
3AF3			4	8	18	3	0	29	●29	
"			●Ignore glow on 2.							
3AJ8			hep	5	5	24	2	3	-	1267
"			tri	5	5	27	2	-	-	89
3AT2	6		5	4	21	4	-	28	0	
"			Lever 1 must be thrown to open position.							
"			Cap goes to top of tube.							
3AW2	5		4	5	15	4	-	17	0	
"			Cap goes to top of tube.							
3AW3			2	5	48	3	-	378	0	
3BH2*			248	4	20	4	-	14589	0	
"			*Must use magnoval adapter - Cap goes to top of tube.							
3BL2	5		4	5	16	4	-	167	0	
"			Cap goes to top of tube.							
3BM2	5		4	5	12	4	-	167	0	
"			Cap goes to top of tube.							
3BN2	6		5	4	21	4	-	28	0	
"			Lever 1 must be thrown to open position.							
"			Cap goes to top of tube.							
3BS2	5		4	5	15	4	-	17	0	
"			Cap goes to top of tube.							

TUBE	KEY		A	B	C	D	CATH	CONT	TEST
	AT	SECT							
3BT2	5		4	5	17	4	1467	1467	0
"		Cap goes to top of tube.							
3BW2	5		4	5	17	4	1467	1467	0
"		Cap goes to top of tube.							
3CA3			2	5	26	4	-	-	0
3CN3			2	5	17	4	-	35	0
3CU3			2	5	14	4	-	8	0
3CV3A			2	5	23	4	-	1357	0
3CX3			35	5	17	4	-	34568	0
3CY3			2	5	20	4	12357	12357	0
3CZ3			2	5	48	3	-	78	0
3DA3			35	5	17	4	-	34568	0
3DB3			2	5	27	4	17	12357	0
3DC3			2	5	13	4	-	12357	0
3DF3			35	5	20	4	-	23468	0
"		No short test.							
3DH3			3	5	21	4	-	34568	0
"		No short test.							
3DJ3			2	5	27	4	-	12357	0
3DR3			35	5	18	4	-	23568	0
3DS3			35	5	18	4	-	268	0
"		No short test.							
3DZ4			3	5	24	2	5	-	1267
"		Must show short on 1-2-6-7.							
3DZ11			5	7	21	3	7	71	15
3GK6			4	5	23	2	1	39	●2379
"		●Ignore glow on 3.							
3GU5			3	5	21	2	27	27	156
3GW5			3	5	20	2	5	26	●126
"		●Ignore glow on 2.							
3HA5			3	4	21	2	27	27	15
"		Lever 2 must be thrown to open position.							
3HE7	0	di	1	5	16	3	4	-	2
"		*CAUTION: Lever 5 must be thrown to open position before inserting tube.							
"	8	pen*	7	5	16	2	3	-	46
3HF5	4		3	5	23	2	18	1278	2790
"		Must show short on 1-2-7-8.							
"		Grid cap goes to top of tube.							
3HK5			3	4	21	2	27	27	15
3HM5			3	4	22	2	27	27	15
"		Lever 2 must be thrown to open position.							
3HM6			4	5	20	2	13	13	278
3HQ5			3	5	20	2	27	27	15
3HS8		pen-1	4	5	23	2	1	-	2789
"		pen-2	4	5	23	2	-	-	2367
3HT6			4	5	22	2	13	-	278
"		Lever 3 must be thrown to open position.							
3JC6			4	5	22	2	13	13	278
3JD6			4	5	22	2	13	13	278

TUBE	KEY AT	SECT	A	B	C	D	CATH	CONT	TEST
3KF8		pen-1	4	5	21	2	1	-	278
"		pen-2	4	5	21	2	-	-	237
3KT6			4	5	21	2	13	13	278
3MP26			3	4	22	2	2	-	156
3MR24			3	5	21	2	2	-	1567
3MV7			3	5	21	2	2	-	1567
4AB8		tri	4	6	25	2	3	-	12
"		pen	4	6	22	2	-	-	689
4AF4			3	6	23	2	5	1267	●1726
"		●Ignore glow on 1-2.							
4DL4			4	6	20	2	2	13679	●136798
"		●Ignore glow on 1-3-6-7.							
4ER5			3	5	20	2	17	17	25
4GJ7		tri	4	6	21	2	13	13	89
"		pen	4	6	20	2	-	-	267
4GK5			3	6	22	2	17	17	25
4GS7		tri	4	6	21	2	38	38	12
"		pen	4	6	19	2	-	-	679
4GW5			3	6	20	2	5	26	●126
"		●Ignore glow on 2.							
4GX6			3	6	23	2	2	-	1567
4GX7		tri	4	6	21	2	13	13	89
"		pen	4	6	20	2	-	-	267
4GZ5			3	6	22	2	1	25	●2567
"		●Ignore glow on 2.							
4HA5			3	6	21	2	27	27	15
"		Lever 2 must be thrown to open position.							
4HA7	3	tri-1	2	7	26	2	6	-	15
"	5	tri-2	4	7	26	2	9	-	12
4HC7	0	tri-1	1	6	26	2	4	-	79
"	6	tri-2	7	6	26	2	9	-	48
4HG8		tri	4	7	23	2	3	13	67
"		pen	4	7	22	2	1	-	289
4HK5			3	6	21	2	27	27	15
4HM5			3	6	22	2	27	27	15
"		Lever 2 must be thrown to open position.							
4HM6			4	6	20	2	13	13	278
4HQ5			3	6	20	2	27	27	15
4HR8			4	7	23	2	3	27	169
4HS8		pen-1	4	6	23	2	1	-	2789
"		pen-2	4	6	23	2	-	-	2367
4HT6			4	6	22	2	13	-	278
"		Lever 3 must be thrown to open position.							
4JC6			4	7	22	2	13	13	278
4JD6			4	7	22	2	13	13	278
4JH6			3	6	22	2	2	-	156
4JK6			3	5	21	2	2	-	156
4JL6			3	5	22	2	2	-	156
4JW8		tri	4	6	22	2	8	-	19
"		pen	4	6	21	2	7	-	236

TUBE	KEY		A	B	C	D	CATH	CONT	TEST
	AT	SECT							
4KE8		tri	4	6	24	2	8	-	19
"		pen	4	6	23	2	7	-	236
4KF8		pen-1	4	6	21	2	1	-	278
"		pen-2	4	6	21	2	-	-	237
4KN8		tri-1	4	6	20	2	8	-	67
"		tri-2	4	6	20	2	3	-	12
4KT6			4	6	21	2	13	13	278
4LJ8		tri	4	6	21	2	38	38	12
"		pen	4	6	20	2	-	-	679
4LU6			4	6	20	2	2	-	1567
4MK8		pen-1	4	6	22	2	1	-	237
"		pen-2	4	6	22	2	-	-	278
4MP12			3	7	22	2	2	-	156
4MP26			3	6	22	2	2	-	156
4RHH2		tri	4	6	23	2	8	-	67
"		tri	4	6	23	2	3	-	12
4RHH8		tri-1	4	6	20	2	8	-	67
"		tri-2	4	6	20	2	3	-	12
4RHH15		tri-2	4	6	22	2	3	-	12
"		tri-1	4	6	22	2	8	-	67
5AF4			3	7	23	2	5	1267	●1726
"		●Ignore glow on 1-2.							
5AF11	7	pen	6	7	19	3	3	-	459
"	2	di-1	1	7	19	3	9	-	56
"	0	di-2	1	7	19	3	5	-	68
5AQ4		plate-1	2	8	6	1	-	-	4
"		plate-2	2	8	6	1	-	-	6
5BC3		di-1	1	8	12	1	-	-	89
"		CAUTION: Lever 2 must be thrown to open position.							
"		di-2	1	8	10	1	-	-	56
"		CAUTION: Lever 2 must be thrown to open position. Must show short on 5-6-8-9-Fil							
"		Cont - 1-2-3.							
5CR8		tri	4	7	22	2	8	-	19
"		pen	4	7	21	2	3	-	267
5DG4		pl-1	1	8	25	2	-	-	7
"		pl-2	1	8	25	2	-	-	5
5DJ4		pl-1	1-2	8	9	2	-	3456	34
"		pl-2	1-2	8	9	2	-	-	56
5EW6			3	8	20	2	2	-	156
5GJ7		tri	4	9	21	2	13	13	89
"		pen	4	9	20	2	-	-	267
5GS7		tri	4	8	21	2	38	38	12
"		pen	4	8	20	2	-	-	679
5GX6			3	7	23	2	2	-	1567
5GX7		tri	4	8	21	2	13	13	89
"		pen	4	8	20	2	-	-	267
5HA7	3		2	6	26	2	6	-	15
"	5		4	6	26	2	9	-	12

TUBE	KEY		A	B	C	D	CATH	CONT	TEST
	AT	SECT							
5HB7		tri	4	7	23	2	13	13	89
"		pen	4	7	24	2	13	13	267
"		Lever 1 must be thrown to open position.							
5HC7	0	tri-1	1	8	26	2	4	-	79
"	6	tri-2	7	8	26	2	9	-	48
5HG8		tri	4	8	23	2	3	13	67
"		pen	4	8	22	2	1	13	289
5HZ6			4	8	17	3	2	-	156
5JK6			3	8	21	2	2	-	156
5JL6			3	8	22	2	2	-	156
5JW8		tri	4	7	22	2	8	-	19
"		pen	4	7	21	2	7	-	236
5KD6		tri	4	8	22	2	8	-	19
"		pen	4	8	22	2	7	-	236
5KE8		tri	4	8	24	2	8	-	19
"		pen	4	8	23	2	7	-	236
5KZ8		tri	4	7	22	2	8	-	19
"		pen	4	7	22	2	3	-	267
5LJ8		tri	4	8	21	2	38	38	12
"		pen	4	8	20	2	-	-	679
5MB8		tri	4	8	20	2	3	-	12
"		pen	4	8	19	2	8	-	679
5MF8	8	pen	9	8	22	2	4	12	●1230
"		●Ignore glow on 1.							
"	5	tri	6	8	21	2	3	-	27
5MHH3		tri	3	7	23	2	7	-	25
"		tri	3	7	23	2	7	-	16
5MK9			3	7	11	1	-	4	5
5MQ8		pen	4	8	23	2	7	-	236
"		tri	4	8	24	2	8	-	19
5P29			2	8	3	1	8	-	450
5RDDH1		di-1	4	6	23	2	2	-	1
"		di-2	4	6	23	2	3	-	6
"		tri	4	6	25	2	9	-	78
5RHP1		tri	4	7	23	2	8	-	19
"		pen	4	7	22	2	7	-	236
5RHR1		tri	4	8	23	2	8	-	19
"		pen	4	8	21	2	-	-	236
5RK16		pl-1	4	7	27	2	-	-	1
"		pl-2	4	7	27	2	-	-	8
5U9		tri	5	9	22	2	1	-	90
"		pen	5	9	20	2	2	-	378
5V9		tri	5	8	20	2	9	-	80
"		hep	5	8	21	2	1	-	347
5X9		tri	5	9	22	2	1	-	90
"		pen	5	9	20	2	2	-	378
6AC9	0	di	1	9	16	3	3	3	2
"	7	pen	6	9	20	2	6	-	345

TUBE	KEY AT	SECT	A	B	C	D	CATH	CONT	TEST
6AC10	5	tri-1	4	9	21	2	9	-	12
"	0	tri-2	1	9	21	2	6	-	57
"	3	tri-3	4	9	21	2	6	-	15
6AD10	2	pen-1	1	9	20	2	4	-	589
"	6	pen-2	5	9	21	2	2	-	134
6AF9		pen-1	5	9	20	2	7	-	890
"		pen-2	5	9	20	2	2	-	134
"		May show short on 2.							
6AF11	0	tri-1	1	9	24	2	5	-	68
"		tri-2	1	9	25	2	7	-	34
"	5	pen	6	9	25	2	1	-	237
6AG9	0	tri	1	9	21	2	6	-	57
"	6	pen	5	9	21	2	2	-	348
6AG11	8	tri-1	9	9	22	2	4	-	23
"		di-1	9	9	24	2	6	-	5
"	2	tri-2	3	9	22	2	6	-	78
"		di-2	3	9	24	2	4	-	5
6AG12			8	9	20	1	5	27	2
6AH9	0	tri	1	9	23	2	4	56	23
"	7	pen	6	9	21	2	1	-	250
6AJ9		tri	5	9	23	2	1	-	90
"		pen	5	9	22	2	2	-	378
6AK9	8	pen	7	9	22	2	2	-	34
"		tri-1	7	9	24	2	2	-	56
"	0	tri-2	0	9	26	2	7	-	23
6AK10	0	tri-2	1	9	22	2	6	-	57
"	6	tri-3	5	9	22	2	9	-	48
"	8	tri-1	7	9	22	2	0	-	45
6AL9	2	tri	3	9	21	2	8	-	79
"	5	pen	4	9	22	2	1	-	2379
6AL11	2	pen-1	1	9	18	3	4	3	5689
"	6	pen-2	5	9	18	3	2	7	134
6AM5			3	9	25	2	2	-	157
6AN6		di-1	1	9	20	3	6	-	2
"		di-2	1	9	18	3	-	-	3
"		di-3	1	9	20	3	-	-	4
"		di-4	1	9	21	3	-	-	5
6AQ4			3	9	21	2	25	1256	●167
"		●Ignore glow on 1.							
6AQ8		tri-1	4	9	22	2	8	-	67
"		tri-2	4	9	22	2	3	-	12
6AR8		pen-1	4	9	24	2	7	-	369
"		pen-2	4	9	24	2	-	-	368
6AR11	2	pen-2	3	9	21	2	8	-	4567
"	8	pen-1	9	9	21	2	6	-	2345
6AS11	0	tri-1	1	9	23	2	5	-	68
"		tri-2	1	9	24	2	7	-	34
"	5	pen	6	9	22	2	1	-	237

TUBE	KEY		A	B	C	D	CATH	CONT	TEST
	AT	SECT							
6AV11	5	tri-1	6	9	26	2	9	-	12
"		tri-3	6	9	26	2	8	-	37
"	2	tri-2	3	9	26	2	8	-	79
6AX3	5		6	9	24	2	0	29	●29
"		●Ignore glow on 2.							
6AY3			4	9	24	2	9	27	●27
"		●Ignore glow on 2.							
6AY11	0	di-2	1	9	25	2	2	-	3
"		tri-1	1	9	26	2	9	-	78
"		tri-2	1	9	25	2	4	-	56
"	4	di-1	3	9	25	2	2	-	1
6B10	0	tri-1	1	9	25	2	7	-	56
"		tri-2	1	9	25	2	2	-	34
"	6	di-1	7	9	18	3	2	-	3
"		di-2	7	9	18	3	-	-	1
6B32		di-1	3	9	17	3	1	-	7
"		di-2	3	9	17	3	5	-	2
6BA3			4	9	4	1	9	27	2
"		May show short on 2-7.							
6BA11	4	pen-1	3	9	24	2	0	-	678
"	0	pen-2	1	9	24	2	8	-	346
"	8	tri	7	9	26	2	5	-	46
6BE14*			4	9	20	2	38	123678	●12670
"		●Ignore glow on 1-6 - Cap goes to top of tube.							
"		*Must use magnoval adapter.							
6BC5			3	9	23	2	27	27	156
"		Must show short on 2-7.							
"		Cathode short test-throw 2-7 together.							
6BD11	0	tri-1	1	9	24	2	5	-	68
"		tri-2	1	9	25	2	7	-	34
"	5	pen	4	9	25	2	1	-	237
6BE3	2		1	9	23	2	9	60	60
"		Must show short on 6-0.							
6BE7			4	9	23	2	38	38	167
6BF8		di-1	4	9	25	2	6	-	9
"		di-2	4	9	25	2	-	-	8
"		di-3	4	9	25	2	-	-	7
"		di-4	4	9	25	2	-	-	3
"		di-5	4	9	25	2	-	-	2
"		di-6	4	9	25	2	-	-	1
6BF11	0	pen-1	1	9	28	2	2	-	3567
"	8	pen-2	7	9	23	2	4	-	356
6BH11	0	tri-1	1	9	20	2	2	-	34
"		tri-2	1	9	20	2	5	-	67
"	7	pen	6	9	20	2	5	-	234
6BJ3	0		1	9	24	2	7	-	4
6BK4			2	9	22	3	13468	13468	50
6BK8			4	9	26	2	3	27	169

TUBE	KEY AT	SECT	A	B	C	D	CATH	CONT	TEST
6BK11	5	tri-1	6	9	24	2	9	-	12
"		tri-3	6	9	24	2	8	-	37
"	2	tri-2	3	9	24	2	8	-	79
6BN11	7	pen-1	6	9	20	2	2	-	135
"	2	pen-2	1	9	20	2	4	-	567
6BR3			4	9	18	3	0	29	●29
"		●Ignore glow on 2.							
6BR7		tri	9	5	23	2	3	45	12
"		di-1	9	5	18	3	8	-	7
"		di-2	9	5	18	3	-	-	6
6BS3			4	9	16	3	9	27	●27
"		●Ignore glow on 2.							
6BT6		tri	3	9	24	2	2	-	17
"		di-1	3	9	26	3	-	-	5
"		di-2	3	9	26	3	-	-	6
6BV11	7	pen-1	6	9	21	2	2	-	134
"	2	pen-2	1	9	21	2	7	-	568
6BW3	0		1	9	17	3	7	-	4
6BW6			4	9	24	2	3	12	1278
6BW11	7	pen-1	6	9	21	2	4	-	235
"	2	pen-2	1	9	20	2	4	-	567
6BY8		pen	4	9	5	1	9	-	178
"		di	4	9	17	3	3	-	6
6BY11	0	pen-1	1	9	21	2	2	-	3567
"	8	pen-2	7	9	21	2	4	-	356
6BZ3	0		1	9	16	3	7	-	4
6C9		tet-1	4	9	24	2	6	-	789
"		tet-2	4	9	24	2	0	-	123
6C16		tri	4	9	23	2	8	-	19
"		pen	4	9	22	2	7	-	236
6C18		tri	4	9	21	2	68	68	19
"		pen	4	9	19	2	-	-	237
"		Cathode short test throw 6-8 together.							
6CA11	0	tri-1	1	9	24	2	7	-	23
"		tri-2	1	9	21	2	5	-	46
"	8	pen	7	9	21	2	4	-	356
6CC31		tri-1	3	9	24	2	7	-	25
"		tri-2	3	9	24	2	-	-	16
6CC42		tri-1	1	9	24	2	8	-	67
"		tri-2	1	9	24	2	2	-	34
6CC43		tri-1	5	9	22	2	8	-	6-7
"		tri-2	5	9	22	2	3	-	1-2
6CD3	0		1	9	20	2	7	-	4
6CE3	0		1	9	20	2	7	-	4
6CF8			4	9	26	2	3	27	169
6CG3	0		1	9	16	3	7	-	4
6CG8		tri	4	9	24	2	38	38	12
"		pen	4	9	23	2	-	-	679
6CH3			4	9	20	2	9	27	●27
"		●Ignore glow on 2.							
6CJ3			4	9	20	2	9	27	2
"		Lever 7 must be thrown to open position.							

TUBE	KEY		A	B	C	D	CATH	CONT	TEST
	AT	SECT							
6CJ6			4	9	20	2	3	16789	●2780
"		●Ignore glow on 7.							
6CK3			4	9	20	2	9	27	●27
"		●Ignore glow on 2.							
6CK6			4	9	22	2	3	-	127
6CL3			4	9	20	2	9	27	●27
"		●Ignore glow on 2.							
6CM3			4	9	22	2	9	27	●27
"		●Ignore glow on 2.							
6CM4			4	9	20	2	37	*	●12689
"		*Must show short on 1-2-3-6-7-8-9.							
"		●Ignore glow on 1-2-6-8.							
6CM5			2	9	23	2	38	1348	459
"		May show short on 1-3-4-8.							
"		Cathode short test-throw 3-8 together.							
6CR8		tri	4	9	22	2	8	-	19
"		pen	4	9	21	2	3	-	267
6CT3			4	9	23	2	9	26	●26
"		●Ignore glow on 2.							
6DE7		tri-1	4	9	9	1	8	23	67
"		tri-2	4	9	3	1	9	-	●123
"		●Ignore glow on 2.							
6D1			3	9	24	2	7	15	●156
"		●Ignore glow on 1.							
6DK3			4	9	23	2	0	27	●27
"		●Ignore glow on 2-7.							
6DL3			4	9	21	2	0	27	27
6DL4			4	9	21	2	2	13679	18
"		Lever 3-6-7-9 must be thrown to open position.							
6DM4			7	9	24	2	3	-	5
6DN3			5	9	20	2	9	27	27
6DQ4			7	9	18	3	3	-	5
6DR4			3	9	24	2	7	15	●156
"		●Ignore glow on 1.							
0 6DQ3			1	9	16	3	7	-	4
6DR7		tri-1	4	9	28	2	8	23	67
"		tri-2	4	9	23	2	9	-	●123
"		●Ignore glow on 2.							
6DS4			4	9	18	3	3	-	12
6DS5			3	9	25	2	2	17	●1756
"		●Ignore glow on 1.							
0 6DT3			1	9	16	3	7	-	4
6DT4			7	9	4	1	3	15	5
"		Lever 1 must be thrown to open position.							
0 6DU3			1	9	16	3	7	-	4
6DV4			3	9	19	2	7	1246	●1246
"		●Ignore glow on 1-4.							

TUBE	KEY AT	SECT	A	B	C	D	CATH	CONT	TEST
6DW4			4	9	4	1	9	27	2
"		Lever 7 must be thrown to open position.							
6DY5			2	9	24	2	3	-	279
6DZ4			3	9	24	2	5	-	1267
"		Must show short on 1-2-6-7.							
6DZ8		tri	4	9	28	2	8	-	19
"		pen	4	9	23	2	2	-	367
6E8		tot	2	9	9	1	8	-	34560
"		tri	2	9	11	1	-	-	56
6EA4	2		1	9	26	3	47	47	80
"		Grid cap goes to top of tube.							
6EC4*			4	9	20	2	0	278	●278
"		●Ignore glow on 2-7-Cap goes to top of tube.							
"		*Must use magnoval adapter.							
6ED4*			4	9	32	2	1	123679	80
"		*Must use magnoval adapter.							
"		Cap goes to top of tube.							
6EF4	3		2	9	34	2	8	-	90
"		Cap goes to top of tube.							
6EH4	2		1	9	26	3	47	47	80
"		Cap goes to top of tube.							
6EJ4	3		2	9	35	2	8	15	90
"		Cap goes to top of tube.							
6EL4			2	9	22	3	13468	13468	50
6EN4			2	9	22	3	1348	12345678	560
"		Cathode short test-throw 1-3-4-8 together.							
"		Throw 3-4-8 to open position.							
"		Grid short test-throw 5-6 together.							
6EX6			2	9	22	2	3	-	580
6F19			4	9	22	2	13	13	278
6F21			3	9	6	1	2	-	1567
6F22			4	9	26	2	3	27	169
6F26			4	9	22	2	13	13	278
6F29			4	9	22	2	13	13	2789
6F30			4	9	21	2	13	13	2789
6F33			3	9	4	1	2	-	1567
6F35			3	9	5	1	27	27	159
6FD6			3	9	23	2	7	-	1256
6FD10			3	10	23	2	7	-	1256
6FG6		tri	5	9	21	3	3	268	10
"		eye	5	9	0	4	-	-	●7268
"		●Ignore glow on 2-6. See instructions for eye test.							
6FM7	7	tri-1	6	9	19	3	3	-	45
"	2	tri-2	1	9	18	3	9	-	57
6FQ7		tri-1	4	9	7	1	8	-	67
"		tri-2	4	9	7	1	3	-	12
6FR7		tri-1	4	9	7	1	8	23	67
"		tri-2	4	9	20	2	9	-	●123
"		●Ignore glow on 2.							

TUBE	KEY		A	B	C	D	CATH	CONT	TEST
	AT	SECT							
6FY7	5	tri-1	4	9	8	1	1	-	23
"	2	tri-2	1	9	22	2	9	-	57
6G11	6	pen-1	7	9	23	2	2	-	134
"	2	pen-2	1	9	25	2	4	-	5689
6GA7	4	di	3	9	24	2	0	-	2
"		Must show short on 6-7.							
"	0	pen	1	9	35	2	5	10	237
"		Must show short on 2-3.							
6GB3			2	9	18	3	8	-	450
6GB5*			4	9	22	2	38	123678	160
"		Levers 2-7 must be thrown to open position.							
"		Grid cap goes to top of tube.							
"		*Must use magnoval adapter.							
6GB6			2	9	18	3	8	-	450
6GB7			2	9	4	1	8	-	450
6GB9			2	9	4	1	8	-	450
6GD7		tri	4	9	20	2	38	38	12
"		pen	4	9	20	2	-	-	679
6GE5	5		6	9	23	2	29	2389	●7380
"		●Ignore glow on 3.							
6GF5	5		6	9	23	2	29	2389	●7380
"		●Ignore glow on 3.							
6GF7		tri-1	4	9	29	2	1	-	89
"		tri-2	4	9	23	2	3	-	26
6GJ5			4	9	24	2	3	1267	670
"		Levers 1-2 must be thrown to open position.							
6GJ7		tri	4	9	21	2	13	13	89
"		pen	4	9	20	2	-	-	267
6GK6			4	9	23	2	1	39	278
6GK17			7	9	22	2	3	-	5
6GL7		tri-1	7	9	26	2	6	-	45
"		tri-2	7	9	22	2	3	-	12
6GM5			4	9	25	2	7	-	169
6GM8		tri-1	4	9	23	2	8	-	67
"		tri-2	4	9	23	2	3	-	12
6GN8		tri	4	9	24	2	1	-	23
"		pen	4	9	22	2	6	-	789
6GQ7		di-1	4	9	17	3	9	-	8
"		di-2	4	9	17	3	7	-	6
"		di-3	4	9	17	3	1	-	2
6GS7		tri	4	9	21	2	38	38	12
"		pen	4	9	19	2	-	-	679
6GT5			4	9	23	2	3	1267	●12679
"		●Ignore glow on 1-2.							
6GU5			3	9	21	2	27	27	156
"		Must show short on 2-7.							
6GU7		tri-1	4	9	24	2	8	5	67
"		tri-2	4	9	24	2	3	-	12

TUBE	KEY		A	B	C	D	CATH	CONT	TEST
	AT	SECT							
6GV5	4		3	9	24	2	18	1278	2790
"			Must show short on 1-2-7-8.						
"			Grid cap goes to top of tube.						
"			Cathode short test-throw 1-8 together.						
6GV7		tri	4	9	21	2	68	68	19
"		pen	4	9	19	2	-	-	237
"			Cathode short test-throw 6-8 together.						
6GV8		tri	4	9	24	2	3	-	12
"		pen	4	9	22	2	8	-	679
6GW5			3	9	20	2	5	26	●126
"			●Ignore glow on 2.						
6GW6			2	9	18	3	8	-	450
6GW8		tri	4	9	26	2	2	-	19
"		pen	4	9	23	2	7	-	368
6GX6			3	9	23	2	2	-	1567
6GX7		tri	4	9	21	2	13	13	89
"		pen	4	9	20	2	-	-	267
6GX8		tri	4	9	21	2	9	-	18
"		eye	4	9	0	4	3	-	67
"			See instructions for eye test.						
6GY5	4		3	9	22	2	18	1278	2790
"			Must show short on 1-2-7-8.						
"			Cathode short test-throw 1-8 together.						
6GY6			3	9	21	2	2	-	1567
6GY8		tri-1	4	9	28	2	7	-	6
"		tri-2	4	9	22	2	8	-	39
"		tri-3	4	9	27	2	-	-	12
6GZ5			3	9	21	2	1	25	●2567
"			●Ignore glow on 2.						
6HA5			3	9	21	2	27	27	15
"			Lever 2 must be thrown to open position.						
6HA6			4	9	22	2	1	3689	●2687
"			●Ignore glow on 6.						
6HB5	0		1	9	22	2	4	-	237
6HB6			4	9	22	2	1	3689	●396827
"			●Ignore glow on 3-6.						
6HB7		tri	4	9	23	2	13	13	89
"		pen	4	9	24	2	13	13	267
"			Lever 1 must be thrown to open position.						
6HC8		tri	4	9	18	3	8	-	19
"		pen	4	9	18	3	2	-	367
6HD5	0		1	9	20	2	4	59	357
"			Lever 9 must be thrown to open position.						
6HD7		tri	4	9	21	2	13	13	89
"		pen	4	9	22	2	-	-	267
6HE5	2		1	9	19	3	6	0	4580
"			Must show short on 5-0.						

TUBE	KEY AT	SECT	A	B	C	D	CATH	CONT	TEST
6HE7	0	di	1	9	16	3	4	-	2
"		*CAUTION: Lever 5 must be thrown to open position before inserting tube.							
"	8	pen*	7	9	16	2	3	-	46
6HF5	4		3	9	23	2	18	1278	2790
"		Must show short on 1-2-7-8. Grid cap goes to top of tube. Cathode short test-throw 1-8 together.							
6HF8		tri	4	9	24	2	1	-	23
"		pen	4	9	22	2	6	-	789
6HG5			3	9	7	1	2	17	●1756
"		●Ignore glow on 1.							
6HJ5	0		1	9	20	2	4	59	●3579
"		●Ignore glow on 5-7.							
6HJ7		tri	4	9	19	2	13	13	89
"		pen	4	9	20	2	-	-	267
6HJ8		pen	4	9	23	2	1	-	2369
"		di	4	9	24	2	7	-	8
6HK5			3	9	21	2	27	27	15
6HL5			4	9	21	2	3	12	●1279
"		●Ignore glow on 1.							
6HL7			6	9	20	2	1	3459	●39278
"		●Ignore glow on 3.							
6HL8		tri	4	9	22	2	8	-	19
"		pen	4	9	21	2	7	-	236
6HM5			3	9	22	2	27	27	15
"		Lever 2 must be thrown to open position.							
6HM6			4	9	20	2	13	13	278
6HQ5			3	9	20	2	27	27	15
6HR5			3	9	7	1	2	17	●1756
"		●Ignore glow on 1.							
6HR6			3	9	21	2	7	-	156
6HS5	0		1	9	20	2	4	-	27
6HS6			3	9	22	2	7	-	1256
6HT6			4	9	22	2	13	-	278
"		Lever 3 must be thrown to open position.							
6HU6		tri	4	9	29	2	3	268	19
"		eye	4	9	0	4	-	-	67
"		Levers 2-8 must be thrown to open position. See instructions for eye test.							
6HU8		pen-1	4	9	22	2	7	-	123
"		pen-2	4	9	22	2	-	-	689
6HV5	0		1	9	20	2	4	-	27
6HW8			4	9	24	2	7	-	123689
6HZ5	0		1	6	21	2	4	-	27
6HZ6			4	9	17	3	2	-	156
6J9		tri-1	4	9	20	2	0	-	78
"		tri-2	4	9	20	2	-	-	69
"		tri-3	4	9	20	2	3	-	12

TUBE	KEY AT	SECT	A	B	C	D	CATH	CONT	TEST
6J10	0	pen-1	0	9	26	4	8	1	4567
"	6	pen-2	5	9	18	3	9	7	248
6J11	2	pen-2	3	9	22	2	8	-	4567
"	8	pen-1	9	9	22	2	3	-	2456
6JA5	2		1	9	21	2	6	0	4580
		Must show short on 5-0.							
6JA8		tri	4	9	24	2	1	-	23
"		tet	4	9	24	2	6	-	789
6JB5	2		1	9	19	3	6	0	4580
"		Must show short on 5-0.							
6JB6			4	9	18	3	3	1267	670
"		Levers 1-2 must be thrown to open position.							
6JC5	2		1	9	18	3	6	0	4580
"		Must show short on 5-0.							
6JC6			4	9	22	2	13	13	278
6JC8		tri	4	9	18	3	17	7	89
"		pen	4	9	18	3	-	-	236
"		Cathode short test-throw 1-7 together.							
6JD5	0		1	6	21	2	4	-	27
6JD6			4	9	22	2	13	13	278
6JE6			4	9	23	2	3	1267	●126780
"		●Ignore glow on 1-2-Grid cap goes to top of tube.							
"			4	9	20	2	3	1267	●12670
6JF6		●Ignore glow on 1-2-6-Grid cap goes to top of tube.							
"			4	9	21	2	6	-	789
6JG5			4	9	17	3	3	17	279
6JG6		Lever 1 must be thrown to open position.							
6JH5	0		1	9	20	2	4	78	2378
6JH6			3	9	22	2	2	-	1567
6JH8		sec-1	4	9	24	2	7	5	369
"		sec-2	4	9	24	2	-	-	368
6JK5	0		1	9	20	2	4	78	2378
6JK6			3	9	21	2	2	-	156
6JK8		tri-1	4	9	18	3	8	-	67
"		tri-2	4	9	18	3	3	-	12
6JL6			3	9	22	2	2	-	156
6JM6	3		2	9	21	2	5	-	680
"		Grid cap goes to top of tube.							
6JN6	5		6	9	21	2	7	29	380
6JN8		tri	4	9	22	2	3	-	12
"		pen	4	9	23	2	8	-	679
6JQ6		pen	4	9	22	2	9	78	●12378
"		di	4	9	32	2	-	-	6
"		●Ignore glow on 7 - May show short on 2.							
6JR6			4	9	28	3	3	17	279
"		Lever 1 must be thrown to open position.							
6JS6	3		4	9	20	2	5	16	●1680
"		●Ignore glow on 1 - Cap goes to top of tube.							

TUBE	KEY		A	B	C	D	CATH	CONT	TEST
	AT	SECT							
6JT6			4	9	23	2	3	17	279
"		Lever 1 must be thrown to open position.							
6JT8		tri	4	9	23	2	1	-	23
"		pen	4	9	21	2	6	-	789
6JU6			4	9	20	2	3	1267	●12670
"		●Ignore glow on 1-2-6. Grid cap goes to top of tube.							
6JU8		di-1	4	9	24	2	9	*	78
"		di-2	4	9	24	2	98	-	7
"		di-3	4	9	24	2	3	-	12
"		di-4	4	9	24	2	32	-	1
"		*Must show short on 2-8.							
6JV8		tri	4	9	18	3	1	-	23
"		pen	4	9	17	3	-	-	789
6JW8		tri	4	9	22	2	8	-	19
"		pen	4	9	21	2	7	-	236
6JX8		tri	4	9	23	2	3	-	89
"		hep	4	9	21	2	-	-	267
6JY8		tri	4	9	23	2	1	-	23
"		pen	4	9	24	2	6	-	789
6JZ6	3		2	9	20	2	5	-	780
"		Grid cap goes to top of tube.							
6JZ8	8	pen	9	9	23	2	4	12	●1230
"		●Ignore glow on 1.							
"	5	tri	6	9	26	2	3	-	27
6KA8		tri	4	9	24	2	3	-	12
"		pen	4	9	22	2	3	-	6789
6KD6	4		3	9	20	2	6	1278	●2790
"		●Ignore glow on 2. Cap goes to top of tube.							
6KD8		tri	4	9	22	2	8	-	19
"		pen	4	9	22	2	7	-	236
6KE8		tri	4	9	24	2	8	-	19
"		pen	4	9	23	2	7	-	236
6KF8		pen-1	4	9	21	2	1	-	278
"		pen-2	4	9	21	2	-	-	237
6KG6*			4	9	20	2	9	123678	680
"		*Must use magnoval adapter.							
"		Grid cap goes to top of tube.							
"		Levers 1-3 must be thrown to open position.							
6KH8			4	9	23	2	7	-	1-2
"			4	9	23	2	-	-	2-3-9
"			4	9	23	2	-	-	6-8-9
6KL8		pen	4	9	24	2	3	-	1267
"		di	4	9	28	3	-	-	8
6KM6			4	9	21	2	3	1267	670
"		Levers 1-2 must be thrown to open position.							
"		Grid cap goes to top of tube.							
6KM8		di	4	9	27	3	6	-	3
"		tet-1	4	9	5	1	-	-	178
"		tet-2	4	9	6	1	-	-	278
"		tet-3	4	9	5	1	-	-	789

TUBE	KEY AT	SECT	A	B	C	D	CATH	CONT	TEST
6KN6	6		5	9	20	2	8	4-9	●2490
"		●Ignore glow on 4. Cap goes to top of tube.							
6KN8		tri-1	4	9	20	2	8	-	67
"		tri-2	4	9	20	2	3	-	12
6KR8		tri	4	9	20	2	1	-	23
"		pen	4	9	20	2	6	-	789
6KS6			3	9	41	3	1	-	2567
6KS8		tri	4	9	25	2	1	-	23
"		pen	4	9	23	2	6	-	789
6KT6			4	9	21	2	13	13	278
6KT8		tri	4	9	21	2	1	-	23
"		pen	4	9	20	2	6	-	789
6KU8		di-1	4	9	25	3	1	-	3
"		di-2	4	9	25	3	1	-	2
"		pen	4	9	22	2	6	-	789
6KV6			4	9	20	2	3	17	279
"		Lever 1 must be thrown to open position.							
6KV8		tri	4	9	23	2	1	-	23
"		pen	4	9	21	2	6	-	789
6KX8		tri-1	4	9	24	2	8	-	79
"		tri-2	4	9	24	2	2	-	13
6KY6			4	9	20	2	1	39	278
6KY8		tri	4	9	25	2	1	-	89
"		pen	4	9	21	2	3	-	267
6KZ8		tri	4	9	22	2	8	-	19
"		pen	4	9	22	2	3	-	267
6LB6	4		3	9	21	2	6	1278	●2790
"		●Ignore glow on 2. Cap goes to top of tube.							
6LB8		tri	4	9	29	2	1	-	23
"		pen	4	9	22	2	6	-	789
6LC6			2	9	35	2	6	134	50
6LC8		tri	4	9	24	2	3	5	12
"		pen	4	9	22	2	7	5	689
"		May show short on 3-7.							
6LD6			4	9	20	2	1	3689	●2687
"		●Ignore glow on 6.							
6LE8		pen-1	4	9	22	2	3	-	189
"		pen-2	4	9	22	2	-	-	689
6LF6	4		3	9	21	2	6	1278	●2790
"		●Ignore glow on 2. Cap goes to top of tube.							
6LF8		tri	4	9	24	2	1	-	23
"		pen	4	9	21	2	6	-	789
6LG6	4		3	9	22	2	18	1278	790
6LH6			2	9	32	2	6	134	50
6LJ6			2	9	36	2	6	134	50
6LJ8		tri	4	9	21	2	38	38	12
"		pen	4	9	20	2	-	-	679
6LM8		tri	4	9	23	2	8	-	19
"		pen	4	9	23	2	7	-	236

TUBE	KEY		A	B	C	D	CATH	CONT	TEST
	AT	SECT							
6LN8		tri	4	9	23	2	8	-	19
"		pen	4	9	22	2	7	-	236
6LQ6			4	9	23	2	3	1267	●126780
		●Ignore glow on 1-2. Cap goes to top of tube.							
6LQ8		tri	4	9	20	2	1	-	23
"		pen	4	9	20	2	6	-	789
6LR6	3		4	9	22	2	5	16	●1680
		●Ignore glow on 1. Cap goes to top of tube.							
6LR8		tri	4	9	21	2	1	-	89
"		pen	4	9	20	2	3	-	267
6LT8		di-1	4	9	16	3	7	-	8
"		di-2	4	9	16	3	7	-	6
"		pen	4	9	19	2	1	-	239
"		May show short on 1.							
6LU6			4	9	20	2	2	-	1567
6LU8	5	tri	6	9	21	2	3	-	27
"	8	pen	9	9	21	2	4	12	●1230
"		●Ignore glow on 1.							
6LV6	4		3	9	21	2	6	1278	●2790
"		●Ignore glow on 2. Cap goes to top of tube.							
6LW6			7	9	21	2	26	1256	●1350
"		●Ignore glow on 1.							
6LX6	3		4	9	23	2	5	16	●1680
"		●Ignore glow on 1. Cap goes to top of tube.							
6LX8		tri	4	9	22	2	8	-	19
"		pen	4	9	21	2	7	-	236
6LY8		tri	4	9	22	2	1	-	23
"		pen	4	9	20	2	6	-	789
6LZ6			4	9	23	2	3	1267	●12679
"		●Ignore glow on 1-2.							
6M11	0	tri-1	1	9	22	2	9	-	78
"		tri-2	1	9	22	2	4	-	56
"	4	pen	5	9	23	2	1	-	267
6MA6			3	9	20	3	7	2458	60
6MB6	5		6	9	19	3	7	2389	123890
"		Cap goes to top of tube.							
6MB8		tri	4	9	20	2	3	-	12
"		pen	4	9	19	2	8	-	679
6MC6			4	9	20	2	3	1267	120
"		Levers 6-7 must be thrown to open position.							
"		Grid cap goes to top of tube.							
6MD8		tri-1	4	9	22	2	7	-	36
"		tri-2	4	9	22	2	-	-	28
"		tri-3	4	9	22	2	-	-	19
6ME6			4	9	20	2	4	1267	120
"		Levers 6-7 must be thrown to open position.							
"		Grid cap goes to top of tube.							
6ME8		sec-1	4	9	21	2	7	-	369
"		sec-2	4	9	21	2	-	-	368
6MF8	8	pen	9	9	22	2	4	12	●1230
"		●Ignore glow on 1.							
"	5	tri	6	9	21	2	3	-	27
6MG8		tri	4	9	21	2	8	-	19
"		pen	4	9	21	2	7	-	236

TUBE	KEY		A	B	C	D	CATH	CONT	TEST
	AT	SECT							
6MH1			3	9	4	1	2	156	●1567
"		●Ignore glow on 1-5.							
6MH6	4		3	9	21	2	6	1278	●2790
"		●Ignore glow on 2. Cap goes to top of tube.							
6MHH3		tri	3	9	24	2	7	-	25
"		tri	3	9	24	2	-	-	16
6MJ6			4	9	23	2	3	1267	●126780
"		●Ignore glow on 1-2. Grid cap goes to top of tube.							
6MJ8	0	tri-1	1	9	22	2	3	-	68
"	4	tri-2	3	9	22	2	7	-	18
"		tri-3	3	9	22	2	-	-	26
6MK8		pen-1	4	9	22	2	1	-	237
"		pen-2	4	9	22	2	-	-	278
6ML4			3	9	24	2	5	-	1267
"		Must show short on 1-2-6-7.							
6ML8		tri-1	4	9	22	2	7	-	36
"		tri-2	4	9	22	2	-	-	28
"		tri-3	4	9	22	2	-	-	19
6MN8	6	tri-1	7	9	24	2	-	-	48
"	5	tri-2	6	9	24	2	-	-	29
"	0	tri-3	1	9	24	2	3	-	68
6MP17			4	9	25	2	2	-	156
6MP18			3	9	3	1	2	17	●1567
"		●Ignore glow on 1.							
6MP20			3	5	25	2	2	-	156
6MQ8		tri	4	9	24	2	8	-	19
"		pen	4	9	23	2	7	-	236
6MU8		tri	4	9	24	2	8	-	19
"		pen	4	9	24	2	7	-	236
6MV8		tri	4	9	21	2	1	-	23
"		pen	4	9	22	2	6	-	789
6MX8		tri	4	9	25	2	1	-	89
"		pen	4	9	21	2	3	-	267
6MY8	5	tri	6	9	21	2	3	-	27
"	8	pen	9	9	21	2	4	12	●1230
"		●Ignore glow on 1.							
6N3			4	9	24	2	3	-	9
6PL12		tri	4	9	23	2	8	-	19
"		pen	4	9	23	2	-	-	367
6Q8		tot	2	9	9	1	8	-	34560
"		tri	2	9	9	1	-	-	56
6Q11	5	tri-1	6	9	25	2	9	-	12
"		tri-3	6	9	25	2	8	-	37
"	2	tri-2	3	9	25	2	8	-	79
6R3			4	9	22	2	0	*	29
"		*May show short on all pins.							
6R4			4	9	23	2	3	-	18
6RA6			5	9	17	3	1	27	279
"		Must show short on 2-7.							
"		Grid short test-throw 2-7 together.							
6RA9			4	9	23	2	1	27	279
"		Grid short test-throw 2-7 together.							

TUBE	KEY		A	B	C	D	CATH	CONT	TEST
	AT	SECT							
6RB11			4	9	25	2	7	36	1396
6RHH2		tri	4	9	24	2	8	-	67
"		tri	4	9	24	2	3	-	12
6RHH8		tri-1	4	9	20	2	8	-	67
"		tri-2	4	9	20	2	3	-	12
6RK19			4	9	18	3	0	29	●29
"		●Ignore glow	on 2.						
6RP15			4	9	25	2	3	12	●1279
"		●Ignore glow	on 1.						
6RP22			4	9	20	2	1	2389	●236
"		●Ignore glow	on 2-Throw levers 8-9 to open position.						
6T9	4	tri	3	9	25	2	9	-	68
"	8	pen	7	9	3	1	4	-	356
6T10	6	pen-1	5	9	19	3	2	-	134
"	2	pen-2	1	9	19	3	4	-	5789
6U3			4	9	24	2	3	-	9
6U9		tri	5	9	22	2	1	-	90
"		pen	5	9	20	2	2	-	378
6U10	5	tri-1	4	9	26	2	9	-	12
"	0	tri-2	1	9	26	2	6	-	57
"	3	tri-3	4	9	26	2	6	-	15
6V9		tri	5	9	20	2	9	-	80
"		hep	5	9	21	2	1	-	347
6X9		tri	5	9	22	2	1	-	90
"		pen	5	9	20	2	2	-	378
6Y9		pen-1	5	9	20	2	7	-	890
"		pen-2	5	9	20	2	2	-	134
6Y10	6	pen-1	5	9	21	2	2	-	134
"	2	pen-2	1	9	20	2	4	-	5789
6Z10	0	pen-1	0	9	26	4	8	1	4567
"	6	pen-2	5	9	18	3	9	7	248
7D10			4	9	3	1	3	-	278
7GS7		tri	4	10	21	2	38	38	12
"		pen	4	10	20	2	-	-	679
7GV7		tri	4	10	21	2	68	68	19
"		pen	4	10	19	2	-	-	237
"		Cathode short test-throw 6-8 together.							
7KY6			4	10	20	2	1	39	278
7KZ6			4	10	21	2	1	39	278
7MP18			3	9	3	1	2	17	●1567
"		●Ignore glow	on 1.						
8A8		tri	4	12	24	2	8	-	19
"		pen	4	12	24	2	7	-	236
8AC9	0	di	1	11	16	3	3	3	2
"	7	pen	6	11	20	2	6	-	345
8AC10	5	tri-1	4	11	21	2	9	-	12
"	0	tri-2	1	11	21	2	6	-	57
"	3	tri-3	4	11	21	2	6	-	15

TUBE	KEY AT	SECT	A	B	C	D	CATH	CONT	TEST
8AL9	2	tri	3	11	21	2	8	-	79
"	5	pen	4	11	22	2	1	-	2379
8AR11	2	pen-2	3	11	21	2	8	-	4567
"	8	pen-1	9	11	21	2	6	-	2345
8AV11	5	tri-1	6	11	26	2	9	-	12
"		tri-3	6	11	26	2	8	-	37
"	2	tri-2	3	11	26	2	8	-	79
8B8		tri	4	10	25	2	8	-	19
"		pen	4	10	23	2	2	-	367
8B10	0	tri-1	1	11	25	2	7	-	56
"		tri-2	1	11	25	2	2	-	34
"	6	di-1	7	11	18	3	2	-	3
"		di-2	7	11	18	3	-	-	1
8BA11	4	pen-1	3	11	24	2	0	-	678
"	0	pen-2	1	11	24	2	8	-	346
"	8	tri	7	11	26	2	5	-	46
8BM11	0	pen-2	1	11	21	2	5	-	236
"	8	pen-1	7	11	21	2	5	-	246
8BN11	7	pen-1	6	11	20	2	2	-	135
"	2	pen-2	1	11	20	2	4	-	567
8BQ7		tri-1	4	10	24	2	8	-	67
"		tri-2	4	10	24	2	3	-	12
8BQ11	2	pen-2	3	11	19	2	8	-	457
"	8	pen-1	9	11	19	2	6	-	345
8BU11	0	tri-1	1	10	21	2	2	-	34
"		tri-2	1	10	21	2	5	-	67
"	7	pen	6	10	21	2	5	-	234
8CB11	2	pen-2	3	11	21	2	8	-	4567
"	8	pen-1	9	11	21	2	6	-	2345
8CL8		tri	4	10	23	2	3	-	12
"		tet	4	10	23	2	8	-	679
8CY5			3	11	23	2	27	27	156
8D8			4	11	26	2	3	27	1689
8DX8		tri	4	11	23	2	3	-	12
"		pen	4	11	23	2	7	-	689
8FQ7		tri-1	4	11	6	1	8	-	67
"		tri-2	4	11	6	1	3	-	12
8GJ7		tri	4	11	21	2	13	13	89
"		pen	4	11	20	2	-	-	267
8GM6			3	11	21	2	2	-	1567
8GN8		tri	4	11	24	2	1	-	23
"		pen	4	11	22	2	6	-	789
8GU7		tri-1	4	11	24	2	8	-	67
"		tri-2	4	11	24	2	3	-	12
8GX7		tri	4	10	21	2	13	13	89
"		pen	4	10	20	2	-	-	267
8HA6			4	11	22	2	1	3689	●2687
"		●Ignore glow on 6.							
8HG8		tri	4	11	23	2	3	13	67
"		pen	4	11	22	2	1	13	289

TUBE	KEY AT	SECT	A	B	C	D	CATH	CONT	TEST
8JK8		tri-1	4	11	18	3	8	-	67
"		tri-2	4	11	18	3	3	-	12
8JT8		tri	4	10	23	2	1	-	23
"		pen	4	10	21	2	6	-	789
8JU8		di-1	4	11	24	2	9	*	78
"		di-2	4	11	24	2	98	-	7
"		di-3	4	11	24	2	3	-	12
"		di-4	4	11	24	2	32	-	1
		*Must show short on 2-8.							
8JV8		tri	4	11	18	3	1	-	23
"		pen	4	11	17	3	-	-	789
8K11	0	tri-2	1	10	7	1	6	-	57
"	5	tri-1	6	10	7	1	9	-	12
"		tri-3	6	10	7	1	8	-	37
8KA8		tri	4	11	24	2	3	-	12
"		pen	4	11	22	2	3	-	6789
8KR8		tri	4	10	20	2	1	-	23
"		pen	4	10	20	2	6	-	789
8KS8		tri	4	10	25	2	1	-	23
"		pen	4	10	23	2	6	-	789
8KT8		tri	4	11	21	2	1	-	23
"		pen	4	11	20	2	6	-	789
8LC8		tri	4	10	24	2	3	5	12
"		pen	4	10	22	2	7	5	689
"		May show short on 3-7.							
8LE8		pen-1	4	11	22	2	3	-	189
"		pen-2	4	11	22	2	-	-	689
8LS6		tri	4	10	22	2	1	39	2379
8LT8		di-1	4	11	16	3	7	-	8
"		di-2	4	11	16	3	7	-	6
"		pen	4	11	19	2	1	-	239
"		May show short on 1.							
8LX8		tri	4	10	22	2	8	-	19
"		pen	4	10	21	2	7	-	236
8MD8		tri-1	4	10	22	2	7	-	36
"		tri-2	4	10	22	2	-	-	28
"		tri-3	4	10	22	2	-	-	19
8MU8		tri	4	11	24	2	8	-	19
"		pen	4	11	24	2	7	-	236
8RHP1		tri	4	10	25	2	8	-	19
"		pen	4	10	23	2	2	-	367
8U9		tri	5	10	22	2	1	-	90
"		pen	5	10	20	2	2	-	378
8X9		tri	5	10	22	2	1	-	90
"		pen	5	10	20	2	2	-	378
9A8		tri	4	12	24	2	8	-	19
"		pen	4	12	24	2	7	-	236
9AB4			3	12	22	2	7	-	16
9AH9	0	tri	1	11	23	2	4	56	23
"	7	pen	1	11	21	2	1	-	250


TUBE	KEY AT	SECT	A	B	C	D	CATH	CONT	TEST
9AK10	0	tri-2	1	12	22	2	6	-	57
"	6	tri-1	5	12	22	2	9	-	48
"	8	tri-3	7	12	22	2	0	-	45
9AM10	0	tri-2	1	12	22	2	6	-	57
"	6	tri-1	5	12	22	2	9	-	48
"	8	tri-3	7	12	22	2	0	-	45
9BJ11	0	pen-2	1	12	16	2	5	-	236
"	8	pen-1	7	12	16	2	5	-	246
9CG8		tri	4	12	24	2	38	38	12
"		pen	4	12	23	2	-	-	679
9DZ8		tri	4	12	28	2	8	-	19
"		pen	4	12	23	2	2	-	367
9EA8		tri	4	12	22	2	8	-	19
"		pen	4	12	22	2	7	-	236
9ED4*			4	10	32	2	1	123679	80
"		Cap goes to top of tube.							
"		*Must use magnoval adapter.							
9FG6		tri	4	6	34	2	3	268	19
"		eye*	4	6	0	4	-	-	67
"		*Levers 2-8 must be thrown to open position.							
"		See instructions for eye test.							
9GH8		tri	4	12	22	2	8	-	19
"		pen	4	12	22	2	7	-	236
9GV8		tri	4	12	24	2	3	-	12
"		pen	4	12	22	2	8	-	679
9JW8		tri	4	12	22	2	8	-	19
"		pen	4	12	21	2	7	-	236
9KC6			4	11	20	2	1	-	279
9KG6#			4	12	20	2	9	*	680
"		*Cont test-1-2-3-6-7-8.							
"		Levers 1-2-3 must be thrown to open position. Cap goes to top of tube.							
"		#Must use magnoval adapter.							
9KV8		tri	4	11	23	2	1	-	23
"		pen	4	11	21	2	6	-	789
9KX6			4	11	20	2	1	39	278
9KZ8		tri	4	12	22	2	8	-	19
"		pen	4	12	22	2	3	-	267
9LA6			4	11	21	2	1	39	278
9MHH3		tri-1	3	11	23	2	7	-	25
"		tri-2	3	11	23	2	-	-	16
9ML8		tri-1	4	11	22	2	7	-	36
"		tri-2	4	11	22	2	-	-	28
"		tri-3	4	11	22	2	-	-	19
9MN8	6	tri-1	7	11	24	2	-	-	48
"	5	tri-2	6	11	24	2	-	-	29
"	0	tri-3	1	11	24	2	3	-	68
9MP12			3	11	22	2	2	-	156

TUBE	KEY		A	B	C	D	CATH	CONT	TEST
	AT	SECT							
9RA6			5	11	17	3	1	27	275
"		Must show short on 2-7.							
"		Grid short test-throw 2-7 together.							
9RAL1		tri-1	4	11	25	2	8	23	67
"		tri-2	4	11	21	2	9	-	●123
"		●Ignore glow on 2.							
9RHR2		tri	4	12	22	2	8	-	19
"		pen	4	12	22	2	7	-	236
9V9		tri	5	12	20	2	9	-	80
"		hep	5	12	21	2	1	-	347
10AF11	0	tri-1	1	12	24	2	5	-	68
"		tri-2	1	12	25	2	7	-	34
"	5	pen	6	12	25	2	1	-	237
10AL11	2	pen-1	1	12	18	3	4	3	5689
"	6	pen-2	5	12	18	3	2	7	134
10CW5			4	12	21	2	3	*	●126789
"		*Cont test 1-2-3-6-7-8.							
"		●Ignore glow on 1-6-7.							
"		May show short on 1-2-6-7-8-9.							
10DX8		tri	4	12	23	2	3	-	12
"		pen	4	12	23	2	7	-	689
10EM7		tri-1	7	12	26	2	6	-	45
"		tri-2	7	12	22	2	3	-	12
10FD12		pen	4	16	24	2	3	-	1269
"		di-1	4	16	21	3	-	-	7
"		di-2	4	16	21	3	-	-	8
10FR7		tri-1	4	12	7	1	8	23	67
"		tri-2	4	12	20	2	9	-	●123
"		●Ignore glow on 2.							
10GF7		tri-1	4	12	29	2	1	-	89
"		tri-2	4	12	23	2	3	-	26
10GH8		tri	4	12	22	2	8	-	19
"		pen	4	12	22	2	7	-	236
10GK6			4	12	23	2	1	39	●2379
"		●Ignore glow on 3.							
10GN8		tri	4	12	24	2	1	-	23
"		pen	4	12	22	2	6	-	789
10GV8		tri	4	12	24	2	3	-	12
"		pen	4	12	22	2	8	-	679
10HA6			4	12	22	2	1	3689	●2687
"		●Ignore glow on 6.							
10HF8		tri	4	12	24	2	1	-	23
"		pen	4	12	22	2	6	-	789
10JA5	2		1	12	21	2	6	0	4580
"		Must show short on 5-0.							
10JAS		tri	4	12	24	2	1	-	23
"		tet	4	12	24	2	6	-	789
10JT8		tri	4	12	23	2	1	-	23
"		pen	4	12	21	2	6	-	789

TUBE	KEY AT	SECT	A	B	C	D	CATH	CONT	TEST
10JY8		tri	4	12	18	3	1	-	23
"		pen	4	12	18	3	6	-	789
10KR8		tri	4	12	20	2	1	-	23
"		pen	4	12	20	2	6	-	789
10KU8		di-1	4	12	25	3	1	5	3
"		di-2	4	12	25	3	1	-	2
"		pen	4	12	22	2	6	-	789
10L14		tri-1	4	18	22	2	8	-	67
"		tri-2	4	18	22	2	3	-	12
10P18			4	19	23	2	3	12689	●126897
		●Ignore glow on 1-6-8.							
10LB8		tri	4	12	29	2	1	-	23
"		pen	4	12	22	2	6	-	789
10LD6			4	12	20	2	1	3689	●2687
		●Ignore glow on 6.							
10LD12		tri	4	18	25	2	7	-	89
"		di-1	4	18	25	3	-	-	6
"		di-2	4	18	17	3	3	-	2
"		di-3	4	18	17	3	-	-	1
10LD13		tri	4	13	8	1	3	79	12
"		di-1	4	13	26	3	-	-	8
"		di-2	4	13	26	3	-	-	6
10LE8		pen-1	4	12	22	2	3	-	189
"		pen-2	4	12	22	2	-	-	689
10LM8		tri	4	12	23	2	8	-	19
"		pen	4	12	23	2	7	-	236
10LW8		tri	4	12	21	2	1	-	23
"		pen	4	12	20	2	6	-	789
10LY8		tri	4	12	22	2	1	-	23
"		pen	4	12	20	2	6	-	789
10LZ8		tri	4	12	22	2	1	-	23
"		pen	4	12	20	2	6	-	789
10T10	6	pen-1	5	12	19	3	2	-	134
"	2	pen-2	1	12	19	3	4	-	5789
10Z10	0	pen-1	0	12	26	4	8	-	4567
"	6	pen-2	5	12	18	3	9	7	248
11AF9		pen-1	5	12	20	2	7	-	890
"		pen-2	5	12	20	2	2	-	134
"		May show short on 2.							
11AR11	2	pen-2	3	12	21	2	8	-	4567
"	8	pen-1	9	12	21	2	6	-	2345
11BM8		tri	4	13	23	2	8	-	19
"		pen	4	13	23	2	2	-	367
11BN11	7	pen-1	6	12	20	2	2	-	135
"	2	pen-2	1	12	20	2	4	-	567
11BQ11	2	pen-2	3	12	19	2	8	-	457
"	8	pen-1	9	12	19	2	6	-	345
11BT11	2	tri-1	1	12	23	2	8	-	79
"	5	tri-2	4	12	21	2	9	-	18
"	6	pen	5	12	21	2	1	-	348
11CA11	0	tri-2	1	12	24	2	7	-	23
"		tri-1	1	12	21	2	5	-	46
"	8	pen	7	12	21	2	4	-	356

TUBE	KEY AT	SECT	A	B	C	D	CATH	CONT	TEST
11CF11	0		1	12	20	2	6	-	345
"	5		6	12	20	2	0	-	37
"	6		7	12	22	2	1	-	23
11CH11	2	tri-1	1	12	22	2	8	-	79
"	5	tri-2	4	12	21	2	9	-	18
"	6	pen	5	12	21	2	1	-	348
11CY7		sec-1	4	12	28	2	8	-	67
"		sec-2	4	12	23	2	9	23	●123
"		●Ignore glow on 2.							
11DS5			3	12	25	2	2	17	●1756
"		●Ignore glow on 1.							
11FY7	5	tri-1	4	12	8	1	1	-	23
"	2	tri-2	1	12	22	2	9	-	57
11HM7			6	8	20	2	1	3459	278
11KV8		tri	4	12	23	2	1	-	23
"		pen	4	12	21	2	6	-	789
11LQ8		tri	4	12	20	2	1	-	23
"		pen	4	12	20	2	6	-	789
11LT8		di-1	4	12	16	3	7	-	8
"		di-2	4	12	16	3	7	-	6
"		pen	4	12	19	2	1	-	239
"		May show short on 1.							
11LY6			4	12	21	2	1	39	2789
"		Lever 3 must be thrown to open position.							
11MS8		tri	4	12	24	2	3	-	12
"		pen	4	12	22	2	8	-	679
11R3			4	12	22	2	0	*	29
"		*May show short on all pins.							
11Y9		pen-1	5	12	20	2	7	-	890
"		pen-2	5	12	20	2	2	-	134
12AC10	5	tri-1	4	13	21	2	9	-	12
"	0	tri-2	1	13	21	2	6	-	57
"	3	tri-3	4	13	21	2	6	-	15
12AF11	0	tri-1	1	13	24	2	5	-	68
"		tri-2	1	3	25	2	7	-	34
"	5	pen	6	13	25	2	1	-	237
12AE10	6	pen-1	5	13	16	3	2	-	134
"	2	pen-2	1	13	16	3	4	-	5789
12AF4			3	13	23	2	5	1267	●1726
"		●Ignore glow on 1-2.							
12AJ7		tri	4	13	25	2	3	-	89
"		hep	4	13	23	2	3	-	126
12AL11	2	pen-1	1	13	18	3	4	3	5689
"	6	pen-2	5	13	18	3	2	7	134
12AU8		tri	4	13	24	2	1	-	23
"		pen	4	13	24	2	6	-	789
12AW6			3	13	22	2	2	-	156
12AX3	5		6	13	24	2	0	29	●29
"		●Ignore glow on 2.							
12AX12			7	13	23	2	0	28	281

KEEP YOUR TUBE TESTER Up-To-Date

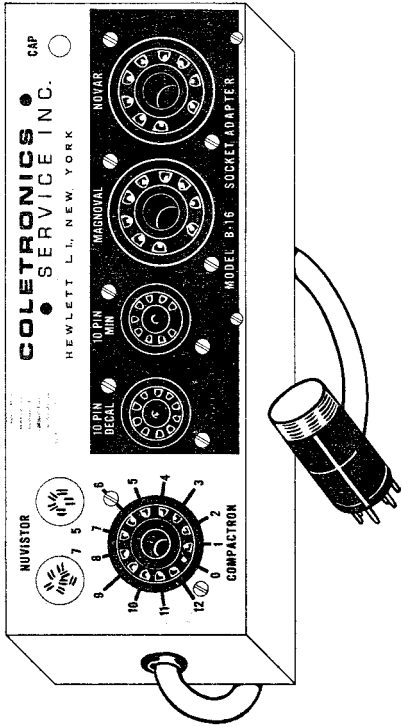

MODEL B-16 ADAPTER

- A SOCKET ADAPTER UNIT THAT INSTANTLY MODERNIZES YOUR TUBE TESTER FOR ABOVE TYPE TUBES.
- THE HANDY FLEXIBLE CABLE PLUG IS SIMPLY INSERTED INTO THE EXISTING 9 PIN SOCKET OF YOUR TUBE TESTER. ATTACH THE TESTERS GRID CAP TO THE ADAPTER AND THE UNIT IS NOW READY TO OPERATE.

TEST ALL THE NEW TUBES

10 PIN MIN
12 PIN COMPACTRON
5 PIN NUVISTOR
7 PIN NUVISTOR
9 PIN NOVAR

AND NEWLY RELEASED TYPES

10 PIN DECAL !
9 PIN MAGNOVAL !

NET PRICE: \$19.40 plus \$1.55 shipping and handling

USE ORDER FORM ON REVERSE SIDE

COLETRONICS SERVICE INC.

1744 Rockaway Ave.

Hewlett, N.Y. 11557

Please ship Model B - 16 Adapter at \$30.95 each.

Enclosed find check or money order totaling.....

New York City Residents - Add 7%
New York State Residents - Add 7%
Canada - Add \$3.00 For Exchange
And Shipping

SHIP TO: —

NAME

STREET

CITY **STATE** **Zip Code**

TUBE	KEY AT	SECT	A	B	C	D	CATH	CONT	TEST
12AY3			4	13	24	2	9	27	●27
"		●Ignore glow on 2.							
12BB14*			4	13	20	2	38	123678	●12670
"		●Ignore glow on 1-6. Cap goes top of tube.							
"		*Must use magnoval adapter.							
12BE3	2		1	13	23	2	9	60	60
"		Must show short on 6-0.							
12BF11	0	pen-1	1	13	28	2	2	-	3567
"	8	pen-2	7	13	23	2	4	-	356
12BR3			4	13	18	3	0	29	●29
"		●Ignore glow on 2.							
12BS3			4	13	16	3	9	27	●27
"		●Ignore glow on 2.							
12BT3	0		1	13	2	4	7	-	4
12BT6		tri	3	13	24	2	2	-	17
"		di-1	3	13	26	3	-	-	5
"		di-2	3	13	26	3	-	-	6
12BV11	7	pen-1	6	13	21	2	2	-	134
"	2	pen-2	1	13	21	2	7	-	568
12CK3			4	13	20	2	9	27	●27
"		●Ignore glow on 2.							
12CL3			4	9	20	2	9	27	●27
"		●Ignore glow on 2.							
12CT3			4	13	23	2	9	26	●26
"		●Ignore glow on 2.							
12DA6			4	13	24	2	3	16	278
12DK6			3	13	23	2	2	-	1567
12DM4			7	13	24	2	3	-	5
12DM7		tri-1	9	9	27	2	8	45	67
"		tri-2	9	9	27	2	3	-	12
12DQ4			7	13	18	3	3	-	5
12DT6			3	13	24	2	2	-	1567
12DT7		tri-1	9	9	27	2	8	45	67
"		tri-2	9	9	27	2	3	-	12
12DW4			4	13	4	1	9	27	2
"		Lever 7 must be thrown to open position.							
12DZ7		pen-1	2	13	5	1	8	-	456
"		pen-2	2	13	5	1	-	-	134
12DZ8		tri	4	13	28	2	8	-	19
"		pen	4	13	23	2	2	-	367
12E13			2	9	24	2	8	-	345
12FQ7		tri-1	4	13	7	1	8	-	67
"		tri-2	4	13	7	1	3	-	12
12FS5			3	13	22	2	27	27	156
12FV7		tri-1	5	9	18	3	8	49	67
"		tri-2	4	9	18	3	3	59	12
12FX5			3	13	17	3	1	25	267
"		Lever 5 must be thrown to open position.							
12G11	6	pen-1	7	13	23	2	2	-	134
"	2	pen-2	1	13	25	2	4	-	5689

TUBE	KEY		A	B	C	D	CATH	CONT	TEST
	AT	SECT							
12GB3			2	13	20	2	8	-	450
12GB7			2	13	4	1	8	-	450
12GC5			4	13	23	2	7	1363	●18369
"		●Ignore glow on 1-3.							
12GJ5			4	13	24	2	3	1267	670
"		Levers 1-2 must be thrown to open position.							
12GK17			7	13	7	1	3	-	5
12GN7			6	9	21	2	1	39	278
12GT5			4	13	23	2	3	1267	●12679
"		●Ignore glow on 1-2.							
12GV5	4		3	13	24	2	18	1278	2790
"		Must show short on 1-2-7-8.							
"		Cathode short test-throw 1-8 together.							
"		Grid cap goes to top of tube.							
12GW6			2	13	18	3	8	-	450
12HB25*			4	13	21	2	9	123678	●12670
"		●Ignore glow on 1-6. Cap goes top of tube.							
"		*Must use magnoval adapter.							
12HE7	0	di	1	13	16	3	4	-	2
"		*CAUTION: Lever 5 must be thrown to open							
"		position before inserting tube.							
"	8	pen*	7	13	16	2	3	-	46
12HG7			6	9	20	2	1	39	278
12HL5			4	13	21	2	3	12	●1279
"		●Ignore glow on 1.							
12HL7			6	9	20	2	1	3459	●39278
"		●Ignore glow on 3.							
12HU8		pen-1	4	13	22	2	7	-	123
"		pen-2	4	13	22	2	-	-	689
12JB6			4	13	18	3	3	1267	670
"		Levers 1-2 must be thrown to open position.							
12JF5	5		4	13	20	2	29	2389	3780
"		Grid cap goes to top of tube.							
12JM6	3		2	13	21	2	5	-	680
"		Grid cap goes to top of tube.							
12JN6	5		6	13	21	2	7	29	380
12JN8		tri	4	13	22	2	3	-	12
"		pen	4	13	23	2	8	-	679
12JQ6		pen	4	13	22	2	9	2378	12378
"		di	4	13	21	3	-	-	6
12JS6	3		4	13	20	2	5	16	●1680
"		●Ignore glow on 1. Grid cap goes to top of tube.							
12JT6			4	13	23	2	3	17	279
"		Lever 1 must be thrown to open position.							
12JZ8	8	pen	9	13	23	2	4	12	●1230
"		●Ignore glow on 1.							
"	5	tri	6	13	26	2	3	-	27
12KA8		tri	4	13	24	2	3	-	12
"		pen	4	13	22	2	3	-	6789

TUBE	KEY AT	SECT	A	B	C	D	CATH	CONT	TEST
12KL8		pen	4	13	24	2	3	-	1267
"		di	4	13	28	3	-	-	8
12MD8		tri-1	4	13	22	2	7	-	36
"		tri-2	4	13	22	2	-	-	28
"		tri-3	4	13	22	2	-	-	19
12MX8		tri	4	13	25	2	1	-	89
"		pen	4	13	21	2	3	-	267
12RK19			4	13	17	3	0	29	●29
"		●Ignore glow on 2.							
12RLL3		tri-1	9	9	22	2	8	45	67
"		tri-2	9	9	22	2	3	-	12
12RLL5		tri-1	4	13	7	1	8	-	67
"		tri-2	4	13	7	1	3	-	12
12T10	6	pen-1	5	13	19	3	2	-	134
"	2	pen-2	1	13	19	3	4	-	5789
13CM5			2	13	23	2	38	1348	459
"		Must show short on 1-3-4-8.							
"		Cathode short test-throw 3-8 together.							
13CW4			4	13	17	3	3	-	12
13CW9			4	12	17	3	3	-	27
13FM7	7	tri-1	6	13	19	3	3	-	45
"	2	tri-2	1	13	19	3	9	-	57
13FR7		tri-1	4	13	7	1	8	23	67
"		tri-2	4	13	20	2	9	-	●123
"		●Ignore glow on 2.							
13GB5*			4	13	22	2	38	123678	160
"		*Must use magnoval adapter.							
"		Grid cap goes to top of tube.							
"		Levers 2-7 must be thrown to open position.							
13GF7		tri-1	4	13	29	2	1	-	89
"		tri-2	4	13	23	2	3	-	26
13J10	0	pen-1	0	13	26	4	8	1	4567
"	6	pen-2	5	13	18	3	9	7	248
13JT8		tri	4	13	23	2	1	-	23
"		pen	4	13	21	2	6	-	789
13JZ8	0	pen	1	13	22	2	9	67	4678
"	4	tri	3	13	28	2	2	-	16
13V10	0	pen-1	1	13	22	2	2	-	367
"	8	pen-2	7	13	21	2	4	-	356
13Z10	0	pen-1	0	13	26	4	8	1	4567
"	6	pen-2	5	13	18	3	9	7	248
14BF11	0	pen-1	1	13	28	2	2	-	3567
"	8	pen-2	7	13	23	2	4	-	356
14BL11	0	tri-1	1	14	22	2	6	-	57
"	5	tri-2	4	14	20	2	9	-	18
"	7	pen	6	14	20	2	2	-	459
14BQ11	2	pen-2	3	14	19	2	8	-	457
"	8	pen-1	9	14	19	2	6	-	345

TUBE	KEY AT	SECT	A	B	C	D	CATH	CONT	TEST
14BR11	0	tri-1	1	14	23	2	5	-	68
"	5	tri-2	4	14	23	2	0	-	12
"		pen	4	14	21	2	9	-	378
14GW8		tri	4	14	26	2	2	-	19
"		pen	4	14	23	2	7	-	368
14JG8		di-1	4	14	18	3	3	-	2
"		di-2	4	14	18	3	1	-	6
"		tri	4	14	19	3	7	-	89
15A6			4	14	25	2	3	-	1267
15AF11	7	pen	6	14	19	3	3	-	459
"	2	di-1	1	14	19	3	9	-	56
"	0	di-2	1	14	19	3	5	-	68
15BD11	0	tri-1	1	14	24	2	5	-	68
"		tri-2	1	14	25	2	7	-	34
"	5	pen	4	14	25	2	1	-	237
15CW5			4	14	21	2	3	-	●126978
"		●Ignore glow on 1-6. May show short on 1-2-6-9-7-8.							
15DQ8		tri	4	14	23	2	3	-	12
"		pen	4	14	24	2	7	-	689
15EW7		tri-1	4	14	27	2	8	-	67
"		tri-2	4	14	23	2	9	23	●123
"		●Ignore glow on 2.							
15FM7	7	tri-1	6	14	19	3	3	-	45
"	2	tri-2	1	14	19	3	9	-	57
15FO7			5	14	19	2	0	-	12
15FY7	5	tri-1	4	14	8	1	1	-	23
"	2	tri-2	1	14	22	2	9	-	57
15HA6			4	14	22	2	1	3689	●2687
"		●Ignore glow on 6.							
15HB6			4	14	22	2	1	3689	●236789
"		●Ignore glow on 3-6.							
15KY8		tri	4	14	25	2	1	-	89
"		pen	4	14	21	2	3	-	267
15LE8		pen-1	4	14	22	2	3	-	189
"		pen-2	4	14	22	2	-	-	689
15MF8	8	pen	9	14	22	2	4	12	●1230
"		●Ignore glow on 1.							
"	5	tri	9	14	21	2	3	-	27
15MX8		tri	4	14	25	2	1	-	89
"		pen	4	14	21	2	3	-	267
16A5			4	15	21	2	3	-	279
16A8		tri	4	15	24	2	8	-	19
"		pen	4	15	21	2	2	-	367
16AK9	8	pen	1	10	22	2	2	79	34
"		tri-2	1	10	24	2	2	-	56
"	0	tri-1	6	10	26	2	7	10	23

TUBE	KEY		A	B	C	D	CATH	CONT	TEST
	AT	SECT							
16AQ3			4	14	23	2	0	*	●9
"		●Ignore glow on 9.							
"		*Cont test 1-2-3-6-7-8-9. Levers 2-3-7-8 must be thrown to open position.							
16BQ11	2	pen-1	3	15	22	2	8	-	457
"	8	pen-2	9	15	22	2	6	-	345
16BX11	0	tri-1	1	15	22	2	9	-	78
"		tri-2	1	15	22	2	4	-	56
"	4	pen	5	15	23	2	1	-	267
16CB28	4		3	14	17	3	6	1278	2790
16GK6			4	15	23	2	1	39	278
16GY5	4		3	14	22	2	18	1278	2790
"		Must show short on 1-2-7-8.							
"		Cathode short test-throw levers 1-8 together.							
16HB5	0		1	14	22	2	4	-	237
16KA6	4		3	14	20	2	1	28	790
"		Cap goes to top of tube.							
16KH8			4	13	23	2	7	-	1-2
"			4	13	23	2	-	-	2-3-9
"			4	13	23	2	-	-	6-8-9
16LD6			4	14	20	2	1	3689	●2687
"		●Ignore glow on 6.							
16LU8	5	tri	6	15	21	2	3	-	27
"	8	pen	9	15	21	2	4	12	●1230
"		●Ignore glow on 1.							
16MY8	5	tri	6	15	21	2	3	-	27
"	8	pen	9	15	21	2	4	12	●1230
"		●Ignore glow on 1.							
16Y9		pen-1	5	15	20	2	7	-	890
"		pen-2	5	15	20	2	2	-	134
17A8		tri	4	15	24	2	8	-	19
"		pen	4	15	24	2	7	-	236
17AB10	6	pen-1	5	15	20	2	9	-	248
"	0	pen-2	0	15	24	2	8	-	4567
17AX3	5		6	15	24	2	0	29	●29
"		●Ignore glow on 2.							
17AY3			4	15	24	2	9	27	●27
"		●Ignore glow on 2.							
17B4			2	15	8	1	-	-	35
17BB14*			4	15	20	2	38	123678	●12670
"		●Ignore glow on 1-6. Cap goes top of tube.							
"		*Must use magnoval adapter.							
17BD11	0	tri-1	1	15	24	2	5	-	68
"		tri-2	1	15	25	2	7	-	34
"	5	pen	4	15	25	2	1	-	237
17BE3	2		1	15	23	2	9	60	60
"		Must show short on 6-0.							
17BF11	0	pen-1	1	15	28	2	2	-	3567
"	8	pen-2	7	15	23	2	4	-	356
17BJ6			3	15	23	2	2	-	1567
17BR3			4	15	23	2	0	29	●29
"		●Ignore glow on 2.							

TUBE	KEY AT	SECT	A	B	C	D	CATH	CONT	TEST
17BS3			4	15	16	3	9	27	●27
"		●Ignore	glow on 2.						
17BW3	0		1	15	17	3	7	-	4
17BZ3	0		1	15	16	3	7	-	4
17C9		tet-1	1	15	24	2	6	-	789
"		tet-2	4	15	24	2	0	-	123
17CK3			4	15	20	2	9	27	●27
"		●Ignore	glow on 2.						
17CL3			4	14	20	2	9	27	●27
"		●Ignore	glow on 2.						
17CT3			4	15	23	2	9	26	●26
"		●Ignore	glow on 2.						
17DM4			7	15	24	2	3	-	5
17DQ4			7	15	18	3	3	-	5
17DW4			4	15	4	1	9	27	2
"			Lever 7 must be thrown to open position.						
17EW8		tri-1	5	15	22	2	8	-	67
"		tri-2	5	15	22	2	3	-	12
17FY7	5	tri-1	4	15	8	1	1	-	23
"	2	tri-2	1	15	22	2	9	-	57
17GE5	5		6	15	23	2	29	2389	●7380
"		●Ignore	glow on 3.						
17GJ5			4	15	24	2	3	1267	670
"			Levers 1-2 must be thrown to open position.						
17GT5			4	15	23	2	3	1267	●12679
"		●Ignore	glow on 1-2.						
17GT6			1	15	28	2	2	-	3567
17GV5	4		3	15	24	2	18	1278	2790
"			Must show short on 1-2-7-8. Cathode short test-throw levers 1-8 together.						
17GW6			2	15	18	3	8	-	450
17GY5	4		3	15	22	2	18	1278	2790
"			Cathode short test-throw 1-8 together.						
17HB25*			4	15	21	2	9	123678	●12670
"		●Ignore	glow on 1-6. Cap goes top of tube.						
"		*Must use	magnoval adapter.						
17HC8		tri.	4	15	18	3	8	-	19
"		pen	4	15	18	3	2	-	367
17HG8		tri	4	15	23	2	3	13	67
"		pen	4	15	22	2	1	-	289
17JB6			4	15	18	3	3	1267	670
"			Levers 1-2 must be thrown to open position.						
17JF6			4	15	20	2	3	1267	●12670
"		●Ignore	glow on 1-2-6. Cap goes top of tube.						
17JG6			4	15	17	3	3	17	279
"			Lever 1 must be thrown to open position.						
17JK8		tri-1	4	15	18	3	8	-	67
"		tri-2	4	15	18	3	3	-	12
17JM6	3		2	15	21	2	5	-	680
"			Grid cap goes to top of tube.						

TUBE	KEY AT	SECT	A	B	C	D	CATH	CONT	TEST
17JN6	5		6	15	21	2	7	29	380
17JQ6		pen	4	15	22	2	9	2378	12378
"		di	4	15	21	3	-	-	6
17JR6			4	15	28	3	3	17	279
"		Lever 1 must be thrown to open position.							
17JS6	3		4	15	20	2	5	16	●1680
"		●Ignore glow on 1. Grid cap goes to top of tube.							
17JT6			4	15	23	2	3	17	279
"		Lever 1 must be thrown to open position.							
17JU6	3		4	15	20	2	5	16	●1680
"		●Ignore glow on 1. Grid cap goes to top of tube.							
17JZ8	8	pen	9	15	23	2	4	12	●1230
"		●Ignore glow on 1.							
"	5	tri	6	15	26	2	3	-	27
17KV6			4	15	20	2	3	17	279
"		Lever 1 must be thrown to open position.							
17LD8		tri	4	15	25	2	1	-	89
"		pen	4	15	21	2	3	-	267
17RHH2		tri-1	5	15	22	2	8	-	67
"		tri-2	5	15	22	2	3	-	12
17RK19			4	15	23	2	0	29	●29
"		●Ignore glow on 2.							
17W6			2	15	24	2	8	-	345
17X10	0	pen-1	0	15	20	4	8	1	4567
"	6	pen-2	5	15	17	3	9	7	248
17Y9		pen-1	5	15	20	2	7	-	890
"		pen-2	5	15	20	2	2	-	134
18AJ10	2	pen-1	3	16	23	2	4	-	578
"	6	pen-2	5	16	23	2	2	-	134
18DZ8		tri	4	16	28	2	8	-	19
"		pen	4	16	23	2	2	-	367
18GB5*			4	16	22	2	38	123678	160
"		*Must use magnoval adapter. Levers 2-7 must be thrown to open position.							
"		Cap goes to top of tube.							
18GD6			3	16	23	2	7	-	156
18GV5	4		3	16	24	2	18	1278	2790
"		Grid cap goes to top of tube.							
18GV8		tri	4	16	24	2	3	-	12
"		pen	4	16	22	2	8	-	679
18RAL1		tri-1	4	16	25	2	8	23	67
"		tri-2	4	16	21	2	9	-	●123
"		●Ignore glow on 2.							
19A3			6	9	22	2	7	346	5
19AJ8		hep	4	16	23	2	3	-	126
"		tri	4	16	24	2	-	-	89
19AQ5			3	16	7	1	2	17	●1756
"		●Ignore glow on 1.							

TUBE	KEY		A	B	C	D	CATH	CONT	TEST
	AT	SECT							
19BR5		tri	4	16	7	1	2	369	17
"		eye	4	16	0	4	-	-	7369
		See instructions for eye test.							
19BX6			4	16	21	2	13	13	2897
19BY7			4	16	23	2	13	13	2789
19CG3	0		1	16	16	3	7	-	4
19DE3	7		6	16	20	2	0	-	4
"		Grid cap goes to top of tube.							
19DE7		tri-1	4	16	9	1	8	23	67
"		tri-2	4	16	3	1	9	-	●123
"		●Ignore glow on 2.							
19DK3			4	16	23	2	0	27	●27
"		●Ignore glow on 2-7.							
19DQ3	0		1	16	16	3	7	-	4
19EW7		tri-1	4	16	27	2	8	-	67
"		tri-2	4	16	23	2	9	23	●123
"		●Ignore glow on 2.							
19EZ8		tri-1	4	16	27	2	-	-	89
"		tri-2	4	16	27	2	-	-	67
"		tri-3	4	16	23	2	1	-	23
19FL8		pen	4	16	24	2	3	-	1269
"		di-1	4	16	21	3	-	-	7
"		di-2	4	16	21	3	-	-	8
19FX5			3	16	17	3	-	25	267
"		Lever 5 must be thrown to open position.							
19GQ7		di-1	4	16	17	3	9	-	8
"		di-2	4	16	17	3	7	-	6
"		di-3	4	16	17	3	1	-	2
19HR6			3	16	21	2	7	-	156
19HS6			3	16	22	2	7	-	1256
19JC6			4	16	22	2	13	13	278
19JN8		pen	4	16	23	2	8	-	679
"		tri	4	16	22	2	3	-	12
19KF6*			4	16	20	2	3	17	●1679
"		●Ignore glow on 1-6.							
"		*Must use magnoval adapter.							
19KG8		tri	2	16	22	2	3	-	12
"		pen	2	16	22	2	8	-	679
19MR9			3	16	23	2	7	-	156
19Q9		tri	4	16	21	2	7	-	89
"		pen	4	16	20	2	0	-	123
19U3			4	16	3	1	3	-	9
19W3			4	16	3	1	3	-	9
19Y3			4	13	3	1	3	-	9
20AQ3			4	16	23	2	0	*	●9
"		●Ignore glow on 9. Levers 2-3-7-8 must be thrown to open position.							
"		*Cont test 1-2-3-6-7-8-9.							
20D4		hep	5	9	24	2	3	-	1267
"		tri	5	9	27	2	-	-	89

TUBE	KEY		A	B	C	D	CATH	CONT	TEST
	AT	SECT							
20EW7		tri-1	4	16	27	2	8	-	67
"		tri-2	4	16	23	2	9	23	●123
"		●Ignore glow on 2.							
20LF6	4		3	16	21	2	6	1278	●2790
"		●Ignore glow on 2. Cap goes top of tube.							
21A6			4	17	21	2	3	16789	280
"		Lever 7 must be thrown to open position.							
21AK6			3	17	10	1	7	-	1256
21EX6			2	17	22	2	3	-	580
21GY5	4		3	17	22	2	18	1278	2790
"		Cathode short test-throw levers 1-8 to-							
"		gether.							
21HB3			2	22	18	2	-	-	2790
21HB5	0		1	17	22	2	4	-	237
21HD5	0		1	17	20	2	4	59	357
"		Lever 9 must be thrown to open position.							
21HJ5	0		1	17	20	2	4	59	●3579
"		●Ignore glow on 5-7.							
21JS6	3		4	17	20	2	5	16	●1680
"		●Ignore glow on 1. Cap goes to top of tube.							
21JV6	5		6	17	21	2	7	29	●23890
"		●Ignore glow on 2-3-8.							
21JZ6	3		2	17	20	2	5	-	780
"		Grid cap goes to top of tube.							
21KA6	4		3	17	20	2	1	28	790
"		Cap goes to top of tube.							
21KQ6*			4	17	20	2	9	123678	●130
"		●Ignore glow on 1. Cap goes to top of tube.							
"		*Must use magnoval adapter.							
"		Levers 6-8 must be thrown to open position.							
21LG6	4		3	17	22	2	18	1278	790
21LR8		tri	4	17	21	2	1	-	89
"		pen	4	17	20	2	3	-	267
21LU8	5	tri	6	17	21	2	3	-	27
"	8	pen	9	17	21	2	4	12	●1230
"		●Ignore glow on 1.							
21MY8	5	tri	6	17	21	2	3	-	27
"	8	pen	9	17	21	2	4	12	●1230
"		●Ignore glow on 1.							
22AL3			4	17	24	3	0	*	9
"		*Must show short on 1-2-3-6-7-8. Levers							
"		1-2-3-6-7-8 must be thrown to open position.							
22BW3	0		1	17	17	3	7	-	4
22JF6			4	17	20	2	3	1267	●12670
"		●Ignore glow on 1-2-6. Grid cap goes to top							
"		of tube.							
22JG6			4	17	17	3	3	17	279
"		Lever 1 must be thrown to open position.							
22JR6	4		4	17	28	3	3	17	279
"		Lever 1 must be thrown to open position.							

TUBE	KEY		A	B	C	D	CATH	CONT	TEST
	AT	SECT							
22JU6			4	17	20	2	3	1267	●12670
"			●Ignore glow on 1-2-6. Grid cap goes to top of tube.						
22KM6			4	17	21	2	3	1267	670
"			Levers 1-2 must be thrown to open position. Cap goes to top of tube.						
22KV6			4	17	20	2	3	17	279
"			Lever 1 must be thrown to open position.						
23JS6	3		4	17	20	2	5	16	●1680
"			●Ignore glow on 1. Cap goes to top of tube.						
23MB6	5		6	17	19	3	7	2389	123890
"			Grid cap goes to top of tube.						
23Z9	5	tri-1	4	17	27	2	0	-	78
"		tri-2	4	17	24	2	-	-	23
"	7	pen	6	17	21	2	1	-	230
24AX4			7	18	7	1	3	-	5
24BF11	0	pen-1	1	18	28	2	2	-	3567
"	8	pen-2	7	18	23	2	4	-	356
24JE6			4	18	23	2	3	1267	●126780
"			●Ignore glow on 1-2. Cap goes top of tube.						
24JZ8	8	pen	9	18	23	2	4	12	●1230
"			●Ignore glow on 1.						
"	5	tri	6	18	26	2	3	-	27
24LQ6			4	18	23	2	3	1267	●126780
"			●Ignore glow on 1-2. Cap goes top of tube.						
24LZ6			4	18	23	2	3	1267	●12679
"			●Ignore glow on 1-2.						
24GA7	4	di	3	18	24	2	0	-	2
"			Must show short on 6-7.						
"	0	pen	1	18	35	2	5	10	237
"			Must show short on 2-3.						
25BB14*			4	18	20	2	38	123678	●12670
"			●Ignore glow on 1-6. Cap goes top of tube.						
"			*Must use magnoval adapter.						
25CG3	0		1	18	16	3	7	-	4
25CK3			4	18	20	2	9	27	●27
"			●Ignore glow on 2.						
25CM3			4	18	23	2	9	27	●27
"			●Ignore glow on 2.						
25CT3			4	18	23	2	9	26	●26
"			●Ignore glow on 2.						
25DK3			4	18	23	2	0	27	●27
"			●Ignore glow on 2-7.						
25DL3			4	18	21	2	0	27	27
25DT5			4	18	28	2	7	36	●1369
"			●Ignore glow on 3.						
25GB6			2	18	18	3	8	-	450
25HX5*			4	18	18	3	23	1237	1679
"			Grid short test-throw 1-7 together.						
"			*Must use magnoval adapter.						

TUBE	KEY		A	B	C	D	CATH	CONT	TEST
	AT	SECT							
25JQ6		pen	4	18	22	2	9	2378	12378
"		di	4	18	21	3	-	-	6
25JZ8	8	pen	9	18	23	2	4	12	●1230
"		●Ignore glow on 1.							
"	5	tri	6	18	26	2	3	-	27
25MP20			3	18	25	2	2	-	156
25RK19			4	18	23	2	0	29	29
"		●Ignore glow on 2.							
26AQ8		tri-1	4	18	22	2	8	-	67
"		tri-2	4	18	22	2	3	-	12
26DQ5			2	18	23	2	36	*	14580
"		*Cont 1-3-4-5-6-8.							
26HU5			7	18	21	2	26	1256	130
26HV5	0		1	18	20	2	4	-	27
26JG6			4	18	17	3	3	17	279
"		Lever 1 must be thrown to open position.							
26LW6			7	18	21	2	26	1256	●1350
"		●Ignore glow on 1.							
26LX6	3		4	18	23	2	5	16	●1680
"		●Ignore glow on 1. Cap goes to top of tube.							
27GB5*			4	18	22	2	38	123678	160
"		*Must use magnoval adapter. Grid cap goes to top of tube.							
"		Levers 2-7 must be thrown to open position.							
27KG6*			4	18	20	2	9	123678	680
"		*Must use magnoval adapter. Grid cap goes to top of tube.							
"		Levers 1-3 must be thrown to open position.							
27LF6	4		3	18	21	2	6	1278	●2790
"		●Ignore glow on 2. Cap goes top of tube.							
28GB5*			4	18	22	2	38	123678	160
"		*Must use magnoval adapter. Grid cap goes to top of tube.							
"		Levers 2-7 must be thrown to open position.							
28HA6			4	19	22	2	1	3689	●2687
"		●Ignore glow on 6.							
28HD5	0		1	19	20	2	4	59	357
"		Lever 9 must be thrown to open position.							
29GK6			4	19	23	2	1	39	278
29KQ6*			4	19	20	2	9	123678	●130
"		●Ignore glow on 1. Cap goes to top of tube.							
"		*Must use magnoval adapter.							
"		Levers 6-8 must be thrown to open position.							
29LE6*			4	18	19	3	9	123678	1230
"		Must show short on 1-2-3-6-7-8.							
"		Grid-1 short test-throw 1-8 together.							
"		Grid-2 short test-throw 3-6 together.							
"		Screen short test-throw 2-7 together.							
"		Levers 6-7-8 throw to open position.							
"		*Must use magnoval adapter.							

TUBE	KEY		A	B	C	D	CATH	CONT	TEST
	AT	SECT							
30A5			3	19	21	2	1	25	●2567
"		●Ignore glow on 2.							
39AG11	8	tri-1	9	19	22	2	4	-	23
"		di-1	9	19	24	2	6	-	5
"	2	tri-2	3	19	22	2	6	-	78
"		di-2	3	19	24	2	4	-	5
30C18		tri	4	10	21	2	68	68	19
"		pen	4	10	19	2	-	-	237
"		Cathode short test - throw 6-8 together.							
30CW5			4	19	21	2	3	-	●126789
"		●Ignore glow on 1-6-7.							
"		May show short on 1-2-6-7-8-9.							
30HD5	0		1	19	20	2	4	59	357
"		Lever 9 must be thrown to open position.							
30HJ5	0		1	19	20	2	4	59	●3579
"		●Ignore glow on 5-7.							
30JZ6	3		2	19	20	2	5	-	780
"		Cap goes to top of tube.							
30KD6	4		3	19	20	2	6	1278	●2790
"		●Ignore glow on 2. Cap goes to top of tube.							
30KG6#			4	19	20	2	9	*	680
"		*Cont test 1-2-3-6-7-8. Levers 1-2-3 must							
"		be thrown to open position.							
"		#Must use magnoval adapter.							
"		Cap goes to top of tube.							
30LW6			7	19	21	2	26	1256	●1350
"		●Ignore glow on 1.							
30MB6	5		6	19	19	3	7	2389	123890
"		Grid cap goes to top of tube.							
30MP23			3	19	18	3	1	25	2567
30MP27			3	19	18	3	1	25	2567
30PL12		tri	4	15	24	2	8	-	19
"		pen	4	15	21	2	2	-	367
31AL10	0	pen	6	14	22	2	7	19	458
"		tri-2	6	14	25	2	7	-	23
"	6	tri-1	0	14	24	2	3	57	24
31JS6	3		4	19	20	2	5	16	●1680
"		●Ignore glow on 1. Grid cap goes to top of							
"		tube.							
31LQ6			4	19	23	2	3	1267	●126780
"		●Ignore glow on 1-2. Cap goes top of tube.							
31LR8		tri	4	18	21	2	1	-	89
"		pen	4	18	20	2	3	-	267
31LZ6			4	19	23	2	3	1267	●12679
"		●Ignore glow on 1-2.							
32A8		tri	4	19	23	2	8	-	19
"		pen	4	19	23	2	2	-	367
32GA7	4	di	3	19	24	2	0	-	2
"		Must show short on 6-7.							
"	0	pen	1	19	35	2	5	10	237
"		Must show short on 2-3.							

TUBE	KEY		A	B	C	D	CATH	CONT	TEST
	AT	SECT							
32HQ7	0	di	1	19	16	3	4	-	2
"	8	CAUTION: Throw lever 5 to open position before inserting tube.							
"		pen	7	19	16	2	3	-	46
33GT7	4	di	3	19	18	3	8	-	6
"		pen	3	19	24	2	0	-	129
33GY7	3	di	2	19	18	3	7	-	5
"	4	pen	3	19	23	2	0	-	12
33HE7	0	di	1	19	16	3	4	-	2
"	8*	pen	7	19	16	2	3	-	46
"		*Throw lever 5 to open position before inserting tube.							
33JR6			4	19	28	3	3	17	279
"		Lever 1 must be thrown to open position.							
33JV6	5		6	19	21	2	7	29	●23890
"		●Ignore glow on 2-3-8.							
34CD3	0		1	19	20	2	7	-	4
34CE3	0		1	19	20	2	7	-	4
34CM3			4	19	23	2	9	27	●27
"		●Ignore glow on 2.							
34DK3			4	19	23	2	0	27	●27
"		●Ignore glow on 2-7.							
34R3			4	19	22	2	0	29	●29
"		●Ignore glow on 2.							
35C3			3	19	3	1	7	-	5
35DZ8		tri	4	19	28	2	8	-	19
"		pen	4	19	23	2	2	-	367
35LR6	3		4	19	22	2	5	16	●1680
"		●Ignore glow on 1. Cap goes to top of tube.							
36KD6	4		3	19	22	2	6	1278	●2790
"		●Ignore glow on 2. Cap goes to top of tube.							
36MC6			4	19	20	2	3	1267	120
"		Levers 6-7 must be thrown to open position.							
"		Grid cap goes to top of tube.							
38HE7	0	di	1	19	16	3	4	-	2
"		*CAUTION: Lever 5 must be thrown to open position before inserting tube.							
"	8	*pen	7	19	16	2	3	-	46
38HK7	0	di	1	19	16	3	4	-	2
"	8	CAUTION: Lever 5 must be thrown to open position before inserting tube.							
"		pen	7	19	26	2	3	-	46
40KD6	4		3	19	20	2	6	1278	●2790
"		●Ignore glow on 2. Cap goes to top of tube.							
40KG6*			4	19	20	2	9	123678	680
"		Levers 1-2-3 must be thrown to open position. Cap goes to top of tube.							
"		*Must use magnoval adapter.							

TUBE	KEY		A	B	C	D	CATH	CONT	TEST
	AT	SECT							
42EC4*			4	19	22	2	0	278	●278
"									●Ignore glow on 2-7. Cap goes top of tube.
"									*Must use magnoval adapter.
42KN6	6		5	19	20	2	8	49	●2490
"									●Ignore glow on 4. Cap goes to top of tube.
50BM8		tri	4	20	19	3	8	-	19
"		pen	4	20	19	3	2	-	367
50GY7	3	di	2	20	18	3	7	-	5
"	4	pen	3	20	23	2	0	-	12
50HN5			4	20	22	2	3	12	●1279
"									●Ignore glow on 1.
50JY6			2	20	20	2	8	14	450
"									Lever 1 must be thrown to open position.
53HK7	0	di	1	20	16	3	4	-	2
"									*CAUTION: Lever 5 must be thrown to open position before inserting tube.
"	8	*pen	7	20	16	2	3	-	46
58HE7	0	di	1	20	16	3	4	-	2
"									*CAUTION: Lever 5 must be thrown to open position before inserting tube.
"	8	*pen	7	20	16	2	3	-	46
60HL5			4	20	21	2	3	12	●1279
"									●Ignore glow on 1.
396A		tri-1	1	9	24	2	2	-	34
"		tri-2	1	9	24	2	8	-	67
403B			3	9	25	2	27	27	156
GL866A			1	4	31	2	-	-	0
TJ880			4	9	22	2	16	1369	278
CK5755		tri-2	4	9	20	3	2	59	13
"		tri-1	5	9	20	3	7	-	69
5763			4	9	4	1	7	89	●13689
"									●Ignore glow on 8.
5844		tri-1	3	9	22	2	7	-	25
"		tri-2	3	9	22	2	-	-	16
5845									●CAUTION: Lever 7 must be thrown to open position before inserting tube and must remain in open position throughout all tests.
"									
"		di-2	3	6	50	3	-	34	1
"		di-1	3	6	50	3	-	-	5
"									Good tube reads above 30.
CK5889			3	2	37	3	-	-	120
"									Tube OK above 20 on meter scale.
5896		di-1	3	9	6	1	7	-	5
"		di-2	3	9	6	1	2	-	1
5933			1	9	18	3	4	5	230
6012			2	9	29	2	1	-	358
6084			4	9	25	2	3	27	1689

TUBE	KEY AT SECT	A	B	C	D	CATH	CONT	TEST
6085	tri-1	9	9	7	1	3	45	12
"	tri-2	9	9	7	1	8	-	67
"	Fil cont - also throw 4-5 together.							
6094		3	9	19	3	4	1245679	124
"	Levers 6-7-9 must be thrown to open position.							
6216A		4	9	23	2	38	1368	●1267
"	●Ignore glow on 1.							
6217		4	9	24	9	2	-	1267
6227		4	9	22	2	3	16	278
CK6293		2	9	21	2	146	146	350
CK6397		5	2	7	1	-	17	368
6485		3	9	3	1	7	-	1256
CK6526		5	2	26	2	-	-	124
PL6574		1	9	27	2	8	-	356
6686		4	9	24	2	3	16	2789
6689		4	9	23	2	3	-	126
6939	pen-1	9	9	22	2	2	-	368
"	pen-2	9	9	22	2	-	-	167
7119	tri-1	8	9	23	2	6	45	79
"	tri-2	8	9	23	2	3	-	12
7233		4	9	17	3	8	123679	123679
7308	tri-2	4	9	17	3	3	-	12
"	tri-1	4	9	17	3	8	-	67
7320		4	9	5	1	3	12	●1279
"	●Ignore glow on 1.							
7360		4	9	24	2	1	-	2367
7408		2	9	8	1	8	-	345
7551		4	13	25	2	19	1389	●23867
"	●Ignore glow on 3.							
7558		4	9	25	2	19	1389	●23867
"	●Ignore glow on 3.							
7581		2	8	24	2	8	-	345
7586		2	9	17	3	3	5	12
7591		2	9	24	2	5	48	●4836
"	●Ignore glow on 4.							
7643	tri	4	9	24	2	8	-	19
"	pen	4	9	24	2	7	-	236
7687	tri	4	9	25	2	8	-	19
"	pen	4	9	23	2	7	-	236
7695		4	20	23	2	7	-	169
7728	tri-1	9	9	4	1	8	45	67
"	tri-2	9	9	4	1	3	-	12
7729	tri-1	9	9	27	2	8	45	67
"	tri-2	9	9	27	2	3	-	12
7730	tri-1	9	9	8	1	8	45	67
"	tri-2	9	9	8	1	3	-	12
7731	tri	4	9	24	2	8	-	19
"	pen	4	9	24	2	7	-	236
7733		6	9	22	2	1	3459	278

TUBE	KEY AT	SECT	A	B	C	D	CATH	CONT	TEST
7788			4	9	19	2	13	1369	2679
7802		tri-1	7	9	23	2	6	-	45
"		tri-2	7	9	23	2	3	-	12
7868			4	9	23	2	3	1267	●12679
"		●Ignore glow on 1-2.							
7895			4	9	16	3	3	-	12
7898		●CAUTION: Lever 9 must be thrown to open position before inserting tube and must remain in open position throughout all tests, including short test.							
"		tri-2	4	13	17	3	3	-	12
"		tri-1	4	13	17	3	8	-	67
7984	7		6	13	24	2	239	23915	450
"		Must show short on 2-3-9-1-5.							
"		Throw lever 1 to open position.							
8032			2	13	25	2	146	146	350
8056			4	9	16	3	3	-	12
8077			4	13	22	2	1	39	278
8102		tri	4	13	22	2	2	-	13
"		pen	4	13	22	2	8	-	679
8106			4	13	18	3	269	23689	1378
"		Must show short on 2-3-6-8-9.							
"		Cathode short test-throw 2-6-9 together.							
8113			3	9	22	2	27	27	156
"		Must show short on 2-7.							
"		Cathode short test-throw 2-7 together.							
8136			3	9	23	2	2	-	1567
8156	4		3	13	26	2	60	67890	129
"		Lever 7-8 must be thrown to open position.							
8203			4	9	17	3	3	5	12
8233*			4	9	20	2	79	2679	318
"		*Must use magnoval adapter.							
8278*			4	9	21	2	26	123678	●13789
"		●Ignore glow on 1-3-7.							
"		*Must use magnoval adapter.							
8298			2	9	22	2	146	146	350
8417			2	9	21	2	8	-	345
8425			3	9	23	2	7	-	1256
8441			4	9	18	3	3	-	12
8532			3	9	4	1	2	156	●1567
"		●Ignore glow on 1-5.							
8552			2	13	25	2	146	146	350
8908			7	9	20	2	4	1256	3560
"		Lever 1-2 must be thrown to open position.							
"		Grid-1 short test-throw 1-5 together.							
"		Grid-3 short test-throw 2-6 together.							
8950	3		2	13	23	2	5-9	1-5-6-9	●1-6-7-8
"		●Ignore glow on 1. Cap goes to top of tube.							
<u>FOREIGN</u>									
DAF92		pen	1	2	34	2	-	-	236
"		di	1	2	29	3	-	-	4

TUBE	KEY AT SECT	A	B	C	D	CATH	CONT	TEST
DL93		5	2	30	2	-	1267	●2634
"	●Ignore glow on 2.							
DL95		5	2	29	2	-	1267	●2634
"	●Ignore glow on 2.							
DL98		26	2	29	2	-	45	137
DY87		258	2	21	4	-	1469	0
E55L*		4	9	20	2	79	2679	138
"	*Must use magnoval adapter.							
E80CC	tri-1	9	9	7	1	3	45	12
"	tri-2	9	9	7	1	8	-	67
"	Fil cont-also throw 4-5 together.							
E80F		4	9	25	2	3	27	1689
E83F		4	9	23	2	3	-	126
E80L		4	9	22	2	3	16	278
E81L		4	9	24	2	3	16	2789
E84L		4	9	5	1	3	12	●1279
"	●Ignore glow on 1.							
E182CC	tri-1	8	9	23	2	6	45	79
"	tri-2	8	9	23	2	3	-	12
E188CC	tri-2	4	9	17	3	3	-	12
"	tri-1	4	9	17	3	8	-	67
E235L		2	9	22	2	8	14	1345
E810F		4	9	19	2	13	1369	2679
EAF801	pen	4	9	17	3	3	-	1269
"	di	4	9	23	3	-	-	8
EAM86	tri	4	9	21	2	9	-	18
"	eye	4	9	0	4	3	-	67
"	See instructions for eye test.							
EB91	di-1	3	9	18	3	5	-	2
"	di-2	3	9	18	3	1	-	7
EBC81	tri	4	9	7	1	3	79	12
"	di-1	4	9	29	3	-	-	8
"	di-2	4	9	26	3	-	-	6
EC80		1	9	3	1	5	2378	●2378
"	●Ignore glow on 2-7.							
EC81		4	9	23	2	3	-	18
EC86		4	9	20	2	37	*	●12689
"	●Ignore glow on 1-2-6-8.							
"	*Must show short on 1-2-3-6-7-8-9.							
EC88		4	9	21	2	2	13679	18
"	Lever 3-6-7-9 must be thrown to open position.							
EC91		3	9	21	2	25	1256	●167
"	●Ignore glow on 1.							
EC95		3	9	22	2	17	17	256
EC97		3	9	22	2	17	17	25
EC900		3	9	21	2	27	27	15
ECC34	tri-1	7	8	7	1	6	-	45
"	tri-2	7	8	7	1	3	-	12

TUBE	KEY AT	SECT	A	B	C	D	CATH	CONT	TEST
ECC91		tri-1	3	9	24	2	7	-	25
"		tri-2	3	9	24	2	-	-	16
ECC189		tri-1	4	9	22	2	8	-	67
"		tri-2	4	9	22	2	3	-	12
ECC801S		tri-1	9	9	4	1	8	45	67
"		tri-2	9	9	4	1	3	-	12
ECC802S		tri-1	9	9	8	1	3	45	12
"		tri-2	9	9	8	1	8	-	67
ECC808		tri-1	4	9	24	2	8	-	79
"		tri-2	4	9	24	2	2	-	13
ECF83		tri	4	9	19	2	1	-	23
"		pen	4	9	19	3	8	-	679
ECF200		tri	5	9	22	2	1	-	90
"		pen	5	9	20	2	2	-	378
ECF201		tri	5	9	22	2	1	-	90
"		pen	5	9	20	2	2	-	378
ECF202		tri	5	9	23	2	1	-	90
"		pen	5	9	22	2	2	-	378
ECF801		tri	4	9	21	2	13	13	89
"		pen	4	9	20	2	-	-	267
ECF802		tri	4	9	22	2	8	-	19
"		pen	4	9	21	2	7	-	236
ECF805		tri	4	9	21	2	68	68	19
"		pen	4	9	19	2	-	-	237
"		Cathode short test-throw 6-8 together.							
ECH21		tri	1	9	23	2	0	-	34
"		pen	1	9	23	2	0	-	2567
ECH35		tri	2	9	26	2	8	-	56
"		hex	2	9	26	2	-	-	3459
ECH84		tri	4	9	23	2	3	-	89
"		hep	4	9	21	2	-	-	267
ECH200		tri	5	9	20	2	9	-	80
"		hep	5	9	21	2	1	-	347
ECL85		tri	4	9	24	2	3	-	12
"		pen	4	9	22	2	8	-	679
ECLL800			4	9	23	2	7	-	1-2
"			4	9	23	2	-	-	2-3-9
"			4	9	23	2	-	-	6-8-9
ED500*			4	9	32	2	1	123679	80
"		Cap goes to top of tube.							
"		*Must use magnoval adapter.							
EF22			1	9	4	1	7	-	2346
EF37A			2	9	25	2	8	27	340
EF39			2	9	5	1	8	-	3450
EF92			3	9	6	1	2	-	1567
EF95			3	9	25	2	27	27	156
EF804			4	9	23	2	3	26	789
EF806S			4	9	26	2	3	27	169
EFL200		pen-1	5	9	20	2	7	-	890
"		pen-2	5	9	20	2	2	-	134
EH900S		tot	3	9	5	1	2	-	1567
"		tri	3	9	5	1	-	-	16
EK11			6	13	24	3	2	19	10

TUBE	KEY		A	B	C	D	CATH	CONT	TEST
	AT	SECT							
EL13			2	9	23	2	8	-	567
EL32			2	9	6	1	8	-	340
EL33			2	9	24	2	8	-	345
EL36			2	9	23	2	38	1348	459
"		May show short on 1-3-4-8.							
EL81			4	9	20	2	3	16789	●2780
"		●Ignore glow on 7.							
EL82			2	9	24	2	3	-	279
EL83			4	9	22	2	3	-	127
EL85			4	9	6	1	3	1268	●126879
"		●Ignore glow on 1-6.							
EL91			3	9	25	2	2	-	157
EL500*			4	9	22	2	38	123678	160
"		*Must use magnoval adapter. Grid cap goes to top of tube. Lever 2-7 must be thrown to open position.							
EL503*			4	9	21	2	26	123678	●13789
"		●Ignore glow on 1-3-7.							
"		*Must use magnoval adapter.							
EL504*			4	9	22	2	38	123678	160
"		*Must use magnoval adapter. Grid cap goes to top of tube. Levers 2-7 must be thrown to open position.							
EL505*			4	9	20	2	9	123678	680
"		*Must use magnoval adapter. Cap goes to top of tube. Levers 1-3 must be thrown to open position.							
EL802			4	9	20	2	1	3689	●2687
"		●Ignore glow on 6.							
EL821			4	9	3	1	3	-	278
ELL80		pen-1	4	9	22	2	7	-	123
"		pen-2	4	9	22	2	-	-	689
EM34			2	9	0	4	8	-	365
"		See instructions for eye test.							
EM87		tri	4	9	29	2	3	268	19
"		eye	4	9	0	4	-	-	●67
"		●Levers 2-8 must be thrown to open position. See instructions for eye test.							
EN32			1	9	27	2	28	-	356
EQ80			4	9	23	2	38	38	167
EY80			4	9	24	2	3	-	9
EY81			4	9	22	2	0	*	29
"		*May show short on all pins.							
EY82			4	9	24	2	3	-	9
EY86			258	9	21	4	-	1469	0
EY87			258	9	21	4	-	1469	0
EY500*			4	9	20	2	0	278	●278
"		●Ignore glow on 2-7. Cap goes top of tube.							
"		*Must use magnoval adapter.							

TUBE	KEY AT SECT	A	B	C	D	CATH	CONT	TEST
GY501*		248	4	20	4	-	14589	0
"	*Must use magnoval adapter. Cap goes to top of tube.							
GZ32	plate-1	2	8	6	1	-	-	4
"	plate-2	2	8	6	1	-	-	6
HBC91	tri	3	13	27	2	2	-	17
"	di-1	3	13	27	3	-	-	5
"	di-2	3	13	27	3	-	-	6
HCC85	tri-1	5	15	22	2	8	-	67
"	tri-2	5	15	22	2	3	-	12
HCH81	tri	4	13	25	2	3	-	89
"	pen	4	13	23	2	3	-	126
HL94		3	19	21	2	1	25	●2567
"	●Ignore glow on 2.							
LC900		3	4	21	2	27	27	15
"	Lever 2 must be thrown to open position.							
LCF80	tri	4	9	23	2	8	-	19
"	pen	4	9	22	2	7	-	236
LCF200	tri	5	9	22	2	1	-	90
"	pen	5	9	20	2	2	-	378
LCF201	tri	5	9	22	2	1	-	90
"	pen	5	9	20	2	2	-	378
LCF801	tri	4	9	21	2	13	13	89
"	pen	4	9	20	2	-	-	267
LCF802	tri	4	9	22	2	8	-	19
"	pen	4	9	21	2	7	-	236
LCH200	tri	5	8	20	2	9	-	80
"	hep	5	8	21	2	1	-	347
LCL80	tri	4	6	25	2	3	-	12
"	pen	4	6	22	2	-	-	689
LCL84	tri	4	12	23	2	3	-	12
"	pen	4	12	23	2	7	-	689
LCL85	tri	4	12	24	2	3	-	12
"	pen	4	12	22	2	8	-	679
LF183		4	6	22	2	13	13	2789
LF184		4	6	21	2	13	13	2789
LFL200	pen-1	5	12	20	2	7	-	890
"	pen-2	5	12	20	2	2	-	134
LL86		4	12	21	2	3	*	●126789
"	●Ignore glow on 1-6-7.							
"	*May show short on 1-2-6-7-8-9.							
LL505*		4	18	20	2	9	123678	680
"	Levers 1-3 must be thrown to open position.							
"	*Must use magnoval adapter.							
LL509*		4	18	20	2	9	123678	680
"	*Must use magnoval adapter.							
"	Levers 1-3 must be thrown to open position.							
"	Cap goes to top of tube.							

TUBE	KEY AT SECT	A	B	C	D	CATH	CONT	TEST
LL521*		4	17	20	2	9	123678	●130
"	●Ignore glow on 1. Cap goes to top of tube.							
"	*Must use magnoval adapter. Levers 6-8 must be thrown to open position.							
LL802		4	12	20	2	1	*	●2687
"	*Cont 3-6-8-9.							
"	●Ignore glow on 6.							
LY81		4	12	22	2	0	*	29
"	*May show short on all pins.							
LY88		4	17	24	3	0	*	9
"	*Must show short on 1-2-3-6-7-8. Levers 1-2-3-6-7-8 must be thrown to open position.							
M8096		4	9	4	1	7	89	●13689
"	●Ignore glow on 8.							
N22LL*		4	16	20	2	3	17	●1679
"	●Ignore glow on 1-6.							
"	*Must use magnoval adapter.							
PC88		4	6	20	2	2	13679	●136798
"	●Ignore glow on 1-3-6-7.							
PC95		3	5	20	2	17	17	25
PC900		3	6	21	2	27	27	15
"	Lever 2 must be thrown to open position.							
PCC85	tri-1	4	11	22	2	8	-	67
"	tri-2	4	11	22	2	3	-	12
PCC88	tri-1	4	9	23	2	8	-	67
"	tri-2	4	9	23	2	3	-	12
PCC189	tri-1	4	10	22	2	8	-	67
"	tri-2	4	10	22	2	3	-	12
PCF86	tri	4	10	23	2	3	13	67
"	pen	4	10	22	2	1	-	289
PCF200	tri	5	10	22	2	1	-	90
"	pen	5	10	20	2	2	-	378
PCF201	tri	5	10	22	2	1	-	90
"	pen	5	10	20	2	2	-	378
PCF801	tri	4	11	21	2	13	13	89
"	pen	4	11	20	2	-	-	267
PCF802	tri	4	12	22	2	8	-	19
"	pen	4	12	21	2	7	-	236
PCF805	tri	4	10	21	2	68	68	19
"	pen	4	10	19	2	-	-	237
"	Cathode short test-throw 6-8 together.							
PCH200	tri	5	11	20	2	9	-	80
"	hep	5	11	21	2	1	-	347
PCL81	tri	4	13	26	2	38	38	17
"	pen	4	13	23	2	-	-	269
PCL82	tri	4	15	24	2	8	-	19
"	pen	4	15	21	2	2	-	367
PCL84	tri	4	14	23	2	3	-	12
"	pen	4	14	24	2	7	-	689

TUBE	KEY		A	B	C	D	CATH	CONT	TEST
	AT	SECT							
PCL85		tri	4	16	24	2	3	-	12
"		pen	4	16	22	2	8	-	679
PCL86		tri	4	14	26	2	2	-	19
"		pen	4	14	23	2	7	-	368
PD500*			4	10	32	2	1	123679	80
"			*Must use magnoval adapter. Cap goes to top of tube.						
PF86			4	7	23	2	3	27	169
PFL200		pen-1	5	15	20	2	7	-	890
"		pen-2	5	15	20	2	2	-	134
PL81			4	17	21	2	3	16789	280
"			Lever 7 must be thrown to open position.						
PL82			4	5	21	2	3	-	279
PL83			4	14	25	2	3	-	1267
PL84			4	14	18	3	3	126789	279
"			Levers 1-6-8 must be thrown to open position.						
PL500*			4	18	22	2	38	123678	160
"			*Must use magnoval adapter. Grid cap goes to top of tube. Levers 2-7 must be thrown to open position.						
PL504*			4	18	22	2	38	123678	160
"			*Must use magnoval adapter. Grid cap goes to top of tube. Levers 2-7 must be thrown to open position.						
PL521*			4	19	20	2	9	123678	●130
"			●Ignore glow on 1. Cap goes to top of tube.						
"			*Must use magnoval adapter. Levers 6-8 must be thrown to open position.						
PM84		tri	4	6	34	2	3	268	19
"		eye*	4	6	0	4	-	-	67
"			*Levers 2-8 must be thrown to open position. See instructions for eye test.						
PY500*			4	19	22	2	0	278	●278
"			●Ignore glow on 2-7. Cap goes top of tube.						
"			*Must use magnoval adapter.						
UAA91		di-1	3	16	18	3	1	-	7
"		di-2	3	16	18	3	5	-	2
UBF89		pen	4	16	24	2	3	-	1269
"		di-1	4	16	21	3	-	-	7
"		di-2	4	16	21	3	-	-	8
UCC85		tri-1	4	18	22	2	8	-	67
"		tri-2	4	18	22	2	3	-	12
UCF12		tri	2	17	19	3	8	-	45
"		pen	2	17	19	3	-	-	167
UCL82		tri	4	20	19	3	8	-	19
"		pen	4	20	19	3	2	-	367
UL84			4	19	23	2	3	12689	●126897
"			●Ignore glow on 1-6-8.						

TUBE	KEY AT	SECT	A	B	C	D	CATH	CONT	TEST
XC95			3	4	22	2	17	17	256
XC900			3	3	21	2	27	27	15
"		Lever 2 must be thrown to open position.							
XCC189		tri-1	4	6	22	2	8	-	67
"		tri-2	4	6	22	2	3	-	12
XCF80		tri	4	6	23	2	8	-	19
"		pen	4	6	22	2	7	-	236
XCF801		tri	4	6	21	2	13	13	89
"		pen	4	6	20	2	-	-	267
XCL82		tri	4	10	25	2	8	-	19
"		pen	4	10	23	2	2	-	367
XCL84		tri	4	11	23	2	3	-	12
"		pen	4	11	23	2	7	-	689
XCL85		tri	4	12	24	2	3	-	12
"		pen	4	12	22	2	8	-	679
XF86			4	4	23	2	3	27	169
XL136			2	13	23	2	38	1348	459
"		Must show short on 1-3-4-8.							
"		Cathode short test-throw 3-8 together.							
XL84			4	11	5	1	3	12	●1279
"		●Ignore glow on 1.							
XL86			4	11	21	2	3	*	●126789
"		●Ignore glow on 1-6-7.							
"		*May show short on 1-2-6-7-8-9.							
XL500*			4	13	22	2	38	123678	160
"		*Must use magnoval adapter.							
"		Grid cap goes to top of tube. Levers 2-7							
"		must be thrown to open position.							
XL504*			4	13	22	2	38	123678	160
"		Levers 2-7 must be thrown to open position.							
"		*Must use magnoval adapter.							
YC97			3	5	22	2	17	17	25
YC98			246	7	0	0	-	-	19
YL1370			2	9	22	2	146	146	350
YL1371			2	13	25	2	146	146	350