

TRC 2-1-70 (Replaces 10-1-68 Issue)

TUBE TEST DATA

Models
640, 660

FOR USE WITH
ROLL CHART TRC H2B

ETRONICS SERVICE INC.

1744 ROCKAWAY AVE. • HEWLETT, L.I., N.Y. 11557

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
1AU2		4	2	32	4	-	19	19
1AY2		1	2	20	4	-	-	0
	Insert leads into pins 1 & 6 of 9 pin socket							
1BC2		258	2	25	4	-	169	0
1BG2		1	2	17	4	-	-	0
	Insert bottom leads into pins 1 & 2 of 9 pin socket							
	Cap goes to top lead							
1BQ2		258	2	26	4	-	1469	0
1DK29		1	2	17	4	-	-	0
	Insert bottom leads into pins 1 & 2 of 9 pin socket							
	Cap goes to top lead							
1K3		2	2	35	4	-	7	0
	OK above 20 on meter scale. May show short on 1-3-5-8							
2AH2								
(Key at 2)	CAUTION: Lever 5 must be thrown to open position							
		1	4	26	4	-	-	0
	Grid cap goes to top of tube. May show short on 3-4-7-8-9							
2AS2								
(Key at 5)		4	4	27	4	-	17	0
	Cap goes to top of tube							
2AV2		4	3	29	4	-	1236789	9
	Throw levers 1-2-3-6-7-8 to open position							
2AZ2		5	3	20	4	-	1469	0
	Levers 2-8 must be thrown to open position							
2BA2		4	3	15	4	-	19	●19
	●Ignore glow on 1							
2BJ2								
	CAUTION: Levers 2-8 must be thrown to open position							
	before inserting tube and must remain in open position							
	throughout all tests including short tests							
		5	3	44	3	1469	0	
	May show short on 3-7							
2BU2								
(Key at 5)		4	4	17	4	1467	1467	0
	Cap goes to top of tube							
2C50	Tri-1	7	13	24	2	3	-	12
"	Tri-2	7	13	24	2	6	-	45
2CN3		2	2	17	4	-	35	0
2DS4		4	3	18	3	3	-	12
2DV4		3	3	19	2	7	1246	●1246
	●Ignore glow on 1-4							
2DZ4		3	4	24	2	5	-	1267
	Must show short on 1-2-6-7							
2EG4		4	2	42	3	3	-	1
2GU5		3	4	21	2	27	27	156
2GW5		3	4	20	2	5	26	●126
	●Ignore glow on 2							
2HA5		3	3	21	2	27	27	15
	Lever 2 must be thrown to open position							

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
2HK5		3	3	21	2	27	27	15
2HM5		3	4	22	2	27	27	15
Lever 2 must be thrown to open position								
2HQ5		3	3	20	2	27	27	15
2HR8		4	4	23	2	3	27	169
3AF3		4	8	18	3	0	29	●29
●Ignore glow on 2								
3AJ8	Hep	5	5	24	2	3	-	1267
"	Tri	5	5	27	2	-	-	89
3AT2								
(Key at 6)		5	4	21	4	-	28	0
Lever 1 must be thrown to open position								
Cap goes to top of tube								
3AW2								
(Key at 5)		4	5	15	4	-	17	0
Cap goes to top of tube								
3AW3		2	5	48	3	-	378	0
3BH2*		248	4	20	4	-	14589	0
*Must use magnoval adapter. Cap goes to top of tube								
3BL2								
(Key at 5)		4	5	16	4	-	167	0
Cap goes to top of tube								
3BM2								
(Key at 5)		4	5	12	4	-	167	0
Cap goes to top of tube								
3BN2								
(Key at 6)		5	4	21	4	-	28	0
Lever 1 must be thrown to open position								
Cap goes to top of tube								
3BS2								
(Key at 5)		4	5	15	4	-	17	0
Cap goes to top of tube								
3BT2								
(Key at 5)		4	5	17	4	1467	1467	0
Cap goes to top of tube								
3CA3		2	5	26	4	-	-	0
3CN3		2	5	17	4	-	35	0
3CU3		2	5	14	4	-	8	0
3CX3		3	5	17	4	-	3468	0
3CY3		2	5	20	4	12357	12357	0
3CZ3		2	5	48	3	-	78	0
3DB3		2	5	27	4	17	12357	0
3DC3		2	5	13	4	-	12357	0
3DZ4		3	5	24	2	5	-	1267
Must show short on 1-2-6-7								
3DZ11		5	7	21	3	7	71	15
3GK6		4	5	23	2	1	39	●2379
●Ignore glow on 3								

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
3GU5		3	5	21	2	27	27	156
3GW5		3	5	20	2	5	26	●126
3HA5		3	4	21	2	27	27	15
●Ignore glow on 2 Lever 2 must be thrown to open position								
3HE7 (Key at 0)	Di	1	5	16	3	4	-	2
*CAUTION: Lever 5 must be thrown to open position before inserting tube								
(Key at 8)	Pen*	7	5	16	2	3	-	46
3HF5 (Key at 4)		3	5	23	2	18	1278	2790
Must show short on 1-2-7-8. Grid cap goes to top of tube								
3HK5		3	4	21	2	27	27	15
3HM5		3	4	22	2	27	27	15
Lever 2 must be thrown to open position								
3HM6		4	5	20	2	13	13	278
3HQ5		3	5	20	2	27	27	15
3HS8	Pen-1	4	5	23	2	1	-	2789
"	Pen-2	4	5	23	2	-	-	2367
3HT6		4	5	22	2	13	-	278
Lever 3 must be thrown to open position								
3JC6		4	5	22	2	13	13	278
3JD6		4	5	22	2	13	13	278
3KF8	Pen-1	4	5	21	2	1	-	278
"	Pen-2	4	5	21	2	-	-	237
3KT6		4	5	21	2	13	13	278
3M-P26		3	4	22	2	2	-	156
4AB8	Tri	4	6	25	2	3	-	12
"	Pen	4	6	22	2	-	-	689
4AF4		3	6	23	2	5	1267	●1726
●Ignore glow on 1-2								
4DL4		4	6	20	2	2	13679	●136798
●Ignore glow on 1-3-6-7								
4ER5		3	5	20	2	17	17	25
4GJ7	Tri	4	6	21	2	13	13	89
"	Pen	4	6	20	2	-	-	267
4GK5		3	6	22	2	17	17	25
4GW5		3	6	20	2	5	26	●126
●Ignore glow on 2								
4GX6		3	6	23	2	2	-	1567
4GX7	Tri	4	6	21	2	13	13	89
"	Pen	4	6	20	2	-	-	267
4GZ5		3	6	22	2	1	25	●2567
●Ignore glow on 2								
4HA5		3	6	21	2	27	27	15
Lever 2 must be thrown to open position								
4HA7 (Key at 3)	Tri-1	2	7	26	2	6	-	15
(Key at 5)	Tri-2	4	7	26	2	9	-	12

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
4HC7								
(Key at 0)	Tri-1	1	6	26	2	4	-	79
(Key at 6)	Tri-2	7	6	26	2	9	-	48
4HG8	Tri	4	7	23	2	3	13	67
"	Pen	4	7	22	2	1	-	289
4HK5		3	6	21	2	27	27	15
4HM5		3	6	22	2	27	27	15
Lever 2 must be thrown to open position								
4HM6		4	6	20	2	13	13	278
4HQ5		3	6	20	2	27	27	15
4HR8		4	7	23	2	3	27	169
4HS8	Pen-1	4	6	23	2	1	-	2789
"	Pen-2	4	6	23	2	-	-	2367
4HT6		4	6	22	2	13	-	278
Lever 3 must be thrown to open position								
4JC6		4	7	22	2	13	13	278
4JD6		4	7	22	2	13	13	278
4JH6		3	6	22	2	2	-	156
4JK6		3	5	21	2	2	-	156
4JL6		3	5	22	2	2	-	156
4KE8	Tri	4	6	24	2	8	-	19
"	Pen	4	6	23	2	7	-	236
4KF8	Pen-1	4	6	21	2	1	-	278
"	Pen-2	4	6	21	2	-	-	237
4KN8	Tri-1	4	6	20	2	8	-	67
"	Tri-2	4	6	20	2	3	-	12
4KT6		4	6	21	2	13	13	278
4LJ8	Tri	4	6	21	2	38	38	12
"	Pen	4	6	20	2	-	-	679
4M-P12		3	7	22	2	2	-	156
4M-P26		3	6	22	2	2	-	156
4R-HH2	Tri	4	6	23	2	8	-	67
"	Tri	4	6	23	2	3	-	12
4R-HH8	Tri-1	4	6	20	2	8	-	67
"	Tri-2	4	6	20	2	3	-	12
5AF4		3	7	23	2	5	1267	●1726
●Ignore glow on 1-2								
5AF11								
(Key at 7)	Pen	6	7	19	3	3	-	459
(Key at 2)	Di-1	1	7	19	3	9	-	56
(Key at 0)	Di-2	1	7	19	3	5	-	68
5BC3	Di-1	1	8	12	1	-	-	89
CAUTION: - Lever 2 must be thrown to open position								
"	Di-2	1	8	10	1	-	-	56
CAUTION: - Lever 2 must be thrown to open position								
Must show short on 5-6-8-9. Fil Cont - 1-2-3								
5CR8	Tri	4	7	22	2	8	-	19
"	Pen	4	7	21	2	3	-	267

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
5DG4	Pl-1	1	8	25	2	-	-	7
"	Pl-2	1	8	25	2	-	-	5
5DJ4	Pl-1	1-2	8	9	2	-	3456	34
"	Pl-2	1-2	8	9	2	-	-	56
5EW6		3	8	20	2	2	-	156
5GJ7	Tri	4	9	21	2	13	13	89
"	Pen	4	9	20	2	-	-	267
5GS7	Tri	4	8	21	2	38	38	12
"	Pen	4	8	20	2	-	-	679
5GX6		3	7	23	2	2	-	1567
5GX7	Tri	4	8	21	2	13	13	89
"	Pen	4	8	20	2	-	-	267
5HA7								
(Key at 3)		2	6	26	2	6	-	15
(Key at 5)		4	6	26	2	9	-	12
5HB7	Tri	4	7	23	2	13	13	89
"	Pen	4	7	24	2	13	13	267
Lever 1 must be thrown to open position								
5HC7								
(Key at 0)	Tri-1	1	8	26	2	4	-	79
(Key at 6)	Tri-2	7	8	26	2	9	-	48
5HG8	Tri	4	8	23	2	3	13	67
"	Pen	4	8	22	2	1	13	289
5HZ6		4	8	17	3	2	-	156
5JK6		3	8	21	2	2	-	156
5JL6		3	8	22	2	2	-	156
5KD8	Tri	4	8	22	2	8	-	19
"	Pen	4	8	22	2	7	-	236
5KE8	Tri	4	8	24	2	8	-	19
"	Pen	4	8	23	2	7	-	236
5KZ8	Tri	4	7	22	2	8	-	19
"	Pen	4	7	22	2	3	-	267
5LJ8	Tri	4	8	21	2	38	38	12
"	Pen	4	8	20	2	-	-	679
5MB8	Tri	4	8	20	2	3	-	12
"	Pen	4	8	19	2	8	-	679
5M-HH3	Tri	3	7	23	2	7	-	25
"	Tri	3	7	23	2	7	-	16
5MK9		3	7	11	1	-	4	5
5R-K16	Pl-1	4	7	27	2	-	-	1
"	Pl-2	4	7	27	2	-	-	8
5U9	Tri	5	9	22	2	1	-	90
"	Pen	5	9	20	2	2	-	378
5V9	Tri	5	8	20	2	9	-	80
"	Hep	5	8	21	2	1	-	347
5X9	Tri	5	9	22	2	1	-	90
"	Pen	5	9	20	2	2	-	378

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
6AC9								
(Key at 0)	Di	1	9	16	3	3	3	2
(Key at 7)	Pen	6	9	20	2	6	-	345
6AC10								
(Key at 5)	Tri-1	4	9	21	2	9	-	12
(Key at 0)	Tri-2	1	9	21	2	6	-	57
(Key at 3)	Tri-3	4	9	21	2	6	-	15
6AD10								
(Key at 2)	Pen-1	1	9	20	2	4	-	589
(Key at 6)	Pen-2	5	9	21	2	2	-	134
6AF9	Pen-1	5	9	20	2	7	-	890
"	Pen-2	5	9	20	2	2	-	134
May show short on 2								
6AF11								
(Key at 0)	Tri-1	1	9	24	2	5	-	68
	Tri-2	1	9	25	2	7	-	34
(Key at 5)	Pen	6	9	25	2	1	-	237
6AG9								
(Key at 0)		1	9	21	2	6	-	57
(Key at 6)		5	9	21	2	2	-	348
6AG11								
(Key at 8)	Tri-1	9	9	22	2	4	-	23
	Di-1	9	9	24	2	6	-	5
(Key at 2)	Tri-2	3	9	22	2	6	-	78
	Di-2	3	9	24	2	4	-	5
		8	9	20	1	5	27	2
6AG12								
6AH9								
(Key at 0)	Tri	1	9	23	2	4	56	23
(Key at 7)	Pen	6	9	21	2	1	-	250
6AJ9	Tri	5	9	23	2	1	-	90
"	Pen	5	9	22	2	2	-	378
6AK9								
(Key at 8)	Pen	7	9	22	2	2	-	34
	Tri-1	7	9	24	2	2	-	56
(Key at 0)	Tri-2	1	9	26	2	7	-	23
6AK10								
(Key at 0)	Tri-2	1	9	22	2	6	-	57
(Key at 6)	Tri-3	5	9	22	2	9	-	48
(Key at 8)	Tri-1	7	9	22	2	0	-	45
6AL9								
(Key at 2)	Tri	3	9	21	2	8	-	79
(Key at 5)	Pen	4	9	22	2	1	-	2379
6AL11								
(Key at 2)	Pen-1	1	9	18	3	4	3	5689
(Key at 6)	Pen-2	5	9	18	3	2	7	134
6AM5		3	9	25	2	2	-	157
6AN6	Di-1	1	9	20	3	6	-	2
"	Di-2	1	9	18	3	-	-	3
"	Di-3	1	9	20	3	-	-	4
"	Di-4	1	9	21	3	-	-	5

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
6AQ4		3	9	21	2	25	1256	●167
	●Ignore glow on 1							
6AR8	Pen-1	4	9	24	2	7	-	369
"	Pen-2	4	9	24	2	-	-	368
6AR11								
(Key at 2)	Pen-2	3	9	21	2	8	-	4567
(Key at 8)	Pen-1	9	9	21	2	6	-	2345
6AS11								
(Key at 0)	Tri-1	1	9	23	2	5	-	68
	Tri-2	1	9	24	2	7	-	34
(Key at 5)	Pen	6	9	22	2	1	-	237
6AV11								
(Key at 5)	Tri-1	6	9	26	2	9	-	12
	Tri-3	6	9	26	2	8	-	37
(Key at 2)	Tri-2	3	9	26	2	8	-	79
6AX3								
(Key at 5)		6	9	24	2	0	29	●29
	●Ignore glow on 2							
6AY3		4	9	24	2	9	27	●27
	●Ignore glow on 2							
6AY11								
(Key at 0)	Di-2	1	9	25	2	2	-	3
	Tri-1	1	9	26	2	9	-	78
	Tri-2	1	9	25	2	4	-	56
(Key at 4)	Di-1	3	9	25	2	2	-	1
6B10								
(Key at 0)	Tri-1	1	9	25	2	7	-	56
	Tri-2	1	9	25	2	2	-	34
(Key at 6)	Di-1	7	9	18	3	2	-	3
	Di-2	7	9	18	3	-	-	1
6B32	Di-1	3	9	17	3	1	-	7
"	Di-2	3	9	17	3	5	-	2
6BA3		4	9	4	1	9	27	2
	May show short on 2-7							
6BA11								
(Key at 4)	Pen-1	3	9	24	2	0	-	678
(Key at 0)	Pen-2	1	9	24	2	8	-	346
(Key at 8)	Tri	7	9	26	2	5	-	46
6BC5		3	9	23	2	27	27	156
	Must show short on 2-7							
	Cathode short test - throw 2-7 together							
6BD11								
(Key at 0)	Tri-1	1	9	24	2	5	-	68
	Tri-2	1	9	25	2	7	-	34
(Key at 5)	Pen	4	9	25	2	1	-	237
6BE3								
(Key at 2)		1	9	23	2	9	60	60
	Must show short on 6-0							

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
6BE7		4	9	23	2	38	38	167
6BF8	Di-1	4	9	25	2	6	-	9
"	Di-2	4	9	25	2	-	-	8
"	Di-3	4	9	25	2	-	-	7
"	Di-4	4	9	25	2	-	-	3
"	Di-5	4	9	25	2	-	-	2
"	Di-6	4	9	25	2	-	-	1
6BF11								
(Key at 0)	Pen-1	1	9	28	2	2	-	3567
(Key at 8)	Pen-2	7	9	23	2	4	-	356
6BH11								
(Key at 0)	Tri-1	1	9	20	2	2	-	34
	Tri-2	1	9	20	2	5	-	67
(Key at 7)	Pen	6	9	20	2	5	-	234
6BJ3								
(Key at 0)		1	9	24	2	7	-	4
6BK4		2	9	22	3	13468	13468	50
6BK8		4	9	26	2	3	27	169
6BK11								
(Key at 5)	Tri-1	6	9	24	2	9	-	12
	Tri-3	6	9	24	2	8	-	37
(Key at 2)	Tri-2	3	9	24	2	8	-	79
6BN11								
(Key at 7)	Pen-1	6	9	20	2	2	-	135
(Key at 2)	Pen-2	1	9	20	2	4	-	567
6BR3		4	9	18	3	0	29	●29
	●Ignore glow on 2							
6BR7	Tri	9	5	23	2	3	45	12
"	Di-1	9	5	18	3	8	-	7
"	Di-2	9	5	18	3	-	-	6
6BS3		4	9	16	3	9	27	●27
	●Ignore glow on 2							
6BT6	Tri	3	9	24	2	2	-	17
"	Di-1	3	9	26	3	-	-	5
"	Di-2	3	9	26	3	-	-	6
6BV11								
(Key at 7)	Pen-1	6	9	21	2	2	-	134
(Key at 2)	Pen-2	1	9	21	2	7	-	568
6BW6		4	9	24	2	3	12	1278
6BW11								
(Key at 7)	Pen-1	6	9	21	2	4	-	235
(Key at 2)	Pen-2	1	9	20	2	4	-	567
6BY8	Pen	4	9	5	1	9	-	178
"	Di	4	9	17	3	3	-	6
6BY11								
(Key at 0)	Pen-1	1	9	21	2	2	-	3567
(Key at 8)	Pen-2	7	9	21	2	4	-	356
6BZ3								
(Key at 0)		1	9	16	3	7	-	4

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
6C9	Tet-1	4	9	24	2	6	-	789
"	Tet-2	4	9	24	2	0	-	123
6CA11								
(Key at 0)	Tri-1	1	9	24	2	7	-	23
	Tri-2	1	9	21	2	5	-	46
(Key at 8)	Pen	7	9	21	2	4	-	356
6CD3								
(Key at 0)		1	9	20	2	7	-	4
6CE3								
(Key at 0)		1	9	20	2	7	-	4
6CF8		4	9	26	2	3	27	169
6CG3								
(Key at 0)		1	9	16	3	7	-	4
6CG8	Tri	4	9	24	2	38	38	12
"	Pen	4	9	23	2	-	-	679
6CH3		4	9	20	2	9	27	●27
	●Ignore glow on 2							
6CJ3		4	9	20	2	9	27	2
	Lever 7 must be thrown to open position							
6CJ6		4	9	20	2	3	16789	●2780
	●Ignore glow on 7							
6CK3		4	9	20	2	9	27	●27
	●Ignore glow on 2							
6CK6		4	9	22	2	3	-	127
6CL3		4	9	20	2	9	27	●27
	●Ignore glow on 2							
6CM3		4	9	22	2	9	27	●27
	●Ignore glow on 2							
6CM4		4	9	20	2	37	*	●12689
	*Must show short on 1-2-3-6-7-8-9							
	●Ignore glow on 1-2-6-8							
6CM5		2	9	23	2	38	1348	459
	May show short on 1-3-4-8							
	Cathode short test - throw lever 3-8 together							
6CR8	Tri	4	9	22	2	8	-	19
"	Pen	4	9	21	2	3	-	267
6CT3		4	9	23	2	9	26	●26
	●Ignore glow on 2							
6DE7	Tri-1	4	9	9	1	8	23	67
"	Tri-2	4	9	3	1	9	-	●123
	●Ignore glow on 2							
6DL4		4	9	21	2	2	13679	18
	Levers 3-6-7-9 must be thrown to open position							
6DM4		7	9	24	2	3	-	5
6DQ4		7	9	18	3	3	-	5
6DR4		3	9	24	2	7	15	●156
	●Ignore glow on 1							
6DR7	Tri-1	4	9	28	2	8	23	67
"	Tri-2	4	9	23	2	9	-	●123
	●Ignore glow on 2							

TUBE	SECT	A	B	C	D	CATH	CONT	TEST	
6DS4		4	9	18	3	3	-	12	
6DT4		7	9	4	1	3	15	5	
	Lever 1 must be thrown to open position								
6DV4		3	9	19	2	7	1246	●1246	
	●Ignore glow on 1-4								
6DW4		4	9	4	1	9	27	2	
	Lever 7 must be thrown to open position								
6DY5		2	9	24	2	3	-	279	
6DZ4		3	9	24	2	5	-	1267	
	Must show short on 1-2-6-7								
6DZ8	Tri	4	9	28	2	8	-	19	
"	Pen	4	9	23	2	2	-	367	
6EA4	(Key at 2)	1	9	26	3	47	47	80	
	Grid cap goes to top of tube								
6EC4*		4	9	20	2	0	278	●278	
	●Ignore glow on 2-7. Cap goes to top of tube								
	*Must use magnoval adapter								
6ED4*		4	9	32	2	1	123679	80	
	*Must use magnoval adapter. Cap goes to top of tube								
6EF4	(Key at 3)	2	9	34	2	8	-	90	
	Cap goes to top of tube								
6EH4	(Key at 2)	1	9	26	3	47	47	80	
	Cap goes to top of tube								
6EJ4	(Key at 3)	2	9	35	2	8	15	90	
	Cap goes to top of tube								
6EL4		2	9	22	3	13468	13468	50	
6EX6		2	9	22	2	3	-	580	
6FD6		3	9	23	2	7	-	1256	
6FD10		3	10	23	2	7	-	1256	
6FG6	Tri	5	9	21	3	3	268	10	
"	Eye	5	9	0	4	-	-	●7268	
	●Ignore glow on 2-6. See instructions for eye test								
6FM7	(Key at 7)	Tri-1	6	9	19	3	3	-	45
(Key at 2)	Tri-2	1	9	18	3	9	-	57	
6FQ7	Tri-1	4	9	7	1	8	-	67	
"	Tri-2	4	9	7	1	3	-	12	
6FR7	Tri-1	4	9	7	1	8	23	67	
"	Tri-2	4	9	20	2	9	-	●123	
	●Ignore glow on 2								
6FY7	(Key at 5)	Tri-1	4	9	8	1	1	-	23
(Key at 2)	Tri-2	1	9	22	2	9	-	57	

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
6G11								134
(Key at 6)	Pen-1	7	9	23	2	2	-	5689
(Key at 2)	Pen-2	1	9	25	2	4	-	
6GA7								2
(Key at 4)	Di	3	9	24	2	0	-	
	Must show short on 6-7							
(Key at 0)	Pen	1	9	35	2	5	10	237
	Must show short on 2-3							
6G-B3		2	9	18	3	8	-	450
6GB5*		4	9	22	2	38	123678	160
	Lever 2-7 must be thrown to open position							
	*Must use magnoval adapter. Grid cap goes to top of tube							
6G-B6		2	9	18	3	8	-	450
6G-B7		2	9	4	1	8	-	450
6GD7	Tri	4	9	20	2	38	38	12
"	Pen	4	9	20	2	-	-	679
6GE5								7380
(Key at 5)		6	9	23	2	29	2389	7380
	●Ignore glow on 3							
6GF5								7380
(Key at 5)		6	9	23	2	29	2389	7380
	●Ignore glow on 3							
6GF7	Tri-1	4	9	29	2	1	-	89
"	Tri-2	4	9	23	2	3	-	26
6GJ5		4	9	24	2	3	1267	670
	Lever 1-2 must be thrown to open position							
6GJ7	Tri	4	9	21	2	13	13	89
"	Pen	4	9	20	2	-	-	267
6GK6		4	9	23	2	1	39	278
6G-K17		7	9	22	2	3	-	5
6GL7	Tri-1	7	9	26	2	6	-	45
"	Tri-2	7	9	22	2	3	-	12
6GM5		4	9	25	2	7	-	169
6GM8	Tri-1	4	9	23	2	8	-	67
"	Tri-2	4	9	23	2	3	-	12
6GN8	Tri	4	9	24	2	1	-	23
"	Pen	4	9	22	2	6	-	789
6GQ7	Di-1	4	9	17	3	9	-	8
"	Di-2	4	9	17	3	7	-	6
"	Di-3	4	9	17	3	1	-	2
6GS7	Tri	4	9	21	2	38	38	12
"	Pen	4	9	19	2	-	-	679
6GT5		4	9	23	2	3	1267	12679
	●Ignore glow on 1-2							
6GU5		3	9	21	2	27	27	156
	Must show short on 2-7							
6GU7	Tri-1	4	9	24	2	8	5	67
"	Tri-2	4	9	24	2	3	-	12

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
6GV5 (Key at 4)		3	9	24	2	18	1278	2790
		Must show short on 1-2-7-8. Grid cap goes to top of tube Cathode short test - throw 1-8 together						
6GV7	Tri	4	9	21	2	68	68	19
"	Pen	4	9	19	2	-	-	237
		Cathode short test - throw 6-8 together						
6GV8	Tri	4	9	24	2	3	-	12
"	Pen	4	9	22	2	8	-	679
6GW5		3	9	20	2	5	26	●126
		●Ignore glow on 2						
6GW6		2	9	18	3	8	-	450
6GW8	Tri	4	9	26	2	2	-	19
"	Pen	4	9	23	2	7	-	368
6GX6		3	9	23	2	2	-	1567
6GX7	Tri	4	9	21	2	13	13	89
"	Pen	4	9	20	2	-	-	267
6GX8	Tri	4	9	21	2	9	-	18
"	Eye	4	9	0	4	3	-	67
		See instructions for eye test						
6GY5 (Key at 4)		3	9	22	2	18	1278	2790
		Must show short on 1-2-7-8 Cathode short test - throw 1-8 together						
6GY6		3	9	21	2	2	-	1567
6GY8	Tri-1	4	9	28	2	7	-	6
"	Tri-2	4	9	22	2	8	-	39
"	Tri-3	4	9	27	2	-	-	12
6GZ5		3	9	21	2	1	25	●2567
		●Ignore glow on 2						
6HA5		3	9	21	2	27	27	15
		Lever 2 must be thrown to open position						
6HA6		4	9	22	2	1	3689	●2687
		●Ignore glow on 6						
6HB5 (Key at 0)		1	9	22	2	4	-	237
6HB6		4	9	22	2	1	3689	●396827
		●Ignore glow on 3-6						
6HB7	Tri	4	9	23	2	13	13	89
"	Pen	4	9	24	2	13	13	267
		Lever 1 must be thrown to open position						
6HC8	Tri	4	9	18	3	8	-	19
"	Pen	4	9	18	3	2	-	367
6HD5 (Key at 0)		1	9	20	2	4	59	357
		Lever 9 must be thrown to open position						

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
6HD7	Tri	4	9	21	2	13	13	89
"	Pen	4	9	22	2	-	-	267
6HE5 (Key at 2)		1	9	19	3	6	0	4580
		Must show short on 5-0						
6HE7 (Key at 0)	Di	1	9	16	3	4	-	2
		*CAUTION: Lever 5 must be thrown to open position before inserting tube						
(Key at 8)	Pen*	7	9	16	2	3	-	46
6HF5 (Key at 4)		3	9	23	2	18	1278	2790
		Must show short on 1-2-7-8. Grid cap goes to top of tube Cathode short test - throw 1-8 together						
6HF8	Tri	4	9	24	2	1	-	23
"	Pen	4	9	22	2	6	-	789
6HG5		3	9	7	1	2	17	●1756
		●Ignore glow on 1						
6HJ5 (Key at 0)		1	9	20	2	4	59	●3579
		●Ignore glow on 5-7						
6HJ7	Tri	4	9	19	2	13	13	89
"	Pen	4	9	20	2	-	-	267
6HJ8	Pen	4	9	23	2	1	-	2369
"	Di	4	9	24	2	7	-	8
6HK5		3	9	21	2	27	27	15
6HL5		4	9	21	2	3	12	●1279
		●Ignore glow on 1						
6HL8	Tri	4	9	22	2	8	-	19
"	Pen	4	9	21	2	7	-	236
6HM5		3	9	22	2	27	27	15
		Lever 2 must be thrown to open position						
6HM6		4	9	20	2	13	13	278
6HQ5		3	9	20	2	27	27	15
6HR5		3	9	7	1	2	17	●1756
		●Ignore glow on 1						
6HR6		3	9	21	2	7	-	156
6HS5 (Key at 0)		1	9	20	2	4	-	27
		3	9	22	2	7	-	1256
6HS6		4	9	22	2	13	-	278
6HT6		Lever 3 must be thrown to open position						
6HU6	Tri	4	9	29	2	3	268	19
"	Eye	4	9	0	4	-	-	67
		Levers 2-8 must be thrown to open position See instructions for eye test						
6HU8	Pen-1	4	9	22	2	7	-	123
"	Pen-2	4	9	22	2	-	-	689

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
6HV5 (Key at 0)		1	9	20	2	4	-	27
6HW8		4	9	24	2	7	-	123689
6HZ6		4	9	17	3	2	-	156
6J9	Tri-1	4	9	20	2	0	-	78
"	Tri-2	4	9	20	2	-	-	69
"	Tri-3	4	9	20	2	3	-	12
6J10								
(Key at 0)	Pen-1	0	9	26	4	8	1	4567
(Key at 6)	Pen-2	5	9	18	3	9	7	248
6J11								
(Key at 2)	Pen-2	3	9	22	2	8	-	4567
(Key at 8)	Pen-1	9	9	22	2	3	-	2456
6JA8	Tri	4	9	24	2	1	-	23
"	Tet	4	9	24	2	6	-	789
6JB6		4	9	18	3	3	1267	670
	Lever 1-2 must be thrown to open position							
6JC6		4	9	22	2	13	13	278
6JC8	Tri	4	9	18	3	17	7	89
"	Pen	4	9	18	3	-	-	236
	Cathode short test - throw 1-7 together							
6JD6		4	9	22	2	13	13	278
6JE6		4	9	23	2	3	1267	●126780
	●Ignore glow on 1-2. Grid cap goes to top of tube							
6JF6		4	9	20	2	3	1267	●12670
	●Ignore glow on 1-2-6. Grid cap goes to top of tube							
6JG6		4	9	17	3	3	17	279
	Lever 1 must be thrown to open position							
6JH6		3	9	22	2	2	-	1567
6JH8	Sec-1	4	9	24	2	7	5	369
"	Sec-2	4	9	24	2	-	-	368
6JK6		3	9	21	2	2	-	156
6JK8	Tri-1	4	9	18	3	8	-	67
"	Tri-2	4	9	18	3	3	-	12
6JL6		3	9	22	2	2	-	156
6JM6								
(Key at 3)		2	9	21	2	5	-	680
	Grid cap goes to top of tube							
6JN6								
(Key at 5)		6	9	21	2	7	29	380
6JN8	Tri	4	9	22	2	3	-	12
"	Pen	4	9	23	2	8	-	679
6JQ6		4	9	22	2	9	78	●12378
"		4	9	32	2	-	-	6
	●Ignore glow on 7. May show short on 2							
6JR6		4	9	28	3	3	17	279
	Lever 1 must be thrown to open position							

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
6JS6 (Key at 3)		4	9	20	2	5	16	●1680
	●Ignore glow on 1. Cap goes to top of tube							
6JT6		4	9	23	2	3	17	279
	Lever 1 must be thrown to open position							
6JT8	Tri	4	9	23	2	1	-	23
"	Pen	4	9	21	2	6	-	789
6JU6		4	9	20	2	3	1267	●12670
	●Ignore glow on 1-2-6. Grid cap goes to top of tube							
6JU8	Di-1	4	9	24	2	9	*	78
"	Di-2	4	9	24	2	98	-	7
"	Di-3	4	9	24	2	3	-	12
"	Di-4	4	9	24	2	32	-	1
	*Must show short on 2-8							
6JV8	Tri	4	9	18	3	1	-	23
"	Pen	4	9	17	3	-	-	789
6JW8	Tri	4	9	22	2	8	-	19
"	Pen	4	9	21	2	7	-	236
6JX8	Tri	4	9	23	2	3	-	89
"	Hep	4	9	21	2	-	-	267
6JY8	Tri	4	9	23	2	1	-	23
"	Pen	4	9	24	2	6	-	789
6JZ6 (Key at 3)		2	9	20	2	5	-	780
	Grid cap goes to top of tube							
6JZ8 (Key at 8)	Pen	9	9	23	2	4	12	●1230
	●Ignore glow on 1							
(Key at 5)	Tri	6	9	26	2	3	-	27
6KA8	Tri	4	9	24	2	3	-	12
"	Pen	4	9	22	2	3	-	6789
6KD6 (Key at 4)		3	9	20	2	6	1278	●2790
	●Ignore glow on 2. Cap goes to top of tube							
6KD8	Tri	4	9	22	2	8	-	19
"	Pen	4	9	22	2	7	-	236
6KE8	Tri	4	9	24	2	8	-	19
"	Pen	4	9	23	2	7	-	236
6KF8	Pen-1	4	9	21	2	1	-	278
"	Pen-2	4	9	21	2	-	-	237
6KG6*		4	9	20	2	9	123678	680
	*Must use magnoval adapter. Grid cap goes to top of tube							
	Levers 1-3 must be thrown to open position							
6KL8	Pen	4	9	24	2	3	-	1267
"	Di	4	9	28	3	-	-	8
6KM6		4	9	21	2	3	1267	670
	Levers 1-2 must be thrown to open position							
	Grid cap goes to top of tube							

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
6KM8	Di	4	9	27	3	6	-	3
"	Tet-1	4	9	5	1	-	-	178
"	Tet-2	4	9	6	1	-	-	278
"	Tet-3	4	9	5	1	-	-	789
6KN6 (Key at 6)		5	9	20	2	8	4-9	●2490
	●Ignore glow on 4. Cap goes to top of tube							
6KN8	Tri-1	4	9	20	2	8	-	67
"	Tri-2	4	9	20	2	3	-	12
6KR8	Tri	4	9	20	2	1	-	23
"	Pen	4	9	20	2	6	-	789
6KS6		3	9	41	3	1	-	2567
6KT6		4	9	21	2	13	13	278
6KT8	Tri	4	9	21	2	1	-	23
"	Pen	4	9	20	2	6	-	789
6KU8	Di-1	4	9	25	3	1	-	3
"	Di-2	4	9	25	3	1	-	2
"	Pen	4	9	22	2	6	-	789
6KV6		4	9	20	2	3	17	279
	Lever 1 must be thrown to open position							
6KV8	Tri	4	9	23	2	1	-	23
"	Pen	4	9	21	2	6	-	789
6KX8	Tri-1	4	9	24	2	8	-	79
"	Tri-2	4	9	24	2	2	-	13
6KY6		4	9	20	2	1	39	278
6KY8	Tri	4	9	25	2	1	-	89
"	Pen	4	9	21	2	3	-	267
6KZ8	Tri	4	9	22	2	8	-	19
"	Pen	4	9	22	2	3	-	267
6LB6 (Key at 4)		3	9	21	2	6	1278	●2790
	●Ignore glow on 2. Cap goes to top of tube							
6LB8	Tri	4	9	29	2	1	-	23
"	Pen	4	9	22	2	6	-	789
6LC6		2	9	35	2	6	134	50
6LC8	Tri	4	9	24	2	3	5	12
"	Pen	4	9	22	2	7	5	689
	May show short on 3-7							
6LD6		4	9	20	2	1	3689	●2687
	●Ignore glow on 6							
6LE8	Pen-1	4	9	22	2	3	-	189
"	Pen-2	4	9	22	2	-	-	689
6LF6 (Key at 4)		3	9	21	2	6	1278	●2790
	●Ignore glow on 2. Cap goes to top of tube							
6LF8	Tri	4	9	24	2	1	-	23
"	Pen	4	9	21	2	6	-	789
6LG6 (Key at 4)		3	9	22	2	18	1278	790

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
6LH6		2	9	32	2	6	134	50
6LJ6		2	9	36	2	6	134	50
6LJ8	Tri	4	9	21	2	38	38	12
"	Pen	4	9	20	2	-	-	679
6LM8	Tri	4	9	23	2	8	-	19
"	Pen	4	9	23	2	7	-	236
6LN8	Tri	4	9	23	2	8	-	19
"	Pen	4	9	22	2	7	-	236
6LQ6		4	9	23	2	3	1267	●126780
	●Ignore glow on 1-2. Cap goes to top of tube							
6LQ8	Tri	4	9	20	2	1	-	23
"	Pen	4	9	20	2	6	-	789
6LR6 (Key at 3)		4	9	22	2	5	16	●1680
	●Ignore glow on 1. Cap goes to top of tube							
6LR8	Tri	4	9	21	2	1	-	89
"	Pen	4	9	20	2	3	-	267
6LT8	Di-1	4	9	16	3	7	-	8
"	Di-2	4	9	16	3	7	-	6
"	Pen	4	9	19	2	1	-	239
	May show short on 1							
6LU8 (Key at 5)	Tri	6	9	21	2	3	-	27
(Key at 8)	Pen	9	9	21	2	4	12	●1230
	●Ignore glow on 1							
6LX8	Tri	4	9	22	2	8	-	19
"	Pen	4	9	21	2	7	-	236
6LY8	Tri	4	9	22	2	1	-	23
"	Pen	4	9	20	2	6	-	789
6M11 (Key at 0)	Tri-1	1	9	22	2	9	-	78
	Tri-2	1	9	22	2	4	-	56
(Key at 4)	Pen	5	9	23	2	1	-	267
6MB8	Tri	4	9	20	2	3	-	12
"	Pen	4	9	19	2	8	-	679
6MD8	Tri-1	4	9	22	2	7	-	36
"	Tri-2	4	9	22	2	-	-	28
"	Tri-3	4	9	22	2	-	-	19
6ME8	Sec-1	4	9	21	2	7	-	369
"	Sec-2	4	9	21	2	-	-	368
6MF8 (Key at 8)	Pen	9	9	22	2	4	12	●1230
	●Ignore glow on 1							
(Key at 5)	Tri	6	9	21	2	3	-	27
6MG8	Tri	4	9	21	2	8	-	19
"	Pen	4	9	21	2	7	-	236
6M-HH3	Tri	3	9	24	2	7	-	25
"	Tri	3	9	24	2	-	-	16

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
6MJ8								
(Key at 0)	Tri-1	1	9	22	2	3	-	68
(Key at 4)	Tri-2	3	9	22	2	7	-	18
	Tri-3	3	9	22	2	-	-	26
6MK8	Pen-1	4	9	22	2	1	-	237
"	Pen-2	4	9	22	2	-	-	278
<u>6MN8</u>								
(Key at 6)	Tri-1	7	9	24	2	-	-	48
(Key at 5)	Tri-2	6	9	24	2	-	-	29
(Key at 0)	Tri-3	1	9	24	2	3	-	68
6M-P18		3	9	3	1	2	17	●1567
	●Ignore glow on 1							
6MQ8	Tri	4	9	24	2	8	-	19
"	Pen	4	9	23	2	7	-	236
6N3		4	9	24	2	3	-	9
6Q11								
(Key at 5)	Tri-1	6	9	25	2	9	-	12
	Tri-3	6	9	25	2	8	-	37
(Key at 2)	Tri-2	3	9	25	2	8	-	79
6R3		4	9	22	2	0	*	29
	* May show short on all pins							
6R4		4	9	23	2	3	-	18
6R-HH2	Tri	4	9	24	2	8	-	67
"	Tri	4	9	24	2	3	-	12
6R-HH8	Tri-1	4	9	20	2	8	-	67
"	Tri-2	4	9	20	2	3	-	12
6R-K19		4	9	18	3	0	29	●29
	●Ignore glow on 2							
6R-P15		4	9	25	2	3	12	●1279
	●Ignore glow on 1							
6R-P22		4	9	20	2	1	2389	●236
	●Ignore glow on 2. Throw levers 8-9 to open position							
6T9								
(Key at 4)	Tri	3	9	25	2	9	-	68
(Key at 8)	Pen	7	9	3	1	4	-	356
6T10								
(Key at 6)	Pen-1	5	9	19	3	2	-	134
(Key at 2)	Pen-2	1	9	19	3	4	-	5789
6U3		4	9	24	2	3	-	9
6U9	Tri	5	9	22	2	1	-	90
"	Pen	5	9	20	2	2	-	378
6U10								
(Key at 5)	Tri-1	4	9	26	2	9	-	12
(Key at 0)	Tri-2	1	9	26	2	6	-	57
(Key at 3)	Tri-3	4	9	26	2	6	-	15
6V9	Tri	5	9	20	2	9	-	80
"	Hep	5	9	21	2	1	-	347
6X9	Tri	5	9	22	2	1	-	90
"	Pen	5	9	20	2	2	-	378


TUBE	SECT	A	B	C	D	CATH	CONT	TEST
6Y9	Pen-1	5	9	20	2	7	-	890
"	Pen-2	5	9	20	2	2	-	134
6Y10								
(Key at 6)	Pen-1	5	9	21	2	2	-	134
(Key at 2)	Pen-2	1	9	20	2	4	-	5789
6Z10								
(Key at 0)	Pen-1	0	9	26	4	8	1	4567
(Key at 6)	Pen-2	5	9	18	3	9	7	248
7GS7	Tri	4	10	21	2	38	38	12
"	Pen	4	10	20	2	-	-	679
7GV7	Tri	4	10	21	2	68	68	19
"	Pen	4	10	19	2	-	-	237
	Cathode short test - throw 6-8 together							
7KY6		4	10	20	2	1	39	278
7KZ6		4	10	21	2	1	39	278
7M-P18		3	9	3	1	2	17	●1567
	●Ignore glow on 1							
8A8	Tri	4	12	24	2	8	-	19
"	Pen	4	12	24	2	7	-	236
8AC9								
(Key at 0)	Di	1	11	16	3	3	3	2
(Key at 7)	Pen	6	11	20	2	6	-	345
8AC10								
(Key at 5)	Tri-1	4	11	21	2	9	-	12
(Key at 0)	Tri-2	1	11	21	2	6	-	57
(Key at 3)	Tri-3	4	11	21	2	6	-	15
8AL9								
(Key at 2)	Tri	3	11	21	2	8	-	79
(Key at 5)	Pen	4	11	22	2	1	-	2379
8AR11								
(Key at 2)	Pen-2	3	11	21	2	8	-	4567
(Key at 8)	Pen-1	9	11	21	2	6	-	2345
8AV11								
(Key at 5)	Tri-1	6	11	26	2	9	-	12
	Tri-3	6	11	26	2	8	-	37
(Key at 2)	Tri-2	3	11	26	2	8	-	79
8B8	Tri	4	10	25	2	8	-	19
"	Pen	4	10	23	2	2	-	367
8B10								
(Key at 0)	Tri-1	1	11	25	2		-	56
	Tri-2	1	11	25	2		-	34
(Key at 6)	Di-1	7	11	18	3		-	3
	Di-2	7	11	18	3		-	1
8BA11								
(Key at 4)	Pen-1	3	11	24	2	0	-	678
(Key at 0)	Pen-2	1	11	24	2	8	-	346
(Key at 8)	Tri	7	11	26	2	5	-	46

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
8BM11								
(Key at 0)	Pen-2	1	11	21	2	5	-	236
(Key at 8)	Pen-1	7	11	21	2	5	-	246
8BN11								
(Key at 7)	Pen-1	6	11	20	2	2	-	135
(Key at 2)	Pen-2	1	11	20	2	4	-	567
8BQ7	Tri-1	4	10	24	2	8	-	67
"	Tri-2	4	10	24	2	3	-	12
8BQ11								
(Key at 2)	Pen-2	3	11	19	2	8	-	457
(Key at 8)	Pen-1	9	11	19	2	6	-	345
8BU11								
(Key at 0)	Tri-1	1	10	21	2	2	-	34
	Tri-2	1	10	21	2	5	-	67
(Key at 7)	Pen	6	10	21	2	5	-	234
8CB11								
(Key at 2)	Pen-2	3	11	21	2	8	-	4567
(Key at 8)	Pen-1	9	11	21	2	6	-	2345
8CL8	Tri	4	10	23	2	3	-	12
"	Tet	4	10	23	2	8	-	679
8CY5		3	11	23	2	27	27	156
8DX8	Tri	4	11	23	2	3	-	12
"	Pen	4	11	23	2	7	-	689
8FQ7	Tri-1	4	11	6	1	8	-	67
"	Tri-2	4	11	6	1	3	-	12
8GJ7	Tri	4	11	21	2	13	13	89
"	Pen	4	11	20	2	-	-	267
8GM6		3	11	21	2	2	-	1567
8GN8	Tri	4	11	24	2	1	-	23
"	Pen	4	11	22	2	6	-	789
8GU7	Tri-1	4	11	24	2	8	-	67
"	Tri-2	4	11	24	2	3	-	12
8GX7	Tri	4	10	21	2	13	13	89
"	Pen	4	10	20	2	-	-	267
8HA6		4	11	22	2	1	3689	●2687
	●Ignore glow on 6							
8HG8	Tri	4	11	23	2	3	13	67
"	Pen	4	11	22	2	1	13	289
8JK8	Tri-1	4	11	18	3	8	-	67
"	Tri-2	4	11	18	3	3	-	12
8JT8	Tri	4	10	23	2	1	-	23
"	Pen	4	10	21	2	6	-	789
8JU8	Di-1	4	11	24	2	9	*	78
"	Di-2	4	11	24	2	98	-	7
"	Di-3	4	11	24	2	3	-	12
"	Di-4	4	11	24	2	32	-	1
	*Must show short on 2-8							
8JV8	Tri	4	11	18	3	1	-	23
"	Pen	4	11	17	3	-	-	789

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
8KA8	Tri	4	11	24	2	3	-	12
"	Pen	4	11	22	2	3	-	6789
8KR8	Tri	4	10	20	2	1	-	23
"	Pen	4	10	20	2	6	-	789
8KT8	Tri	4	11	21	2	1	-	23
"	Pen	4	11	20	2	6	-	789
8LC8	Tri	4	10	24	2	3	5	12
"	Pen	4	10	22	2	7	5	689
	May show short on 3-7							
8LE8	Pen-1	4	11	22	2	3	-	189
"	Pen-2	4	11	22	2	-	-	689
8LT8	Di-1	4	11	16	3	7	-	8
"	Di-2	4	11	16	3	7	-	6
"	Pen	4	11	19	2	1	-	239
	May show short on 1							
8R-HP1	Tri	4	10	25	2	8	-	19
"	Pen	4	10	23	2	2	-	367
8U9	Tri	5	10	22	2	1	-	90
"	Pen	5	10	20	2	2	-	378
8X9	Tri	5	10	22	2	1	-	90
"	Pen	5	10	20	2	2	-	378
9A8	Tri	4	12	24	2	8	-	19
"	Pen	4	12	24	2	7	-	236
9AB4		3	12	22	2	7	-	16
9AK10								
(Key at 0)	Tri-2	1	12	22	2	6	-	57
(Key at 6)	Tri-1	5	12	22	2	9	-	48
(Key at 8)	Tri-3	7	12	22	2	0	-	45
9BJ11								
(Key at 0)	Pen-2	1	12	16	2	5	-	236
(Key at 8)	Pen-1	7	12	16	2	5	-	246
9CG8	Tri	4	12	24	2	38	38	12
"	Pen	4	12	23	2	-	-	679
9DZ8	Tri	4	12	28	2	8	-	19
"	Pen	4	12	23	2	2	-	367
9EA8	Tri	4	12	22	2	8	-	19
"	Pen	4	12	22	2	7	-	236
9ED4*		4	10	32	2	1	123679	80
	Cap goes to top of tube							
	*Must use magnoval adapter							
9FG6	Tri	4	6	34	2	3	268	19
"	Eye*	4	6	0	4	-	-	67
	*Levers 2-8 must be thrown to open position							
	See instructions for eye test							
9GH8	Tri	4	12	22	2	8	-	19
"	Pen	4	12	22	2	7	-	236
9GV8	Tri	4	12	24	2	3	-	12
"	Pen	4	12	22	2	8	-	679

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
9JW8	Tri	4	12	22	2	8	-	19
"	Pen	4	12	21	2	7	-	236
9KC6		4	11	20	2	1	-	279
9KG6#		4	12	20	2	9	*	680
*Cont Test - 1-2-3-6-7-8								
Levers 1-2-3 must be thrown to open position								
#Must use magnoval adapter. Cap goes to top of tube								
9KV8	Tri	4	11	23	2	1	-	23
"	Pen	4	11	21	2	6	-	789
9KX6		4	11	20	2	1	39	278
9KZ8	Tri	4	12	22	2	8	-	19
"	Pen	4	12	22	2	3	-	267
9LA6		4	11	21	2	1	39	278
9M-HH3	Tri-1	3	11	23	2	7	-	25
"	Tri-2	3	11	23	2	-	-	16
9M-P12		3	11	22	2	2	-	156
9R-AL1	Tri-1	4	11	25	2	8	23	67
"	Tri-2	4	11	21	2	9	-	●123
●Ignore glow on 2								
9R-HR2	Tri	4	12	22	2	8	-	19
"	Pen	4	12	22	2	7	-	236
9V9	Tri	5	12	20	2	9	-	80
"	Hep	5	12	21	2	1	-	347
10AL11								
(Key at 2)	Pen-1	1	12	18	3	4	3	5689
(Key at 6)	Pen-2	5	12	18	3	2	7	134
10CW5		4	12	21	2	3	*	●126789
●Ignore glow on 1-6-7. May show short on 1-2-6-7-8-9								
10DX8	Tri	4	12	23	2	3	-	12
"	Pen	4	12	23	2	7	-	689
10EM7	Tri-1	7	12	26	2	6	-	45
"	Tri-2	7	12	22	2	3	-	12
10FD12	Pen	4	16	24	2	3	-	1269
"	Di-1	4	16	21	3	-	-	7
"	Di-2	4	16	21	3	-	-	8
10FR7	Tri-1	4	12	7	1	8	23	67
"	Tri-2	4	12	20	2	9	-	●123
●Ignore glow on 2								
10GF7	Tri-1	4	12	29	2	1	-	89
"	Tri-2	4	12	23	2	3	-	26
10GH8	Tri	4	12	22	2	8	-	19
"	Pen	4	12	22	2	7	-	236
10GK6		4	12	23	2	1	39	●2379
●Ignore glow on 3								
10GN8	Tri	4	12	24	2	1	-	23
"	Pen	4	12	22	2	6	-	789
10GV8	Tri	4	12	24	2	3	-	12
"	Pen	4	12	22	2	8	-	679

KEEP YOUR TUBE TESTER Up-To-Date

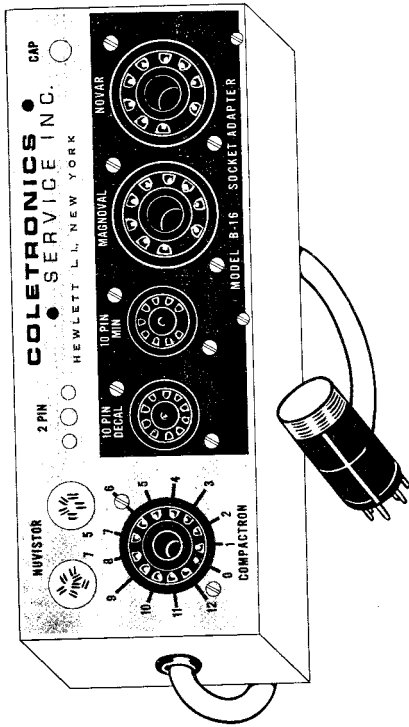

TEST ALL THE NEW TUBES

10 PIN MIN	AND NEWLY RELEASED TYPES
12 PIN COMPACTRON	10 PIN DECAL !
5 PIN NUVISTOR	9 PIN MAGNOVAL !
7 PIN NUVISTOR	2 PIN SPECIAL RECTIFIER !
9 PIN NOVAR	

NET PRICE: \$15.95 plus \$1.25 shipping and handling

MODEL B-16 ADAPTER

- AN EIGHT SOCKET ADAPTER UNIT THAT INSTANTLY MODERNIZES YOUR TUBE TESTER FOR ABOVE TYPE TUBES.
- THE HANDY FLEXIBLE CABLE PLUG IS SIMPLY INSERTED INTO THE EXISTING 9 PIN SOCKET OF YOUR TUBE TESTER. ATTACH THE TESTERS GRID CAP TO THE ADAPTER AND THE UNIT IS NOW READY TO OPERATE.

USE ORDER FORM ON REVERSE SIDE

COLETRONICS SERVICE INC.

1744 Rockaway Ave.

Hewlett, N.Y. 11557

- Please ship Model B - 16 Adapter at \$17.20 each.
- Enclosed find check or money order totaling

New York City Residents - Add 6%
New York State Residents - Add 5%
Canada - Add \$2.00 For Exchange
And Shipping

SHIP TO: —

NAME

STREET

CITY STATE Zip Code

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
10HA6		4	12	22	2	1	3689	●2687
	●Ignore glow on 6							
10HF8	Tri	4	12	24	2	1	-	23
"	Pen	4	12	22	2	6	-	789
10JA8	Tri	4	12	24	2	1	-	23
"	Tet	4	12	24	2	6	-	789
10JT8	Tri	4	12	23	2	1	-	23
"	Pen	4	12	21	2	6	-	789
10JY8	Tri	4	12	18	3	1	-	23
"	Pen	4	12	18	3	6	-	789
10KR8	Tri	4	12	20	2	1	-	23
"	Pen	4	12	20	2	6	-	789
10KU8	Di-1	4	12	25	3	1	5	3
"	Di-2	4	12	25	3	1	-	2
"	Pen	4	12	22	2	6	-	789
10LB8	Tri	4	12	29	2	1	-	23
"	Pen	4	12	22	2	6	-	789
10LD12	Tri	4	18	25	2	7	-	89
"	Di-1	4	18	25	3	-	-	6
"	Di-2	4	18	17	3	3	-	2
"	Di-3	4	18	17	3	-	-	1
10LD13	Tri	4	13	8	1	3	79	12
"	Di-1	4	13	26	3	-	-	8
"	Di-2	4	13	26	3	-	-	6
10LE8	Pen-1	4	12	22	2	3	-	189
"	Pen-2	4	12	22	2	-	-	689
10LW8	Tri	4	12	21	2	1	-	23
"	Pen	4	12	20	2	6	-	789
10LZ8	Tri	4	12	22	2	1	-	23
"	Pen	4	12	20	2	6	-	789
11AF9	Pen-1	5	12	20	2	7	-	890
"	Pen-2	5	12	20	2	2	-	134
	May show short on 2							
11AR11								
(Key at 2)	Pen-2	3	12	21	2	8	-	4567
(Key at 8)	Pen-1	9	12	21	2	6	-	2345
11BM8	Tri	4	13	23	2	8	-	19
"	Pen	4	13	23	2	2	-	367
11BN11								
(Key at 7)	Pen-1	6	12	20	2		-	135
(Key at 2)	Pen-2	1	12	20	2		-	567
11BQ11								
(Key at 2)	Pen-2	3	12	19	2		-	457
(Key at 8)	Pen-1	9	12	19	2	6	-	345
11BT11								
(Key at 2)	Tri-1	1	12	23	2	8	-	79
(Key at 5)	Tri-2	4	12	21	2	9	-	18
(Key at 6)	Pen	5	12	21	2	1	-	348

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
11CA11								
(Key at 0)	Tri-2	1	12	24	2	7	-	23
	Tri-1	1	12	21	2	5	-	46
(Key at 8)	Pen	7	12	21	2	4	-	356
11CY7	Sec-1	4	12	28	2	8	-	67
"	Sec-2	4	12	23	2	9	23	●123
	●Ignore glow on 2							
11DS5		3	12	25	2	2	17	●1756
	●Ignore glow on 1							
11FY7								
(Key at 5)	Tri-1	4	12	8	1	1	-	23
(Key at 2)	Tri-2	1	12	22	2	9	-	57
11HM7		6	8	20	2	1	3459	278
11KV8	Tri	4	12	23	2	1	-	23
"	Pen	4	12	21	2	6	-	789
11LQ8	Tri	4	12	20	2	1	-	23
"	Pen	4	12	20	2	6	-	789
11LT8	Di-1	4	12	16	3	7	-	8
"	Di-2	4	12	16	3	7	-	6
"	Pen	4	12	19	2	1	-	239
	May show short on 1							
11R3		4	12	22	2	0	*	29
	*May show short on all pins							
11Y9	Pen-1	5	12	20	2	7	-	890
"	Pen-2	5	12	20	2	2	-	134
12AE10								
(Key at 6)	Pen-1	5	13	16	3	2	-	134
(Key at 2)	Pen-2	1	13	16	3	4	-	5789
12AF4		3	13	23	2	5	1267	●1726
	●Ignore glow on 1-2							
12AJ7	Tri	4	13	25	2	3	-	89
"	Hep	4	13	23	2	3	-	126
12AL11								
(Key at 2)	Pen-1	1	13	18	3	4	3	5689
(Key at 6)	Pen-2	5	13	18	3	2	7	134
12AU8	Tri	4	13	24	2	1	-	23
"	Pen	4	13	24	2	6	-	789
12AW6		3	13	22	2	2	-	156
12AX3								
(Key at 5)		6	13	24	2	0	29	●29
	●Ignore glow on 2							
12AX12		7	13	23	2	0	28	281
12AY3		4	13	24	2	9	27	●27
	●Ignore glow on 2							
12B-B14*		4	13	20	2	38	123678	●12670
	●Ignore glow on 1-6. Cap goes to top of tube							
	*Must use magnoval adapter							

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
12BE3 (Key at 2)		1	13	23	2	9	60	60
		Must show short on 6-0						
12BF11 (Key at 0)	Pen-1	1	13	28	2	2	-	3567
(Key at 8)	Pen-2	7	13	23	2	4	-	356
12BR3		4	13	18	3	0	29	●29
	●Ignore glow on 2							
12BS3		4	13	16	3	9	27	●27
	●Ignore glow on 2							
12BT3 (Key at 0)		1	13	2	4	7	-	4
12BT6	Tri	3	13	24	2	2	-	17
"	Di-1	3	13	26	3	-	-	5
"	Di-2	3	13	26	3	-	-	6
12BV11 (Key at 7)	Pen-1	6	13	21	2	2	-	134
(Key at 2)	Pen-2	1	13	21	2	7	-	568
12CK3		4	13	20	2	9	27	●27
	●Ignore glow on 2							
12CL3		4	9	20	2	9	27	●27
	●Ignore glow on 2							
12DA6		4	13	24	2	3	16	278
12DK6		3	13	23	2	2	-	1567
12DM4		7	13	24	2	3	-	5
12DM7	Tri-1	9	9	27	2	8	45	67
"	Tri-2	9	9	27	2	3	-	12
12DQ4		7	13	18	3	3	-	5
12DT7	Tri-1	9	9	27	2	8	45	67
"	Tri-2	9	9	27	2	3	-	12
12DW4		4	13	4	1	9	27	2
	Lever 7 must be thrown to open position							
12DZ8	Tri	4	13	28	2	8	-	19
"	Pen	4	13	23	2	2	-	367
12FQ7	Tri-1	4	13	7	1	8	-	67
"	Tri-2	4	13	7	1	3	-	12
12FS5		3	13	22	2	27	27	156
12FV7	Tri-1	5	9	18	3	8	49	67
"	Tri-2	4	9	18	3	3	59	12
12FX5		3	13	17	3	1	25	267
	Lever 5 must be thrown to open position							
12G11 (Key at 6)	Pen-1	7	13	23	2	2	-	134
(Key at 2)	Pen-2	1	13	25	2	4	-	5689
12G-B3		2	13	20	2	8	-	450
12G-B7		2	13	4	1	8	-	450
12GC5		4	13	23	2	7	1363	●18369
	●Ignore glow on 1-3							

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
12GJ5		4	13	24	2	3	1267	670
	Levers 1-2 must be thrown to open position							
12G-K17		7	13	7	1	3	-	5
12GN7		6	9	21	2	1	39	278
12GT5		4	13	23	2	3	1267	●12679
	●Ignore glow on 1-2							
12GW6		2	13	18	3	8	-	450
12HE7								
(Key at 0)	Di	1	13	16	3	4	-	2
	*CAUTION: Lever 5 must be thrown to open position before inserting tube							
(Key at 8)	Pen*	7	13	16	2	3	-	46
12HG7		6	9	20	2	1	39	278
12HL5		4	13	21	2	3	12	●1279
	●Ignore glow on 1							
12HL7		6	9	20	2	1	3459	●39278
	●Ignore glow on 3							
12JB6		4	13	18	3	3	1267	670
	Levers 1-2 must be thrown to open position							
12JN6								
(Key at 5)		6	13	21	2	7	29	380
12JN8	Tri	4	13	22	2	3	-	12
"	Pen	4	13	23	2	8	-	679
12JQ6	Pen	4	13	22	2	9	2378	12378
"	Di	4	13	21	3	-	-	6
12JS6								
(Key at 3)		4	13	20	2	5	16	●1680
	●Ignore glow on 1. Grid cap goes to top of tube							
12JT6		4	13	23	2	3	17	279
	Lever 1 must be thrown to open position							
12JZ8								
(Key at 8)	Pen	9	13	23	2	4	12	●1230
	●Ignore glow on 1							
(Key at 5)	Tri	6	13	26	2	3	-	27
12KA8	Tri	4	13	24	2	3	-	12
"	Pen	4	13	22	2	3	-	6789
12KL8	Pen	4	13	24	2	3	-	1267
"	Di	4	13	28	3	-	-	8
12MD8	Tri-1	4	13	22	2	7	-	36
"	Tri-2	4	13	22	2	-	-	28
"	Tri-3	4	13	22	2	-	-	19
12R-K19		4	13	17	3	0	29	●29
	●Ignore glow on 2							
12R-LL5	Tri-1	4	13	7	1	8	-	67
"	Tri-2	4	13	7	1	3	-	12
12T10								
(Key at 6)	Pen-1	5	13	19	3	2	-	134
(Key at 2)	Pen-2	1	13	19	3	4	-	5789

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
13CM5		2	13	23	2	38	1348	459
		Must show short on 1-3-4-8 Cathode short test - throw 3-8 together						
13CW4		4	13	17	3	3	-	12
13CW9		4	12	17	3	3	-	27
13FM7								
(Key at 7)	Tri-1	6	13	19	3	3	-	45
(Key at 2)	Tri-2	1	13	19	3	9	-	57
13FR7	Tri-1	4	13	7	1	8	23	67
"	Tri-2	4	13	20	2	9	-	●123
		●Ignore glow on 2						
13GB5*		4	13	22	2	38	123678	160
		*Must use magnoval adapter. Grid cap goes to top of tube Levers 2-7 must be thrown to open position						
13GF7	Tri-1	4	13	29	2	1	-	89
"	Tri-2	4	13	23	2	3	-	26
13J10								
(Key at 0)	Pen-1	0	13	26	4	8	1	4567
(Key at 6)	Pen-2	5	13	18	3	9	7	248
13JT8	Tri	4	13	23	2	1	-	23
"	Pen	4	13	21	2	6	-	789
13JZ8								
(Key at 0)	Pen	1	13	22	2	9	67	4678
(Key at 4)	Tri	3	13	28	2	2	-	16
13V10								
(Key at 0)	Pen-1	1	13	22	2	2	-	367
(Key at 8)	Pen-2	7	13	21	2	4	-	356
13Z10								
(Key at 0)	Pen-1	0	13	26	4	8	1	4567
(Key at 6)	Pen-2	5	13	18	3	9	7	248
14BF11								
(Key at 0)	Pen-1	1	13	28	2	2	-	3567
(Key at 8)	Pen-2	7	13	23	2	4	-	356
14BL11								
(Key at 0)	Tri-1	1	14	22	2	6	-	57
(Key at 5)	Tri-2	4	14	20	2	9	-	18
(Key at 7)	Pen	6	14	20	2	2	-	459
14BQ11								
(Key at 2)	Pen-2	3	14	19	2	8	-	457
(Key at 8)	Pen-1	9	14	19	2	6	-	345
14BR11								
(Key at 0)	Tri-1	1	14	23	2		-	68
(Key at 5)	Tri-2	4	14	23	2		-	12
	Pen	4	14	21	2		-	378
14GW8	Tri	4	14	26	2	2	-	19
"	Pen	4	14	23	2	7	-	368
14JG8	Di-1	4	14	18	3	3	-	2
"	Di-2	4	14	18	3	1	-	6
"	Tri	4	14	19	3	7	-	89

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
15A6		4	14	25	2	3	-	1267
15AF11								
(Key at 7)	Pen	3	14	19	3	3	-	459
(Key at 2)	Di-1	1	14	19	3	9	-	56
(Key at 0)	Di-2	1	14	19	3	5	-	68
15BD11								
(Key at 0)	Tri-1	1	14	24	2	5	-	68
	Tri-2	1	14	25	2	7	-	34
(Key at 5)	Pen	4	14	25	2	1	-	237
15CW5		4	14	21	2	3	-	●126978
	●Ignore glow on 1-6. May show short on 1-2-6-9-7-8							
15DQ8	Tri	4	14	23	2	3	-	12
"	Pen	4	14	24	2	7	-	689
15EW7	Tri-1	4	14	27	2	8	-	67
"	Tri-2	4	14	23	2	9	23	●123
	●Ignore glow on 2							
15FM7								
(Key at 7)	Tri-1	6	14	19	3	3	-	45
(Key at 2)	Tri-2	1	14	19	3	9	-	57
15FO7		5	14	19	2	0	-	12
15FY7								
(Key at 5)	Tri-1	4	14	8	1	1	-	23
(Key at 2)	Tri-2	1	14	22	2	9	-	57
15HA6		4	14	22	2	1	3689	●2687
	●Ignore glow on 6							
15HB6		4	14	22	2	1	3689	●236789
	●Ignore glow on 3-6							
15KY8	Tri	4	14	25	2	1	-	89
"	Pen	4	14	21	2	3	-	267
15LE8	Pen-1	4	14	22	2	3	-	189
"	Pen-2	4	14	22	2	-	-	689
16A5		4	15	21	2	3	-	279
16A8	Tri	4	15	24	2	8	-	19
"	Pen	4	15	21	2	2	-	367
16AK9								
(Key at 8)	Pen	1	10	22	2	2	79	34
	Tri-2	1	10	24	2	2	-	56
(Key at 0)	Tri-1	6	10	26	2	7	10	23
16AQ3		4	14	23	2	0	*	●9
	●Ignore glow on 9.*Cont Test - 1-2-3-6-7-8-9 Levers 2-3-7-8 must be thrown to open position							
16BQ11								
(Key at 2)	Pen-1	3	15	22	2	8	-	457
(Key at 8)	Pen-2	9	15	22	2	6	-	345
16BX11								
(Key at 0)	Tri-1	1	15	22	2	9	-	78
	Tri-2	1	15	22	2	4	-	56
(Key at 4)	Pen	5	15	23	2	1	-	267

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
16GK6		4	15	23	2	1	39	278
16GY5 (Key at 4)		3	14	22	2	18	1278	2790
		Must show short on 1-2-7-8 Cathode short test - throw levers 1-8 together						
16KA6 (Key at 4)		3	14	20	2	1	28	790
		Cap goes to top of tube						
16Y9	Pen-1	5	15	20	2	7	-	890
"	Pen-2	5	15	20	2	2	-	134
17A8	Tri	4	15	24	2	8	-	19
"	Pen	4	15	24	2	7	-	236
17AB10 (Key at 6)	Pen-1	5	15	20	2	9	-	248
(Key at 0)	Pen-2	0	15	24	4	8	-	4567
17AX3 (Key at 5)		6	15	24	2	0	29	●29
	●Ignore glow on 2							
17AY3		4	15	24	2	9	27	●27
	●Ignore glow on 2							
17B4		2	15	8	1	-	-	35
17B-B14*		4	15	20	2	38	123678	●12670
	●Ignore glow on 1-6. Cap goes to top of tube *Must use magnoval adapter							
17BD11 (Key at 0)	Tri-1	1	15	24	2	5	-	68
	Tri-2	1	15	25	2	7	-	34
(Key at 5)	Pen	4	15	25	2	1	-	237
17BE3 (Key at 2)		1	15	23	2	9	60	60
	Must show short on 5-0							
17BF11 (Key at 0)	Pen-1	1	15	28	2	2	-	3567
(Key at 8)	Pen-2	7	15	23	2	4	-	356
17BJ6		3	15	23	2	2	-	1567
17BR3		4	15	23	2	0	29	●29
	●Ignore glow on 2							
17BS3		4	15	16	3	9	27	●27
	●Ignore glow on 2							
17BW3 (Key at 0)		1	15	17	3		-	4
17BZ3 (Key at 0)		1	15	16	3	7	-	4
17C9	Tet-1	4	15	24	2	6	-	789
"	Tet-2	4	15	24	2	0	-	123
17CK3		4	15	20	2	9	27	●27
	●Ignore glow on 2							
17CL3		4	14	20	2	9	27	●27
	●Ignore glow on 2							

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
17CT3		4	15	23	2	9	26	●26
	●Ignore glow on 2							
17DM4		7	15	24	2	3	-	5
17DQ4		7	15	18	3	3	-	5
17DW4		4	15	4	1	9	27	2
	Lever 7 must be thrown to open position							
17EW8	Tri-1	5	15	22	2	8	-	67
"	Tri-2	5	15	22	2	3	-	12
17FY7								
(Key at 5)	Tri-1	4	15	8	1	1	-	23
(Key at 2)	Tri-2	1	15	22	2	9	-	57
17GE5								
(Key at 5)		6	15	23	2	29	2389	●7380
	●Ignore glow on 3							
17GJ5		4	15	24	2	3	1267	670
	Levers 1-2 must be thrown to open position							
17GT5		4	15	23	2	3	1267	●12679
	●Ignore glow on 1-2							
17GT6		1	15	28	2	2	-	3567
17GV5								
(Key at 4)		3	15	24	2	18	1278	2790
	Must show short on 1-2-7-8							
	Cathode short test - throw levers 1-8 together							
17GW6		2	15	18	3	8	-	450
17GY5								
(Key at 4)		3	15	22	2	18	1278	2790
	Cathode short test - throw levers 1-8 together							
17H-B25*		4	15	21	2	9	123678	●12670
	●Ignore glow on 1-6. Cap goes to top of tube							
	*Must use magnoval adapter							
17HC8	Tri	4	15	18	3	8	-	19
"	Pen	4	15	18	3	2	-	367
17HG8	Tri	4	15	23	2	3	13	67
"	Pen	4	15	22	2	1	-	289
17JB6		4	15	18	3	3	1267	670
	Levers 1-2 must be thrown to open position							
17JG6		4	15	17	3	3	17	279
	Lever 1 must be thrown to open position							
17JK8	Tri-1	4	15	18	3	8	-	67
"	Tri-2	4	15	18	3	3	-	12
17JM6								
(Key at 3)		2	15	21	2	5	-	680
	Grid cap goes to top of tube							
17JN6								
(Key at 5)		6	15	21	2	7	29	380
17JQ6	Pen	4	15	22	2	9	2378	12378
"	Di	4	15	21	3	-	-	6
17JR6		4	15	28	3	3	17	279
	Lever 1 must be thrown to open position							

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
17JS6 (Key at 3)		4	15	20	2	5	16	●1680
	●Ignore glow on 1. Grid cap goes to top of tube							
17JT6		4	15	23	2	3	17	279
	Lever 1 must be thrown to open position							
17JU6 (Key at 3)		4	15	20	2	5	16	●1680
	●Ignore glow on 1. Grid cap goes to top of tube							
17JZ8 (Key at 8)	Pen	9	15	23	2	4	12	●1230
	●Ignore glow on 1							
(Key at 5)	Tri	6	15	26	2	3	-	27
17KV6		4	15	20	2	3	17	279
	Lever 1 must be thrown to open position							
17LD8	Tri	4	15	25	2	1	-	89
"	Pen	4	15	21	2	3	-	267
17W6		2	15	24	2	8	-	345
17X10 (Key at 0)	Pen-1	0	15	20	4	8	1	4567
(Key at 6)	Pen-2	5	15	17	3	9	7	248
18AJ10 (Key at 2)	Pen-1	3	16	23	2	4	-	578
(Key at 6)	Pen-2	5	16	23	2	2	-	134
18DZ8	Tri	4	16	28	2	8	-	19
"	Pen	4	16	23	2	2	-	367
18GB5*		4	16	22	2	38	123678	160
	*Must use magnoval adapter							
	Levers 2-7 must be thrown to open position							
	Cap goes to top of tube							
18GD6		3	16	23	2	7	-	156
18GV5 (Key at 4)		3	16	24	2	18	1278	2790
	Grid cap goes to top of tube							
18GV8	Tri	4	16	24	2	3	-	12
"	Pen	4	16	22	2	8	-	679
18R-AL1	Tri-1	4	16	25	2	8	23	67
"	Tri-2	4	16	21	2	9	-	●123
	●Ignore glow on 2							
19AJ8	Hep	4	16	23	2	3	-	126
"	Tri	4	16	24	2	-	-	89
19AQ5		3	16	7	1	-	17	●1756
	●Ignore glow on 1							
19BR5	Tri	4	16	7	1	-	369	17
"	Eye	4	16	0	4	-	-	7369
	See instructions for eye test							
19BX6		4	16	21	2	13	13	2897
19BY7		4	16	23	2	13	13	2789
19CG3 (Key at 0)		1	16	16	3	7	-	4

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
19DE7	Tri-1	4	16	9	1	8	23	67
"	Tri-2	4	16	3	1	9	-	●123
	●Ignore glow on 2							
19EW7	Tri-1	4	16	27	2	8	-	67
"	Tri-2	4	16	23	2	9	23	●123
	●Ignore glow on 2							
19EZ8	Tri-1	4	16	27	2	-	-	89
"	Tri-2	4	16	27	2	-	-	67
"	Tri-3	4	16	23	2	1	-	23
19GQ7	Di-1	4	16	17	3	9	-	8
"	Di-2	4	16	17	3	7	-	6
"	Di-3	4	16	17	3	1	-	2
19HR6		3	16	21	2	7	-	156
19HS6		3	16	22	2	7	-	1256
19JC6		4	16	22	2	13	13	278
19JN8	Pen	4	16	23	2	8	-	679
"	Tri	4	16	22	2	3	-	12
19KF6*		4	16	20	2	3	17	●1679
	●Ignore glow on 1-6							
	*Must use magnoval adapter							
19KG8	Tri	2	16	22	2	3	-	12
"	Pen	2	16	22	2	8	-	679
19MR9		3	16	23	2	7	-	156
19Q9	Tri	4	16	21	2	7	-	89
"	Pen	4	16	20	2	0	-	123
19Y3		4	13	3	1	3	-	9
20AQ3		4	16	23	2	0	*	●9
	●Ignore glow on 9. *Cont Test - 1-2-3-6-7-8-9							
	Levers 2-3-7-8- must be thrown to open position							
21A6		4	17	21	2	3	16789	280
	Lever 7 must be thrown to open position							
21AK6		3	17	10	1	7	-	1256
21EX6		2	17	22	2	3	-	580
21GY5								
(Key at 4)		3	17	22	2	18	1278	2790
	Cathode short test - throw levers 1-8 together							
21HB3		2	22	18	2	-	-	2790
21HB5								
(Key at 0)		1	17	22	2	4	-	237
21HD5								
(Key at 0)		1	17	20	2	4	59	357
	Lever 9 must be thrown to open position							
21HJ5								
(Key at 0)		1	17	20	2	4	59	●3579
	●Ignore glow on 5-7							
21JV6								
(Key at 5)		6	17	21	2	7	29	●23890
	●Ignore glow on 2-3-8							

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
21JZ6 (Key at 3)		2	17	20	2	5	-	780
		Grid cap goes to top of tube						
21KA6 (Key at 4)		3	17	20	2	1	28	790
		Cap goes to top of tube						
21KQ6*		4	17	20	2	9	123678	●130
		●Ignore glow on 1. Cap goes to top of tube						
		*Must use magnoval adapter						
		Lever 6-8 must be thrown to open position						
21LG6 (Key at 4)		3	17	22	2	18	1278	790
21LR8	Tri	4	17	21	2	1	-	89
"	Pen	4	17	20	2	3	-	267
21LU8 (Key at 5)	Tri	6	17	21	2	3	-	27
(Key at 8)	Pen	9	17	21	2	4	12	●1230
		●Ignore glow on 1						
22AL3		4	17	24	3	0	*	9
		*Must show short on 1-2-3-6-7-8						
		Lever 1-2-3-6-7-8 must be thrown to open position						
22BW3 (Key at 0)		1	17	17	3	7	-	4
22JF6		4	17	20	2	3	1267	●12670
		●Ignore glow on 1-2-6. Grid cap goes to top of tube						
22JG6		4	17	17	3	3	17	279
		Lever 1 must be thrown to open position						
22JR6		4	17	28	3	3	17	279
		Lever 1 must be thrown to open position						
22JU6		4	17	20	2	3	1267	●12670
		●Ignore glow on 1-2-6. Grid cap goes to top of tube						
22KM6		4	17	21	2	3	1267	670
		Lever 1-2 must be thrown to open position						
		Cap goes to top of tube						
23JS6 (Key at 3)		4	17	20	2	5	16	●1680
		●Ignore glow on 1. Cap goes to top of tube						
23Z9 (Key at 5)	Tri-1	4	17	27	2	0	-	78
	Tri-2	4	17	24	2	-	-	23
(Key at 7)	Pen	6	17	21	2	-	-	230
24BF11 (Key at 0)	Pen-1	1	18	28	2	2	-	3567
(Key at 8)	Pen-2	7	18	23	2	4	-	356
24JE6		4	18	23	2	3	1267	●126780
		●Ignore glow on 1-2. Cap goes to top of tube						
24JZ8 (Key at 8)	Pen	9	18	23	2	4	12	●1230
		●Ignore glow on 1						
(Key at 5)	Tri	6	18	26	2	3	-	27

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
24LQ6		4	18	23	2	3	1267	●126780
		●Ignore glow on 1-2. Cap goes to top of tube						
24GA7								
(Key at 4)	Di	3	18	24	2	0	-	2
		Must show short on 6-7						
(Key at 0)	Pen	1	18	35	2	5	10	237
		Must show short on 2-3						
25CG3								
(Key at 0)		1	18	16	3	7	-	4
25CK3		4	18	20	2	9	27	●27
		●Ignore glow on 2						
25CM3		4	18	23	2	9	27	●27
		●Ignore glow on 2						
25DT5		4	18	28	2	7	36	●1369
		●Ignore glow on 3						
25JQ6	Pen	4	18	22	2	9	2378	12378
"	Di	4	18	21	3	-	-	6
26AQ8	Tri-1	4	18	22	2	8	-	67
"	Tri-2	4	18	22	2	3	-	12
26HU5		7	18	21	2	26	1256	130
26JG6		4	18	17	3	3	17	279
		Lever 1 must be thrown to open position						
27GB5*		4	18	22	2	38	123678	160
		*Must use magnoval adapter. Grid cap goes to top of tube						
		Levers 2-7 must be thrown to open position						
27KG6*		4	18	20	2	9	123678	680
		*Must use magnoval adapter. Grid cap goes to top of tube						
		Levers 1-3 must be thrown to open position						
28GB5*		4	18	22	2	38	123678	160
		*Must use magnoval adapter. Grid cap goes to top of tube						
		Levers 2-7 must be thrown to open position						
28HA6		4	19	22	2	1	3689	●2687
		●Ignore glow on 6						
28HD5								
(Key at 0)		1	19	20	2	4	59	357
		Lever 9 must be thrown to open position						
29GK6		4	19	23	2	1	39	278
29KQ6*		4	19	20	2	9	123678	●130
		●Ignore glow on 1. Cap goes to top of tube						
		*Must use magnoval adapter						
		Levers 6-8 must be thrown to open position						
30A5		3	19	21	2	1	25	●2567
		●Ignore glow on 2						
30AG11								
(Key at 8)	Tri-1	9	19	22	2	4	-	23
	Di-1	9	19	24	2	6	-	5
(Key at 2)	Tri-2	3	19	22	2	6	-	78
	Di-2	3	19	24	2	4	-	5

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
30CW5		4	19	21	2	3	-	●126789
		●Ignore glow on 1-6-7. May show short on 1-2-6-7-8-9						
30HD5 (Key at 0)		1	19	20	2	4	59	357
		Lever 9 must be thrown to open position						
30HJ5 (Key at 0)		1	19	20	2	4	59	●3579
		●Ignore glow on 5-7						
30KD6 (Key at 4)		3	19	20	2	6	1278	●2790
		●Ignore glow on 2. Cap goes to top of tube						
30KG6#		4	19	20	2	9	*	680
		*Cont Test - 1-2-3-6-7-8						
		Levers 1-2-3 must be thrown to open position						
		#Must use magnoval adapter						
		Cap goes to top of tube						
31AL10 (Key at 0)	Pen	6	14	22	2	7	19	458
	Tri-2	6	14	25	2	7	-	23
(Key at 6)	Tri-1	0	14	24	2	3	57	24
31JS6 (Key at 3)		4	19	20	2	5	16	●1680
		●Ignore glow on 1. Grid cap goes to top of tube						
32GA7 (Key at 4)	Di	3	19	24	2	0	-	2
		Must show short on 6-7						
(Key at 0)	Pen	1	19	35	2	5	10	237
		Must show short on 2-3						
32HQ7 (Key at 0)	Di	1	19	16	3	4	-	2
(Key at 2)		CAUTION: Throw lever #5 to open position before inserting tube						
	Pen	7	19	16	2	3	-	46
33GT7 (Key at 4)	Di	3	19	18	3	8	-	6
	Pen	3	19	24	2	0	-	129
33GY7 (Key at 3)	Di	2	19	18	3	7	-	5
(Key at 4)	Pen	3	19	23	2	0	-	12
33JV6 (Key at 5)		6	19	21	2		29	●23890
		●Ignore glow on 2-3-8						
34CD3 (Key at 0)		1	19	20	2	7	-	4
34CE3 (Key at 0)		1	19	20	2	7	-	4
34CM3		4	19	23	2	9	27	●27
		●Ignore glow on 2						
34R3		4	19	22	2	0	29	●29
		●Ignore glow on 2						

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
35C3		3	19	3	1	7	-	5
35DZ8	Tri	4	19	28	2	8	-	19
"	Pen	4	19	23	2	2	-	367
35LR6 (Key at 3)		4	19	22	2	5	16	●1680
		●Ignore glow on 1. Cap goes to top of tube						
36KD6 (Key at 4)		3	19	22	2	6	1278	●2790
		●Ignore glow on 2. Cap goes to top of tube						
38HE7 (Key at 0)	Di	1	19	16	3	4	-	2
		*CAUTION: Lever 5 must be thrown to open position before inserting tube						
(Key at 8)	Pen*	7	19	16	2	3	-	46
38HK7 (Key at 0)	Di	1	19	16	3	4	-	2
(Key at 8)		CAUTION: Lever 5 must be thrown to open position before inserting tube						
"	Pen	7	19	16	2	3	-	46
40KD6 (Key at 4)		3	19	20	2	6	1278	●2790
		●Ignore glow on 2. Cap goes to top of tube						
42KN6 (Key at 6)		5	19	20	2	8	49	●2490
		●Ignore glow on 4. Cap goes to top of tube						
50BM8	Tri	4	20	19	3	8	-	19
"	Pen	4	20	19	3	2	-	367
50HN5		4	20	22	2	3	12	●1279
		●Ignore glow on 1						
50JY6		2	20	20	2	8	14	450
		Lever 1 must be thrown to open position						
53HK7 (Key at 0)	Di	1	20	16	3	4	-	2
		CAUTION: Lever 5 must be thrown to open position before inserting tube						
(Key at 8)	Pen	7	20	16	2	3	-	46
58HE7 (Key at 0)	Di	1	20	16	3	4	-	2
		*CAUTION: Lever 5 must be thrown to open position before inserting tube						
(Key at 8)	Pen*	7	20	16	2	3	-	46
60HL5		4	20	21	2	3	12	●1279
		●Ignore glow on 1						
GL-866A 5763		1	4	31	2	-	-	0
		4	9	4	1	7	89	●13689
		●Ignore glow on 8						
5844	Tri-1	3	9	22	2	7	-	25
"	Tri-2	3	9	22	2	-	-	16

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
5896	Di-1	3	9	6	1	7	-	5
"	Di-2	3	9	6	1	2	-	1
5933		1	9	18	3	4	5	023
6012		2	9	29	2	1	-	358
6085	Tri-1	9	9	7	1	3	45	12
"	Tri-2	9	9	7	1	8	-	67
	Fil Cont - also throw 4-5 together							
6094		3	9	19	3	4	1245679	124
	Levers 6-7-9 must be thrown to open position							
6216A		4	9	23	2	38	1368	●1267
	●Ignore glow on 1							
6217		4	9	24	9	2	-	1267
6227		4	9	22	2	3	16	278
CK6397		5	2	7	1	-	17	368
6485		3	9	3	1	7	-	1256
CK6526		5	2	26	2	-	-	124
6686		4	9	24	2	3	16	2789
6939	Pen-1	9	9	22	2	2	-	368
"	Pen-2	9	9	22	2	-	-	167
7119	Tri-1	8	9	23	2	6	45	79
"	Tri-2	8	9	23	2	3	-	12
7320		4	9	5	1	3	12	●1279
	●Ignore glow on 1							
7360		4	9	24	2	1	-	2367
7408		2	9	8	1	8	-	345
7551		4	13	25	2	19	1389	●23867
	●Ignore glow on 3							
7558		4	9	25	2	19	1389	●23867
	●Ignore glow on 3							
7581		2	8	24	2	8	-	345
7586		4	9	17	3	3	5	12
7591		2	9	24	2	5	48	●4836
	●Ignore glow on 4							
7643	Tri	4	9	24	2	8	-	19
"	Pen	4	9	24	2	7	-	236
7687	Tri	4	9	25	2	8	-	19
"	Pen	4	9	23	2	7	-	236
7695		4	20	23	2	7	-	169
7728	Tri-1	9	9	4	1	8	45	67
"	Tri-2	9	9	4	1	3	-	12
7729	Tri-1	9	9	27	2	8	45	67
"	Tri-2	9	9	27	2	8	-	12
7730	Tri-1	9	9	8	1	8	45	67
"	Tri-2	9	9	8	1	3	-	12
7731	Tri	4	9	24	2	8	-	19
"	Pen	4	9	24	2	7	-	236
7733		6	9	22	2	1	3459	278
7788		4	9	19	2	13	1369	2679

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
7802	Tri-1	7	9	23	2	6	-	45
"	Tri-2	7	9	23	2	3	-	12
7868		4	9	23	2	3	1267	●12679
	●Ignore glow on 1-2							
7984 (Key at 7)		6	13	24	2	239	23915	450
	Must show short on 2-3-9-1-5							
	Throw lever 1 to open position							
8032		2	13	25	2	146	146	350
8056		4	9	16	3	3	-	12
8077		4	13	22	2	1	39	278
8102	Tri	4	13	22	2	2	-	13
"	Pen	4	13	22	2	8	-	679
8106		4	13	18	3	269	23689	1378
	Must show short on 2-3-6-8-9							
	Cathode short test-throw 2-6-9 together							
8113		3	9	22	2	27	27	156
	Must show short on 2-7							
	Cathode short test - throw 2-7 together							
8156 (Key at 4)		3	13	26	2	60	67890	129
	Lever 7-8 must be thrown to open position							
8203		4	9	17	3	3	5	12
8233*		4	9	20	2	79	2679	138
	*Must use magnoval adapter							
8278*		4	9	21	2	26	123678	●13789
	●Ignore glow on 1-3-7							
	*Must use magnoval adapter							
8298		2	9	22	2	146	146	350
8417		2	9	21	2	8	-	345
8441		4	9	18	3	3	-	12
8532		3	9	4	1	2	156	●1567
	●Ignore glow on 1-5							

FOREIGN

DAF-92	Pen	1	2	34	2	-	-	236
"	Di	1	2	29	3	-	-	4
DL-93		5	2	30	2	-	1267	●2634
	●Ignore glow on 2							
DL-95		5	2	29	2	-	1267	●2634
	●Ignore glow on 2							
DL-98		26	2	29	2	-	45	137
DY-87		258	2	21	4	-	1469	0
E-55L*		4	9	20	2	79	2679	138
	*Must use magnoval adapter							
E-80CC	Tri-1	9	9	7	1	3	45	12
"	Tri-2	9	9	7	1	8	-	67
	Fil Cont - also throw 4-5 together							

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
E-80L		4	9	22	2	3	16	278
E-81L		4	9	24	2	3	16	2789
E-84L		4	9	5	1	3	12	●1279
	●Ignore glow on 1							
E-182CC	Tri-1	8	9	23	2	6	45	79
"	Tri-2	8	9	23	2	3	-	12
EAM-86	Tri	4	9	21	2	9	-	18
"	Eye	4	9	0	4	3	-	67
	See instructions for eye test							
EB-91	Di-1	3	9	18	3	5	-	2
"	Di-2	3	9	18	3	1	-	7
EBC-81	Tri	4	9	7	1	3	79	12
"	Di-1	4	9	29	3	-	-	8
"	Di-2	4	9	26	3	-	-	6
EC-80		1	9	3	1	5	2378	●2378
	●Ignore glow on 2-7							
EC-81		4	9	23	2	3	-	18
EC-86		4	9	20	2	37	*	●12689
	●Ignore glow on 1-2-6-8							
	*Must show short on 1-2-3-6-7-8-9							
EC-88		4	9	21	2	2	13679	18
	Levers 3-6-7-9 must be thrown to open position							
EC-91		3	9	21	2	25	1256	●167
	●Ignore glow on 1							
EC-95		3	9	22	2	17	17	256
EC-97		3	9	22	2	17	17	25
EC-900		3	9	21	2	27	27	15
ECC-34	Tri-1	7	8	7	1	6	-	45
"	Tri-2	7	8	7	1	3	-	12
ECC-91	Tri-1	3	9	24	2	7	-	25
"	Tri-2	3	9	24	2	-	-	16
ECC-189	Tri-1	4	9	22	2	8	-	67
"	Tri-2	4	9	22	2	3	-	12
ECC-801S	Tri-1	9	9	4	1	8	45	67
"	Tri-2	9	9	4	1	3	-	12
ECC-802S	Tri-1	9	9	8	1	3	45	12
"	Tri-2	9	9	8	1	8	-	67
ECC-808	Tri-1	4	9	24	2	8	-	79
"	Tri-2	4	9	24	2	2	-	13
ECF-83	Tri	4	9	19	3	1	-	23
"	Pen	4	9	19	3	3	-	679
ECF-200	Tri	5	9	22	2	1	-	90
"	Pen	5	9	20	2	2	-	378
ECF-201	Tri	5	9	22	2	1	-	90
"	Pen	5	9	20	2	2	-	378
ECF-202	Tri	5	9	23	2	1	-	90
"	Pen	5	9	22	2	2	-	378
ECF-801	Tri	4	9	21	2	13	13	89
"	Pen	4	9	20	2	-	-	267

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
ECF-802	Tri	4	9	22	2	8	-	19
"	Pen	4	9	21	2	7	-	236
ECF-805	Tri	4	9	21	2	68	68	19
"	Pen	4	9	19	2	-	-	237
Cathode short test - throw 6-8 together								
ECH-35	Tri	2	9	26	2	8	-	56
"	Hex	2	9	26	2	-	-	3459
ECH-84	Tri	4	9	23	2	3	-	89
"	Hep	4	9	21	2	-	-	267
ECH-200	Tri	5	9	20	2	9	-	80
"	Hep	5	9	21	2	1	-	347
ECL-85	Tri	4	9	24	2	3	-	12
"	Pen	4	9	22	2	8	-	679
EF-22		1	9	4	1	7	-	2346
EF-39		2	9	5	1	8	-	3450
EF-92		3	9	6	1	2	-	1567
EF-95		3	9	25	2	27	27	156
EF-806S		4	9	26	2	3	27	169
EFL-200	Pen-1	5	9	20	2	7	-	890
"	Pen-2	5	9	20	2	2	-	134
EH-900S	Tot	3	9	5	1	2	-	1567
"	Tri	3	9	5	1	-	-	16
EK-11		6	13	24	3	2	19	10
EL-13		2	9	23	2	8	-	567
EL-32		2	9	6	1	8	-	340
EL-33		2	9	24	2	8	-	345
EL-36		2	9	23	2	38	1348	459
May show short on 1-3-4-8								
EL-81		4	9	20	2	3	16789	●2780
●Ignore glow on 7								
EL-82		2	9	24	2	3	-	279
EL-83		4	9	22	2	3	-	127
EL-85		4	9	6	1	3	1268	●126879
●Ignore glow on 1-6								
EL-91		3	9	25	2	2	-	157
EL-500*		4	9	22	2	38	123678	160
*Must use magnoval adapter. Grid cap goes to top of tube Lever 2-7 must be thrown to open position								
EL-503*		4	9	21	2	26	123678	●13789
●Ignore glow on 1-3-7								
*Must use magnoval adapter								
EL-504*		4	9	22	2	38	123678	160
Levers 2-7 must be thrown to open position Grid cap goes to top of tube								
*Must use magnoval adapter								
EL-505*		4	9	20	2	9	123678	680
Levers 1-3 must be thrown to open position Cap goes to top of tube								
*Must use magnoval adapter								

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
EL-802		4	9	20	2	1	3689	●2687
	●Ignore glow on 6							
EL-821		4	9	3	1	3	-	278
ELL-80	Pen-1	4	9	22	2	7	-	123
"	Pen-2	4	9	22	2	-	-	689
EM-34		2	9	0	4	8	-	365
	See instructions for eye test							
EM-87	Tri	4	9	29	2	3	268	19
"	Eye	4	9	0	4	-	-	●67
	●Levers 2-8 must be thrown to open position							
	See instructions for eye test							
EQ-80		4	9	23	2	38	38	167
EY-80		4	9	24	2	3	-	9
EY-81		4	9	22	2	0	*	29
	*May show short on all pins							
EY-82		4	9	24	2	3	-	9
EY-86		258	9	21	4	-	1469	0
EY-87		258	9	21	4	-	1469	0
EY-500*		4	9	20	2	0	278	●278
	●Ignore glow on 2-7. Cap goes to top of tube							
	*Must use magnoval adapter							
GY-501*		248	4	20	4	-	14589	0
	*Must use magnoval adapter. Cap goes to top of tube							
HBC-91	Tri	3	13	27	2	2	-	17
"	Di-1	3	13	27	3	-	-	5
"	Di-2	3	13	27	3	-	-	6
HCC-85	Tri-1	5	15	22	2	8	-	67
"	Tri-2	5	15	22	2	3	-	12
HCH-81	Tri	4	13	25	2	3	-	89
"	Pen	4	13	23	2	3	-	126
HL-94		3	19	21	2	1	25	●2567
	●Ignore glow on 2							
LC-900		3	4	21	2	27	27	15
	Lever 2 must be thrown to open position							
LCF-80	Tri	4	9	23	2	8	-	19
"	Pen	4	9	22	2	7	-	236
LCF-200	Tri	5	9	22	2	1	-	90
"	Pen	5	9	20	2	2	-	378
LCF-201	Tri	5	9	22	2	1	-	90
"	Pen	5	9	20	2	2	-	378
LCF-801	Tri	4	9	21	2	13	13	89
"	Pen	4	9	20	2	-	-	267
LCF-802	Tri	4	9	22	2	3	-	19
"	Pen	4	9	21	2	7	-	236
LCH-200	Tri	5	8	20	2	9	-	80
"	Hep	5	8	21	2	1	-	347
LCL-80	Tri	4	6	25	2	3	-	12
"	Pen	4	6	22	2	-	-	689

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
LCL-84	Tri	4	12	23	2	3	-	12
"	Pen	4	12	23	2	7	-	689
LCL-85	Tri	4	12	24	2	3	-	12
"	Pen	4	12	22	2	8	-	679
LF-183		4	6	22	2	13	13	2789
LF-184		4	6	21	2	13	13	2789
LFL-200	Pen-1	5	12	20	2	7	-	890
"	Pen-2	5	12	20	2	2	-	134
LL-86		4	12	21	2	3	*	●126789
	●Ignore glow on 1-6-7							
	*May show short on 1-2-6-7-8-9							
LL-505*		4	18	20	2	9	123678	680
	Lever 1-3 must be thrown to open position							
	*Must use magnoval adapter							
LL-521*		4	17	20	2	9	123678	●130
	●Ignore glow on 1. Cap goes to top of tube							
	*Must use magnoval adapter							
	Lever 6-8 must be thrown to open position							
LY-81		4	12	22	2	0	*	29
	*May show short on all pins							
LY-88		4	17	24	3	0	*	9
	*Must show short on 1-2-3-6-7-8							
	Lever 1-2-3-6-7-8 must be thrown to open position							
M-8096		4	9	4	1	7	89	●13689
	●Ignore glow on 8							
PC-88		4	6	20	2	2	13679	●136798
	●Ignore glow on 1-3-6-7							
PC-95		3	5	20	2	17	17	25
PC-900		3	6	21	2	27	27	15
	Lever 2 must be thrown to open position							
PCC-88	Tri-1	4	9	23	2	8	-	67
"	Tri-2	4	9	23	2	3	-	12
PCC-189	Tri-1	4	10	22	2	8	-	67
"	Tri-2	4	10	22	2	3	-	12
PCF-86	Tri	4	10	23	2	3	13	67
"	Pen	4	10	22	2	1	-	289
PCF-200	Tri	5	10	22	2	1	-	90
"	Pen	5	10	20	2	2	-	378
PCF-201	Tri	5	10	22	2	1	-	90
"	Pen	5	10	20	2	2	-	378
PCF-801	Tri	4	11	21	2	13	13	89
"	Pen	4	11	20	2	-	-	267
PCF-802	Tri	4	12	22	2	8	-	19
"	Pen	4	12	21	2	7	-	236
PCF-805	Tri	4	10	21	2	68	68	19
"	Pen	4	10	19	2	-	-	237
	Cathode short test - throw 6-8 together							
PCH-200	Tri	5	11	20	2	9	-	80
"	Hep	5	11	21	2	1	-	347

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
PCL-81	Tri	4	13	26	2	38	38	17
"	Pen	4	13	23	2	-	-	269
PCL-82	Tri	4	15	24	2	8	-	19
"	Pen	4	15	21	2	2	-	367
PCL-84	Tri	4	14	23	2	3	-	12
"	Pen	4	14	24	2	7	-	689
PCL-85	Tri	4	16	24	2	3	-	12
"	Pen	4	16	22	2	8	-	679
PCL-86	Tri	4	14	26	2	2	-	19
"	Pen	4	14	23	2	7	-	368
PD-500*		4	10	32	2	1	123679	80
	*Must use magnoval adapter. Cap goes to top of tube							
PF-86		4	7	23	2	3	27	169
PFL-200	Pen-1	5	15	20	2	7	-	890
"	Pen-2	5	15	20	2	2	-	134
PL-81		4	17	21	2	3	16789	280
	Lever 7 must be thrown to open position							
PL-82		4	5	21	2	3	-	279
PL-83		4	14	25	2	3	-	1267
PL-84		4	14	18	3	3	126789	279
	Levers 1-6-8 must be thrown to open position							
PL-500*		4	18	22	2	38	123678	160
	*Must use magnoval adapter. Grid cap goes to top of tube							
	Levers 2-7 must be thrown to open position							
PL-521*		4	19	20	2	9	123678	●130
	●Ignore glow on 1. Cap goes to top of tube							
	*Must use magnoval adapter							
	Levers 6-8 must be thrown to open position							
PM-84	Tri	4	6	34	2	3	268	19
"	Eye*	4	6	0	4	-	-	67
	*Levers 2-8 must be thrown to open position							
	See instructions for eye test							
UAA-91	Di-1	3	16	18	3	1	-	7
"	Di-2	3	16	18	3	5	-	2
UCF-12	Tri	2	17	19	3	8	-	45
"	Pen	2	17	19	3	-	-	167
UCL-82	Tri	4	20	19	3	8	-	19
"	Pen	4	20	19	3	2	-	367
UL-84		4	19	23	2	3	12689	●126897
	●Ignore glow on 1-6-8							
XC-95		3	4	22	2	17	17	256
XC-900		3	3	21	2	27	27	15
	Lever 2 must be thrown to open position							
XCC-189	Tri-1	4	6	22	2	8	-	67
"	Tri-2	4	6	22	2	3	-	12
XCF-80	Tri	4	6	23	2	8	-	19
"	Pen	4	6	22	2	7	-	236
XCF-801	Tri	4	6	21	2	13	13	89
"	Pen	4	6	20	2	-	-	267

TUBE	SECT	A	B	C	D	CATH	CONT	TEST
XCL-82	Tri	4	10	25	2	8	-	19
"	Pen	4	10	23	2	2	-	367
XCL-84	Tri	4	11	23	2	3	-	12
"	Pen	4	11	23	2	7	-	689
XCL-85	Tri	4	12	24	2	3	-	12
"	Pen	4	12	22	2	8	-	679
XF-86		4	4	23	2	3	27	169
XL-136		2	13	23	2	38	1348	459
	Must show short on 1-3-4-8							
	Cathode short test - throw 3-8 together							
XL-84		4	11	5	1	3	12	●1279
	●Ignore glow on 1							
XL-86		4	11	21	2	3	*	●126789
	●Ignore glow on 1-6-7							
	*May show short on 1-2-6-7-8-9							
XL-500*		4	13	22	2	38	123678	160
	*Must use magnoval adapter. Grid cap goes to top of tube							
	Levers 2-7 must be thrown to open position							
YC-97		3	5	22	2	17	17	25
YC-98		246	7	0	0	-	-	19
YL-1370		2	9	22	2	146	146	350